



**Wheel Systems
Owner's Manual**



Congratulations!

Congratulations and thank you for purchasing the world's finest high performance wheel system.

Because a variety of Rolf Prima wheel system models are available, this manual may contain information that does not apply to your wheelset. Some illustrations may show details which vary from your wheelset. If you have any questions after reading this manual, please consult www.rolfprima.com or your Rolf Prima dealer.

Please inspect and save all packaging materials that came with your wheels. If there is any damage to the wheels or the packaging, it is important to identify it immediately.

The structural condition of your wheels and correct installation are crucial to your safety. It is important that you read this manual thoroughly before riding to ensure that your wheel system functions properly and safely. This manual explains the recommended care, inspection, and maintenance of your Rolf Prima wheel system.

If you sell or loan your Rolf Prima wheel system, please provide the new rider with this manual.

Installation and maintenance instructions are included in this manual. Even if your wheelset was installed by a bike shop, you should read this manual thoroughly. A detailed service manual is available at www.rolfprima.com

Please register your wheelset at www.rolfprima.com. To register you will need the serial numbers of your wheels. These are located under the rim strip by the valve hole for clincher wheels and on the side of the rim for tubular and mountain bike models.

Some maintenance and repair should only be performed by your Rolf Prima dealer. Any such service will be indicated in this manual. If you have a question or issue your dealer cannot answer, please contact us at info@rolfprima.com.

Rolf Prima

info@rolfprima.com
888.308.7700
www.rolfprima.com

Inspection – Before Every Ride

Before every ride be sure to inspect every item on this list to ensure your Rolf Prima wheels are in top condition and are properly installed on your bicycle. If you find that your wheel system requires service or further inspection, see www.rolfprima.com for our Factory Service Program or contact your Rolf Prima dealer.

- ▾ Check that the wheels run true
- ▾ Check that the rims are clean

Dirty or greasy rims greatly reduce braking effectiveness and can present a significant safety risk.

- ▾ Check that the brake pads are clean and properly adjusted
- ▾ Check that the tires are properly inflated

For Rolf Prima wheels with aluminum clincher rims, inflate tires to the inflation pressure indicated on the tire sidewall (See Tire Pressure section). Your rims can be damaged by riding with insufficient tire pressure. Inspect the tires for damage or excessive wear. If you have any questions about the condition of your tires, have them inspected by your local bike shop.

For Rolf Prima Carbon tubular road wheels, inflate tires to a minimum of 110 psi (7.6 bar). Do not exceed the maximum pressure indicated on the tire sidewall. PLEASE NOTE: Carbon fiber rims can be damaged if ridden with insufficient tire pressure. Appropriate pressure may be dependent on road conditions, rider weight and tire size. Impact damage to rims is not covered under your Rolf Prima warranty. Many tubular tires tend to lose significant amounts of pressure over a short period of time. It is very important that tubular tires are checked for proper tire pressure before each ride.

- ▾ Check that the quick release mechanisms are properly closed

Your wheels are equipped with quick release wheel retention mechanisms. The quick release allows the wheel to be removed and installed without tools. For proper and safe operation, read these instructions carefully.

▾ WARNING!





Failure to have wheel quick release retention mechanisms properly adjusted and closed may cause loss of control resulting in personal injury or death. If you have any questions about the operation of this system, consult your dealer.



Operation of Quick Release Mechanisms

IMPORTANT: IF YOU DO NOT UNDERSTAND ANY PORTION OF THESE INSTRUCTIONS, HAVE YOUR ROLF PRIMA DEALER SHOW YOU PROPER INSTALLATION OR CONTACT ROLF PRIMA DIRECTLY.

1. Check both wheels before every ride.
2. Move the quick release lever to the OPEN position and set the wheel so it seats firmly in the frame or fork tips (figure 1).
3. With the lever about halfway between the OPEN and CLOSED position (fig. 2), tighten the quick release adjusting nut on the opposite end of the quick release axle until finger tight, ensuring that the nut is threaded on a minimum of 5 turns.
4. Place the quick release lever in the palm of your hand and move the lever fully into the CLOSED position. (figure 3 for front wheels, figure 4 for rear wheels). At the halfway closed position you should feel resistance to this motion.

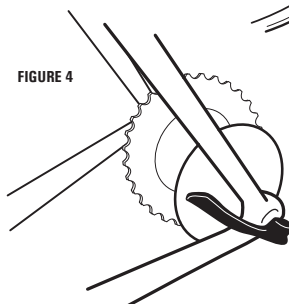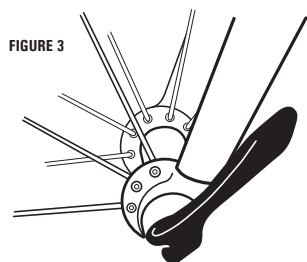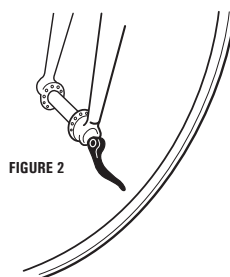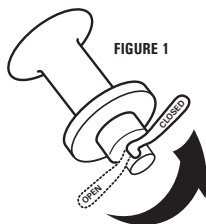

5. If the quick release lever can be moved to the CLOSED position with little or no resistance, clamping strength is insufficient. Return the lever to the OPEN position and tighten the nut further. Close the lever, testing again for resistance. When the quick release mechanism is properly tightened and clamped in the closed position, the clamping force will be adequate to cause metal into metal engagement (embossing) of the fork or frame tips. It should require effort to close the Quick Release, yet it should not be difficult.

DO NOT TIGHTEN THE QUICK RELEASE MECHANISM BY USING THE QUICK RELEASE LEVER LIKE A WING NUT (FIG 5). OVER-TIGHTENING THE QUICK RELEASE MECHANISM MAY CAUSE DAMAGE TO THE QUICK RELEASE ASSEMBLY.




6. Perform these two tests to ensure that the quick release mechanisms are properly closed:

A. Lift the front of the bicycle and give the top of the tire a sharp downward blow with a closed fist. The wheel should not come out of the fork, be loose, or move from side to side. Repeat this test to the rear wheel. If uncertain, repeat the tightening process, as shown in steps 2-6, above.

B. With the quick release lever properly adjusted and closed, it will not be possible to rotate the quick release lever in a circular motion parallel to the wheel as pictured in figure 5.

FIGURE 5

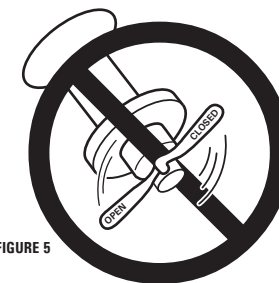

Inspection – Weekly

- ▾ Check that there are no loose, damaged, or broken spokes
- ▾ Check that there are no cracks in front or rear rims

Aluminum rims are highly stressed components and have a finite fatigue life. As a rim nears the end of its fatigue life, cracks will develop. If cracks are found, do not ride the wheel. Take the wheel to your Rolf Prima dealer for service.

Carbon fiber rims may become damaged as a result of an accident, impact, or improper handling. Damage to carbon fiber components may be contained internally, and the rims may appear outwardly normal and undamaged at a glance. It is very important to thoroughly inspect all the parts on your bicycle after an accident – but it is especially important that you thoroughly inspect your carbon fiber rims for signs of damage. Look closely for cracks, deep scratches or gouges, delamination, loose fibers and other surface flaws. If you suspect the rim has been damaged, take your wheel to your dealer for further inspection.

Inspection – Monthly

- ▾ Check that there is no excessive looseness in hub bearings in both wheels
- ▾ Check both rims for wear

Bicycle rims will wear from the friction of braking and may eventually require replacement. Inspect the rim sidewalls and braking surfaces for heavy grooving or cracks.

Inspect your wheels when they are new and note if they have a series of shallow dimples etched into the brake surface. These are rim wear indicators. When these wear indicators are worn away the rim must be replaced.

▾ WARNING!

Inspect your wheels regularly. Make sure your Quick Release mechanisms are closed properly before each ride. Worn or damaged components, or improperly closed Quick Release mechanisms can cause an accident which may result in serious injury or death.



Installation and Recommendations

Before attempting any installation of components onto this wheelset, make sure the parts are compatible. Tires, valves, gear clusters, brakes and the frame and fork spacing must be correct. If you are unsure of the compatibility of any part, consult your dealer.

Brakes and Brake Pads

Proper brake pad adjustment

Brake pads should be adjusted so that they sit 1mm to 2mm away from the rim when the brakes are released. Toe-in brake pads 1mm. When the forward most tip of the pad first contacts the rim, there should be 1mm space at the back of the pad. Brakes should be properly centered over the rim so that each pad is the same distance from the rim when the brakes are released.

Brake pads should be aligned properly with the braking surface of the rim and should contact only the machined brake surface of your rim. Ensure there is adequate clearance between the top of the brake pad and the tire. Some brake pads may be too tall to fit your wheels properly. Improper or misaligned pads can cause premature rim wear or a sudden tire blowout.

Some Rolf Prima wheels have a wider rim than your current wheels. You may need to adjust the location of the conical washer between the brake pad holder and brake arm on the brake calipers.

Rims with aluminum braking surface: Brake pad selection and maintenance

For best braking performance use Rolf Prima red brake pads. Your Rolf Prima alloy wheels do not require special brake pads. Brake pads from many manufacturers are available in different compounds. It is important that medium compound pads designed for aluminum rims are used with your Rolf Prima wheels. Soft pads may cause brake stutter or be too "grabby." Hard compound pads are abrasive and may decrease the life of your wheels.

Inspect and clean your brake pads frequently. Road grit, small rocks and other items can become embedded in brake pads and cause accelerated wear of the braking surface. If you hear scratching noises when you brake, check and clean your pads.

Brake pads are not generally marked to identify the compound. If you have any question about the compound of your brake pads or about your brake pads at all, replace them with new pads.

Rims with carbon braking surface: Brake pad selection and maintenance

Rolf Prima Carbon wheels with carbon brakewalls feature a specially prepared braking surface, but can still be susceptible to heat build-up issues and abrasion. These carbon wheels come with Rolf Prima brake pads. We strongly recommend the use of the supplied Rolf Prima pads as the use of other pads may void the warranty.

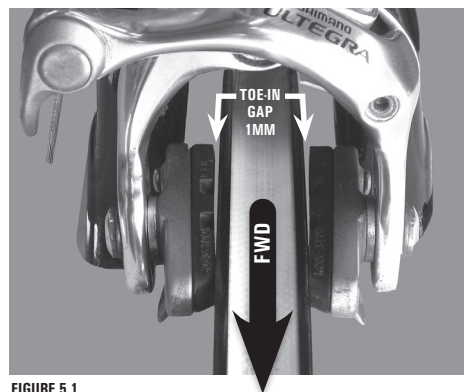


FIGURE 5.1



WHEEL MODEL	BRAKE PAD COLOR
58RSC & ALL ALLOY MODELS	RED
TdF4SL, TdF6, TdF6SL, TdF8	RED
ARES4, ARES6 (ES VERSIONS ALSO)	YELLOW
ARES8	BLUE

Wheels with carbon fiber rims will exhibit different braking characteristics than wheels with aluminum rims. It is important that you test the suitability of any brake pad before racing or braking hard.

- > **Increased pad consumption.** Carbon rims can have a higher rate of brake pad wear, especially in wet conditions. Check your brake pad thickness before each ride.
- > **Different wet braking performance.** Carbon rims are different from aluminum rims in wet braking conditions. We recommend you ride the wheels in wet conditions prior to racing.
- > **Heat build up from prolonged braking.** Carbon rims do not dissipate the heat generated by braking at the same rate as aluminum rims. Managing rim temperatures through proper brake application is important. If rims are allowed to overheat, damage to the rim and/or tire can result. During long descents, it is very important that brakes are applied with greater force, more frequently, and for the shortest possible time period. This technique of frequent, hard braking significantly reduces rim temperatures.

Brakes and Tandem Wheels

Rolf Prima tandem wheels are compatible with industry standard tandem brakes. Both front and rear alloy tandem wheels are compatible with rim or disc brakes. Carbon fiber tandem wheels are for disc brake only.

Follow the brake manufacturer's instructions for installation and adjustment. If your tandem is equipped with drag brakes, follow the bicycle maker's instructions on the proper use of the brakes. Consult your tandem bicycle owner's manual or your tandem bicycle dealer for assistance.

MTB disc brakes

Rolf Prima mountain bike wheels are compatible with 6 bolt industry standard disc brake rotors. They are not rim brake compatible. Refer to your bike and/or brake owner's manual for proper installation and setup.

Road Disc wheels

Rolf Prima road disc wheels are compatible with 6-bolt industry standard disc brake rotors.

Cyclocross wheels

All cyclocross wheels are compatible with industry standard road or cyclocross brakes. The VCX-disc is compatible with either rim or disc brakes.

Cassette Compatibility

- Most Rolf Prima wheels are Shimano/SRAM 11-speed compatible. To use a 9 or 10 speed cassette with 11-speed compatible wheels, use the 1.8mm Rolf Prima supplied spacer behind the cassette in addition to any spacer included with your cassette. For 11-speed cassettes, do not use the Rolf Prima supplied spacer.

Rolf Prima Campagnolo wheels are 9/10/11 speed compatible. Contact your Rolf Prima dealer for options to convert between Shimano and Campagnolo (road), or Shimano and SRAM XD (MTB).

Tires

Important information about rim strips

Each Rolf Prima wheel (with clincher rims) comes with a rim strip installed. Before installing tires, make sure rim strip is in place which completely covers the rim tire well so that all spoke holes are completely covered. The tire well is the inner wall of the rim, visible when the tire, tube, and rim strip are removed. If the spoke holes are not completely covered, a sudden blowout could occur.

Tire selection and installation – Clincher Tires

Follow normal clincher tire installation procedures. If you are not familiar with tire installation, consult your bicycle owner's manual or see your dealer. Do not use metal tire levers to install or remove tires. Metal tire levers can damage the rim.

> Road

Rolf Prima clincher road wheels can be used with tire widths ranging from 20mm to 28mm. Follow air pressure recommendations on the sidewall of the tire. Do not overinflate tires. Overinflating can cause sudden blowout or damage to your wheels.

> Cyclocross

Rolf Prima clincher cyclocross wheels can be used with tires from 20mm to 32mm. Follow air pressure recommendations on the sidewall of the tire.

> Mountain Bike

Tubeless: Rolf Prima alloy mountain bike wheels are tubeless compatible with Stan's NoTubes™ BST Technology and can also be used with standard tire/tube systems. These wheels come with rim tape and tubeless valve stems. Rolf Prima Ralos CXC can be run tubeless with Stan's NoTubes™ all mountain 29er rim strip. Refer to the detailed instructions and videos at www.notubes.com for tubeless tire application recommendations and mounting instructions. Do not inflate tubeless tires over 40psi.

Tube: For use with traditional mountain bike tube and tire follow normal tire mounting procedures. Inspect rim tape before mounting tire to be sure that the nipple access holes are completely covered. Follow the pressure recommendations on the sidewall of the tire.

Tire pressure

Alloy clincher rims. Do not over-inflate your tires. Never exceed the maximum pressure marked on the tire. Over inflated tires place greater stress on the rim and may shorten the life of your wheels. Over inflated tires can also cause a sudden blowout, or cause damage to your wheels if a sudden blowout should occur.

Carbon clincher rims. Under inflation of tires may allow rims to make contact with the road surface resulting in damage to the rim. Do not use tires that measure less than 22mm in width. Tires that are less than 22mm in width may not adequately protect the rim from impacts due to road hazards. Do not use latex inner tubes.

Carbon tubular rims. Appropriate minimum tire pressure may be dependent upon road conditions, rider weight and tire size. As a general recommendation we recommend a minimum of 110psi to protect your carbon rim from impact damage. Never exceed the maximum tire pressure marked on the tire.

Tire installation: Tubular tires

Tubular tire installation requires specific experience or training. Correct tire installation is critical to your safety. If you do not know how to install tubular tires, have them installed professionally by your dealer. Have your dealer teach you correct tire installation. It is not difficult, but it is important that it is done correctly. Below are important notes regarding safe installation.

- > Only use tire cement designed specifically for tubular tires and follow the tire cement maker's instructions carefully. We do not recommend 3M Fast Tack.
- > Thoroughly clean the tire mounting surface of the rim before adding cement. There should be no dirt, oil or grease on the mounting surface. Dirty surfaces will not adhere properly. For alloy tubulars, lightly sand the rim tire bed. Old cement can be safely removed from the rim using acetone, Goof Off or isopropyl alcohol.
- > We do not recommend using tape such as TUFO. While tapes can work well, some are overly adhesive and can damage the rim upon removal.
- > After curing, inflate tires and test the bond by attempting to pull the tire off the rim. For more detailed instructions, see the tire or cement manufacturer's website.
- > Do not use any tools to install or remove a tubular tire from a carbon rim as they may damage the rim.

Valve Extenders

Rolf Prima carbon wheels come with a valve extender matched to the rim height. Be sure to install the valve extender before mounting the tire.

Installation procedure:

- > Remove valve core from tube or tire valve using supplied valve core tool.
- > Securely install valve core in female threaded end of valve extender.
- > Install valve extender into tube or tire valve using supplied valve extender tool. Overtightening can cause damage to the extender.

WARNING!

Incompatible or improperly installed components can damage your wheelset and/or cause an accident which may result in injury or death. Make sure your brakes are adjusted and functioning properly. Make sure your tires are installed and inflated properly. Test the braking performance of your new wheels in a safe manner.



Maintenance

⚠ WARNING!

Repair and service of Rolf Prima wheels requires special tools and knowledge, and should be undertaken only by a qualified service technician at a professional bicycle shop. Repairs, service, or adjustments performed by an inexperienced person could lead to wheel failure that may cause a crash resulting in injury.

Care and Cleaning

For general cleaning use soap and water. Do not use high pressure water to clean wheels. High pressure water can damage the hub bearings.

To remove tubular tire glue use acetone, Goof Off or a similar product. Take care to avoid getting solvent on the tire, tire/rim bondline or decals. Decals can be damaged by solvents. If this occurs, replacement decals can be purchased.

▾ Wheel Truing

Wheel truing involves special tools and knowledge and should be performed by a qualified professional wheel builder. Should you suspect your wheels need truing, we recommend that you take them to your Rolf Prima dealer for evaluation.

Before truing a wheel it is important to apply oil between the rim and the nipple, and between the spoke and the nipple. This can be accomplished by dripping oil into the hole where the spoke enters the rim and also through the hole in the tire well.

Hub Bearing Inspection and Adjustment

▾ Inspection

Over time the bearings of your wheels may become worn or may otherwise come out of adjustment. With the wheel installed on the bicycle, grab the wheel near the brake calipers and gently rock side to side. If you feel play (light clunking), the bearings may need to be adjusted or possibly replaced. See www.rolfprima.com for hub adjustment instructions.

For further inspection remove the wheel from your bicycle and remove the Quick Release assembly. With your forefinger and thumb holding the axle endcap on one side of the wheel, rotate the axle. It should rotate smoothly. If the bearing turns roughly or noisily, it is time to replace the bearing.

▾ Bearing replacement

Rolf Prima hub systems use a variety of bearings. To determine which bearing you require, refer to the bearing chart at www.rolfprima.com under service and tech info. Care must be taken during removal and installation of bearings to prevent damage to the hub shell and bearing. We recommend this procedure be performed by a qualified service technician. Rolf Prima will not be responsible for damage to the hub or bearing as a result of improper removal or installation.



▾ Freehub body lubrication and overhaul

Occasionally it may be necessary to service the Freehub Body mechanism. This requires special knowledge. Rolf Prima recommends this service be performed by a qualified service technician. For more information see the Rolf Prima Service Manual at www.rolfprima.com.

CRASH REBUILD AND FACTORY SERVICE PROGRAM

HERO PROGRAM: Crash damage program available for all Rolf Prima wheels. Hero Program must be purchased through your bike shop or at www.rolfprima.com/hero-program/ within 15 days of wheel set purchase. HERO provides protection for two years from date of purchase, limited to one repair per wheel: 1 front & 1 rear.

If you have damaged your wheels or they require service beyond your capabilities, call the dealer who sold you the wheels. If they are unable to help you, or you have further questions, see www.rolfprima.com and select Factory Service. We provide every customer direct access to service from our facility. Our goal is to turn around all repair work in 48 hours.

REGISTER YOUR WHEEL WARRANTY

www.rolfprima.com/warranty-registration/

NOTE: WHEN SENDING A WHEEL BACK FOR WARRANTY OR OTHER SERVICE WORK, PLEASE REMOVE ALL ACCESSORY ITEMS SUCH AS TIRE, TUBE, COMPUTER MAGNET, QUICK RELEASE AND CASSETTE. ROLF PRIMA WILL NOT BE RESPONSIBLE FOR LOST OR DAMAGED PARTS.

TROUBLESHOOTING. SEE OUR ONLINE SERVICE MANUAL AT WWW.ROLFPRIMA.COM.



ROLF PRIMA LIMITED WARRANTY

Rolf Prima ("RP") warrants, but only to an original purchaser who purchased the wheel from a licensed Rolf Prima dealer or distributor, that for a period of 24 months from original purchase that the new Rolf Prima wheel (the "Product") shall be free from material defects and defects in workmanship. If the purchaser discovers within this period material defects or defects in workmanship, the purchaser must promptly notify RP in writing, through an authorized dealer or distributor, accompanied by proof of purchase of the Product. In no event shall such notification be received or effective later than 25 months after the original purchase. In the event that a Product does contain a material defect in workmanship or materials and proper notification is provided as required by this limited warranty, then within a reasonable time after such notification, RP will correct any material defect in workmanship or materials, or provide replacement parts or products. If RP is unable to repair the Product to conform to this limited warranty, RP, within its sole discretion, will provide a replacement product. Labor charges for parts changeovers are not covered by the warranty. RP does not warrant (a) any product, components or parts not manufactured by RP, (b) defects caused by failure to provide proper and suitable Product installation and maintenance, (c) damage caused by use of the Product for purposes other than those for which it was designed, including use on unsuitable surfaces or at unsafe speeds, and including use of the Product without a helmet and other appropriate protective clothing or gear, (d) damage caused by misuse, abuse, neglect or natural elements, or normal wear and tear, and (e) damage resulting from or relating to use with unauthorized components, modifications or attachments. No employee, distributor, dealer or agent of RP is authorized to make any warranty in addition to or different from the foregoing limited warranty. **THE FOREGOING LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

LIMITATION OF LIABILITY

The sole remedy for breach of the limited warranty set forth herein is RP's repair or replacement, as described herein. In no event shall RP be liable for any other damages or liability, including special, incidental or consequential damages based upon breach of warranty, breach of contract, negligence, strict tort, or any other legal theory, and including damages arising from or related to any physical injury to person or property. Some states do not allow the exclusion of incidental or consequential damages, so the above exception may not apply to you. This warranty, and statutory law, gives the consumer specific legal rights, and those rights may vary from place to place.

