



HOW TO LOCATE ROLF PRIMA WHEEL SERIAL NUMBERS

Serial numbers for Rolf Prima wheels are located under the rim strip, near the valve hole.

Steps to locating the serial number:

1. Remove tire and tube.

2. Remove wheel rim strip.

Use a flathead screw driver to pull the rim strip up and away from the valve hole while placing the rim strip off to one side of the rim. That way the rim strip can be reused.



valve hole



3. The serial number is a multiple digit number imprinted on a white sticker near the valve hole.

Note: If you can't find the serial number, check that it is not affixed to the backside of the rim strip

Note: The sticker with a bar code is the rim date number and not the wheel serial number