 




# INSTRUCTIONS

## Music in hand

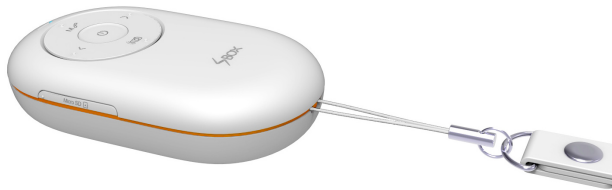

Mini Sport BT Sound Box

mode and FM mode switching between modes,

### Bluetooth Selfie

 
1. ON, with the phone connected to the Bluetooth;
2. Long press "Selfie" key, hear the "boom" after a long beep, enter the Bluetooth selfie mode
3. Open the phone's camera, short press "Selfie" key, you can arbitrarily take pictures;
4. To exit the selfie mode, the same, long press "Selfie" key, hear the "boom" after a long beep, then out of the selfie mode.

### Specifications

Size: 80mm\*4.3mm\*20mm  
 Weight: 50g  
 Bluetooth version: Bluetooth V3.0+EDR  
 Speaker: 33mm\*1, 3Ω/2W  
 Built-in Battery: Lithium battery 300mAh  
 Bluetooth music playing time: 160mins MAX VOL, Talking time: 300mins MAX VOL

### Schematic Diagram

- ① Indicator light
- ② Microphone
- ③ Vol +/-/Next
- ④ M/Phone
- ⑤ Vol -/ Back
- ⑥ Bluetooth Selfie
- ⑦ NO/OFF
- ⑧ TF Card
- ⑨ Lanyard
- ⑩ Micro charging port

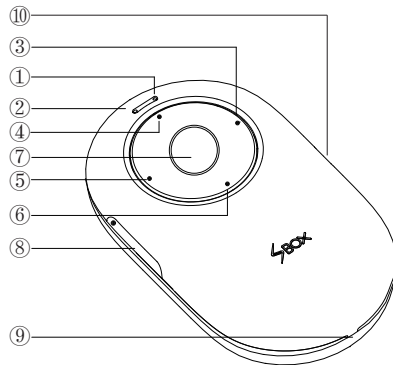

Function: Bluetooth, Selfie, TF, FM  
 Color: Black, White, Blue, Pink, Purple

### TF Mode/FM Mode

Mode	TF	FM	TF	FM
KEY	Short press		Long press	
"⏪"	play/pause	Mute	ON/OFF	
"M/phone"	/	Automatic channel search	switching the modes (Bluetooth/TF /FM)	
"<"	Back	Previous channel	Volume -	
">"	Next	Next channel	Volume +	

### Bluetooth Mode

1. Press "Power" key for 2 seconds to boot, after the prompt tone enters Bluetooth pairing mode, the blue indicator light flashes quickly. In any mode, press the "Power" key 2 seconds, shut down after the prompt tone;
2. Open the Bluetooth of your mobile phone, search and find the name of "DT-B650" device, click the link, after the success, open the phone player and start playing music;
3. Enter the Bluetooth to play music and the specific action is the same as TF card, read TF card mode specific methods of operation.
4. Bluetooth hands-free phone call function: when the phone call, it also issued a call to beep sound, this time to answer the call, short press "M / Phone" button once, you can call each other, and end a call, then short press "M / phone" button once, that is, hang up;
5. Pull out phone features, is the last call replay phone number, method of operation is the phone in standby mode, press the "M / telephone" key twice, you can put the phone broadcast went. Similarly, if you do not want to answer the call, also press the "M / telephone" key twice, is to reject the call;
6. In any mode state, long press "M / Phone" key to Bluetooth mode, TF playback

### Warranty

1. Since the date of purchase, enjoy 12 months free warranty, buying time purchase instruments shall prevail;
2. Warranty does not apply under the following circumstances:
  - Exceed the warranty period;
  - Can't provide the warranty card and the receipt;
  - Unauthorized repairs or fold folding machine installed;
  - The appearance of damage, dirt is not free within warranty;
  - Unexpected factors or man-made damage to the product, for example, input is not suitable for the voltage, temperature, water, mechanical damage, broken;
  - Force majeure (earthquake, fire, flood, etc.) caused by product failure or damage;
3. Out of warranty products, providing a paid service;

4. The above warranty terms to explain all of the company.

### Warranty Card

After purchasing this product, please fill out the warranty card and save

Product Type	
Name of Buyer	
Phone of Buyer	
Add of Buyer	
Date of purchase	

Disclaimer: If there is any alteration of this card invalid.