

FORCE-DARK & COMPARABLES*



QUICK START GUIDE



IN THE BOX

- 1 X Camera
- 1 X Mounting bracket
- 1 X Installation strap
- 1 X Quick Start Guide

Note: Memory card and batteries are sold separately.

User manual, latest firmware & FAQ available at support.spypoint.com

COMPONENTS

- Photo lens
- 2 Test light
- Oetection lens
- 4 Power jack 12V
- 6 Microphone
- 6 Light BUSY
- 7 Battery housing
- 8 Slot for installation strap

- 9 Tripod mount
- Cable lock hole
- 1 LED
- 12 Button OK
- 1 Navigation buttons
- 🙆 Viewing screen
- ⑮ Card Slot SD

*Specifications and characteristics may vary depending on comparable models. Refer to the web site or the packaging for details.







PREPARATION

REMOVING THE CAMERA FROM THE MOUNTING BRACKET

- · Push the tab to remove the camera from the mounting bracket;
- Remove the camera;

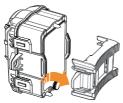

CHOOSING A POWER SOURCE

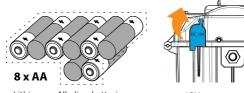

Lithium or Alkaline batteries


12V power source

Be sure to insert the AA batteries according to the polarity indications (+) and (-).

To ensure maximum performance of the camera and prevent battery leakage, we recommend using new batteries. Use ONLY Lithium batteries or ONLY Alkaline batteries. Rechargeable [AA] batteries are not recommended as the lower voltage they produce can cause operational issues.

INSERTING A MEMORY CARD

Always ensure that the camera is turned off before inserting a memory card. Insert an SD/SDHC memory card up to 32 GB capacity into the SD card slot with the label side facing upwards. The card is inserted correctly when a click is heard.

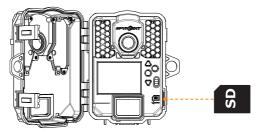

We recommend formatting your SD card if it's been in another electronic device.

CONFIGURATION

Use the buttons \blacktriangle and \blacktriangledown to navigate the menus and change options, the OK button to select and the BACK button to return to the previous menu.

CONFIGURING THE GENERAL SETTINGS

A. To turn ON/OFF the camera, press and hold the OK button;



- B. From the home menu, select SETTINGS then, GENERAL to access the general configuration menu;
- C. Set the Date (MM/DD/YY or DD/MM/YY);
- D. Set the Time (hour/minute);
- E. Set the Nighttime Mode (best option for photos)

COMPARISON OF HYBRID ILLUMINATION MODES*

	NO GLOW MODE	OPTIMAL MODE	IR-BOOST MODE	BLUR REDUCTION Mode
nvisibility of the LEDs	****	*****	*****	*****
Battery life	****	*****	*****	*****
Flash range	*****	*****	****	*****
Blur reduction	*****	*****	*****	****

CONFIGURING THE SETTINGS FOR THE 3 OPERATING MODES

From the home menu, select SETTINGS then PHOTO, TIME LAPSE or VIDEO to access the respective mode configuration menu.



PHOTO

Delay: Sets the time interval between each detection before the camera takes the next photo.

Multi-photo: Takes up to 6 consecutive shots at each detection with a 5 second delay between each photo.

TIME LAPSE

Interval: This option allows the camera to take photos at regular pre-set intervals without movement detection.

VIDEO

Delay: Sets the time interval between each detection before the camera records the next video.

Video length: Allows the user to select the duration of the recording.

First photo: When this option is enabled, a photo is taken immediately before each video.


SUGGESTED PHOTO MODE CONFIGURATION





	Usage in trails	Usage by a feeder	
Delay	Instant	5 min	
Multi-shot	1	1-3	

INSTALLATION AND MOUNTING BRACKET

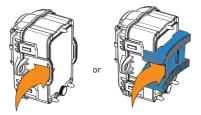

When the camera is installed using the mounting bracket, it can be removed to access the battery case without disturbing the installation.

Recommended installation height:

The camera should be installed at the same height as the animal's mid-body $% \label{eq:constraint}$

Ideal installation for quality images and videos:

The targeted animal should be 7.5 m away from the camera for a better field of view.

To get brighter pictures at night, you should have elements in the background to reflect back the camera's flash.

Please note that the camera should not be placed directly facing the sun to avoid backlighting and false detections.

TESTING THE CAMERA'S MOTION DETECTION CAPABILITY



The test light flashes when the camera detects motion. If the system does not detect motion, increase the detection sensitivity using the "Sensitivity" option in the SETTINGS/GENERAL menu. Adjust the camera's position as needed. In TEST mode, you can take a photo by pressing the OK button. The photo will be saved and displayed in VIEWING mode.

STARTING THE CAMERA

Select the desired operating mode (photo, time lapse or video) from the mode menu by pressing OK.



When the mode is selected, the test light on the front of the camera will flash for 30 seconds to allow the user to leave the site without being photographed or filmed.



ENGLISH





Sit back & relax as this camera is covered by the "Know you're covered" 2-year warranty.

We strive to provide our customers with a positive experience and an outstanding service.

> User manual, latest firmware & FAQ available at support.spypoint.com

> > Online support at SPYPOINT.COM service@spypoint.com

Join the community

Facebook: www.facebook.com/spypoint/ Youtube: www.youtube.com/user/SpypointTrailCam Instagram: @spypointcamera Flickr: www.flickr.com/photos/spypoint/