


HOW TO USE THE TACHYMETER (ON SOME MODELS)

1. With the watch in normal time indication mode, push and release button "A" precisely at the start of a measured mile/kilometer.
2. Push and release button "A" precisely at the end of the measured mile/kilometer.
3. Read the outer edge of the dial to obtain your speed in miles/kilometers per hour.
4. Reset your watch by pushing and releasing button "B".

Note: Some US highways have measured mile/kilometer markers.

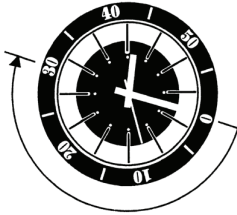

HOW TO USE THE ELAPSED TIME INDICATOR

If your watch is equipped with a rotatable outer dial with one-minute graduations, this can be used in various ways to check elapsed time. For example, if a diver has a 30-minute air supply, he can set the outer ring so that the triangle is in line with the minute hand when he submerges. The minute hand will then indicate on the outer ring the length of time that the diver has been under water.

SCREW-DOWN CROWN

If your watch includes a screw-down crown, you have additional assurance that it will remain watertight. To make the crown operational, it must be turned toward you until the threads are disengaged. Then, instructions for setting must be followed. To reseal the crown, press in until threads engage. Turn away from you until tight.

ABOUT THE POWER CELL

Your new Quartz Watch has a fresh power cell designed to provide maximum reliability for approximately a year under normal use. If the cell is not replaced before it is exhausted, the watch will simply stop. The mechanism should not be harmed in any manner. However, when the power cell becomes exhausted, it should be removed at your earliest convenience to diminish the possibility of leakage. Never store your watch with an exhausted power cell in it. The watch should be brought to an authorized Bulova dealer for replacement of the power cell. For best performance, the proper power cell should be used.

Note: When the crown is in the "OUT" position, the motor and hands stop. Only the quartz crystal continues to vibrate, using very little power. If the watch is to be stored for a length of time, it is recommended that the crown be left in the "OUT" position to prolong battery life. This does not apply to models with two hands only.

DEEP WATER LIMITED WARRANTY

Supplementary and subject to all the provisions and duration of the basic Bulova watch limited warranty, deep sea watches are further warranted not to leak when submerged in water to the depth shown on the dial, provided crystal and crown remain intact and the case has been unopened. In order to assure the preservation of your watch's water resistance, particularly in those instances where the element of safety is involved, have it checked occasionally by a competent watch technician and serviced or repaired, if necessary.

In addition, the wearer should avoid manipulation of the crown when submerged.


WATER RESISTANCE

Watch models marked only "Water Resistant" on the caseback, without additional depth markings are not to be used for swimming. For swimming, models that have the additional marking of "50m," "100m" or "200m" are recommended.

SIMPLE LINK ADJUSTMENT

Selected models use a unique system, which allows the customer to adjust the bracelet size to the most frequently needed lengths. On these models, in addition to the normal bracelet clasp, there are additional sections similar to the clasp in appearance and function. These can be removed completely, without using tools, in the following manner:

LIFT AT "ARROW" END

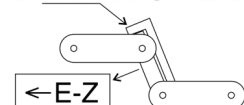

JUST REMOVE ONE OR TWO SECTIONS OF THE BRACELET.