



DELUXE HAIR STRAIGHTENERS ROSE GOLD EDITION

> USER MANUAL MODEL: SZ-56T





# SAFFTY PRECAUTIONS:

This appliance should only be used as described within this instruction booklet Please retain for reference

# PRODUCT FFATURES:

# VARIABLE TEMPERATURE SETTING:

Ranging from 100°C to 230°C. Adjust the temperature easily using the +/- buttons depending on what style you are looking to achieve Optimum styling temperature is around 180°C

# DIGITAL DISPLAY:

The LED display highlights the temperature setting - quick and simple

#### FRGONOMIC BARREI:

Our straighteners have a rounded edge barrel to protect your hair when styling and enables you to use the device to create waves and curls

# CERAMIC COATED PLATES:

Ensures snag free, smooth styling

# LOCK FUNCTION:

Secure the plates closed using our handy lock function, perfect if you're on the go

# 360° SWIVEL CORD:

Puts you in control, allowing full flexibility, movement and comfort

# AUTO SHUT OFF:

Appliance will turn off automatically after 60 minutes. To continue using the appliance after this time, simply press the on button

#### VOLTAGE:

100-240V

# STANDARD UK PLUG



# INSTRUCTIONS FOR USE:

- 1) Ensure hair is clean, dry and tangle-free
- 2) Plug the product into the mains power supply
- 3) Press and hold the on button to switch on
- 4) Use the +/- button to adjust the heat setting as required
- 5) When the LED display indicates your desired temperature you can begin to use
- 6) The digital display will show your temperature selection. Press the on/off button twice in quick succession to lock all keys so when the hair straighteners are in use the temperature setting cannot be changed. To unlock the temperature selection simply press the on/off button twice in quick succession again and the keys will unlock and you can adjust the temperature as necessary

#### STYLING:

- 1) Blast your hair until it's completely dry
- 2) Brush your hair from root to tip ensuring it's tangle free
- 3) Section your hair in strands with a comb
- 4) Style the lower layers first
- 5) Take a strand of hair about 5cm wide and press the heated straighteners together over the strand of hair at the root, being careful to avoid direct contact with the scalp and hand
- Gently move the straighteners away from the root of the hair toward the tip ensuring even heat distribution
- 7) Repeat until hair is fully styled
- 8) When you're selfie ready, simply press the on/off button again. The straighteners will turn off. Then just unplug

Please be aware that the hair straighteners should be left on a safe heat-proof surface to cool down. Do not leave directly on carpet or surfaces, where possible use a heat-protective mat

TEMPERATURE	HAIR TYPE
120°C - 180°C	Fine
180°C - 220°C	Normal
180°C - 230°C	Thick

Caution: the hottest temperatures should only be used by experienced stylists







# IMPORTANT SAFFGUARDS:

- · Do not leave the appliance unattended while plugged in
- Keep the appliance and cable out of reach of children
- The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards.
  Persons responsible for their safety should give explicit instructions or supervise the use of the appliance
- This appliance should not be used, cleaned or maintained by children
- Always take extra care if used on children or near children
- · Do not use on very young children
- Warning: do not use this appliance near bathtubs, showers or basins or other vessels containing water



- · Do not immerse in water or other liquids
- . This appliance should not be used in the bathroom
- · Do not plug or unplug the appliance with wet hands
- · Do not leave appliance switched on while not in use
- Pay special attention to the external parts of ceramic plates, they are very hot and can burn if they come into contact with skin
- The appliance should only be used on natural hair. Do not use on hair extensions
- Check voltage indicated on the appliance corresponds to local mains voltage before you connect the appliance
- · Check the condition of the mains cord regularly
- Do not use the appliance if the plug, the cord or the appliance itself is damaged
- Do not wrap the cord around the appliance. Check the cord regularly for any sign of damage
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to Lily England for repair or replacement in order to avoid a hazard
- Do not allow any part of the appliance to touch the face, neck or scalp
- This appliance is not intended for commercial or salon use
- Do not place appliance on soft material e.g. carpet, bedding, towels, rugs etc whilst in operation or cooling. Only set the appliance down on a heat-proof surface
- Store the product at a temperature between 10°C and 35°C
- · Unqualified repair work could lead to hazardous conditions for the user
- · For external use only









- We do not accept responsibility for damage to the product, persons or other items, caused by misuse, abuse or non-compliance with these instructions
- Warning: The bags used for packing these products may be dangerous and cause suffocation. Keep these bags away from children and babies

# CLEANING AND MAINTENANCE:

- · Unplug the appliance and allow to cool
- Wipe all the surfaces with a damp cloth
- · Do not use harsh or abrasive cleaning agents or solvents

# ENVIRONMENTAL PROTECTION:



Do not dispose of this product in household waste at the end of its useful life To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol  $\mbox{\ensuremath{\square}}$  must not be disposed of with unsorted municipal waste. Instead this appliance should be handed to an appropriate collection point

for the recycling of Waste Electrical and Electronic Equipment in accordance with the WEEE directive

For further information on recycling please contact your local council office or local household waste disposal site

For further advice on using the appliance or should you need to return your product, please contact the Lily England team at support@lilyengland.com or through our website www.lilyengland.com











# LILY ENGLAND







