



- (A) 2-way air valve
- (B) Fixed top strap
- (C) LED panel
- (D) Built-in USB port
- (E) Solar panel
- (F) Adjustable base strap
- (G) Battery level indicator
- (H) Power button
- (I) Battery level indicator button

To charge your device from the light, simply insert your charging cable at the USB-A end into the USB port on the light, and then plug the other end of the cable into your phone. Power up!

### Charge via solar

- Place unit with solar panel side in DIRECT sunlight.
- Charge unit for 14 hours in direct sunlight for full charge.
- Press battery level indicator button (⚡) to check battery level. Unit is fully charged when all 4 lights appear.

### Charge via USB

- Insert the USB cord provided into the USB port on the base panel.
- Ensure the cord is firmly in position and check that the Battery Level Indicator lights are flashing - this means that the light is charging.
- Quick-charge unit for 2-3 hours for full charge.

### Inflate

- Pinch the valve to open airway.
- With the valve pinched pull unit apart to pre-inflate before blowing.
- Blow into the valve until fully inflated.
- Firmly close valve tab and push valve into the unit.

### Shine

- Press power button (⏻) to turn unit on.
  - 1 click = Low
  - 2 click = Medium
  - 3 clicks = High
  - 4 clicks = Flashing
  - 5 clicks = Off
- Or hold for 2 seconds at any time to turn off.

### Deflate

- Open tab, squeeze the valve and push to release the air from the unit.
- Close tab on valve when fully deflated.
- Gently twist the light as you deflate for a flatter, more compact shape.