

TORRI

LADIES TRIMMER

4 Interchangeable Heads

fancii

TORRI


Meet Torri, your personal life saver when it comes to removing pesky, unwanted facial & body hair. Beauty problems arise all the time - but Torri's interchangeable trimming heads let you respond with total confidence. Precision stainless dual-edge blades easily and comfortably trim unwanted hair so you can focus more on the important things in life - and not your lip hair.

At Fancii, we're all about bringing joy and confidence into your everyday beauty routine by providing you with beauty tools you can trust. We're passionate about creating innovative products, so we would love to hear your feedback and connect with you on social!

We design and create with you in mind, let us be a part of your story.

Mandy & Aurelija

Mandy & Aurelija
Co-Founders, Fancii & Co.

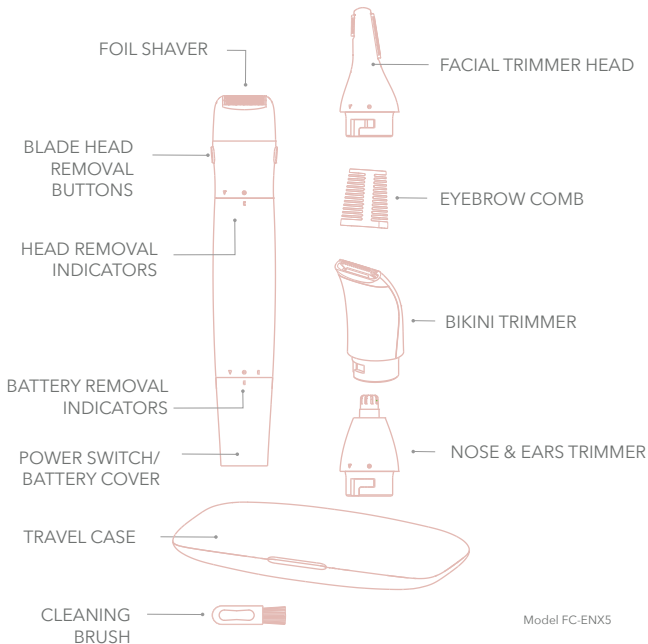

Model FC-ENX5

FEATURES



POWERFUL & PRECISE

The hypo-allergenic blades feature stainless steel construction for long-lasting sharpness, offering a clean, smooth cut, every time.



WATER RESISTANT

IPX-5 water resistant design allows for both wet and dry trimming - trims in the shower or trims dry anytime, anywhere.



ULTRA PORTABLE

Protective storage case fits perfectly in your purse or luggage.





EASY MAINTENANCE

The water-resistant design allows for easier cleaning and maintenance. Simply rinse the device in the sink after use.


LET'S BEGIN

TURN IT ON



Twist the power switch section to the right until the  icons line up to switch the trimmer on. Twist it back to the  icon to turn off.

HEAD REPLACEMENT

Removing the Head

Twist the head to the right to unlock the trimmer head. Pull the head upward to remove. Align the  icon and insert the trimmer head of your choice. Twist to the left until you feel it lock into place.

REPLACING THE BATTERY

1. Twist the base of the device to the left where you will see the  icon and pull the base down. Replace the battery, paying special attention to the orientation, ensuring the positive (+) side of the battery is inserted first.
2. To close the battery cover, place the cover back over the battery compartment and twist to the right back to the  icon to lock into place.

KEEP IT CLEAN



ADDED PROTECTION

Torri comes with a hard protective travel case to keep it clean and protected while on the go or at home.



TRIMMER HEAD STORAGE

Each trimmer head fits into its unique slot next to the device so it's easy to reach for when you want to switch between heads.



WET AND DRY CLEANING

Torri is IPX 5 water-resistant, which allows for wet and dry cleaning. Use the included brush to remove any debris from the head, and rinse it under running water if needed. Leave the heads out to air dry before storing it back into the case.

Note: The short hair trimmer head can be further separated by depressing the 2 buttons on each side for a more, thorough clean.

TRIMMER HEADS



BIKINI TRIMMER (LONG HAIR)

Perfect for trimming long or thicker hair easily

Place the trimmer blade against the hair you want to cut. Slide the trimmer blade gently and slowly against the direction of the hair growth for an even trim. Use on bikini line, chin, neck, legs, arms, etc.



FOIL SHAVER (SHORT HAIR)

Achieve a close cut with the short hair trimmer blade


Place the trimmer blade against the hair you want to cut. Slide the trimmer blade gently and slowly against the direction of the hair growth for an even trim. Ensure skin is stretched and pulled tight to prevent any cuts. Use on short facial hair and stubble.



NOSE & EARS TRIMMER

Safely groom nose and ears

Carefully insert the Nose & Ears trimmer into your ear or nostril and move the blade along the interior of your nostril or ear for a close trim. Do not insert the device inside your nostril or ear any further than the blade head as this could result in damage to your nostril or ear cavity.

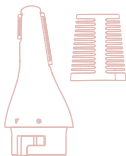

FACIAL TRIMMER HEAD

Ideal for brows and facial hair

Trim against the direction of eyebrow growth. The long side is designed for shaping the eyebrow peak and the short side is used for the eyebrow middle. Use without the double-sided comb to shape.

WARNINGS

1. Do not press the blade with excessive force against the skin, or insert too deeply into your nose or ears as doing so may result in injury or cuts.
2. Never apply excessive force on the blade head as it may damage the device.
3. Do not touch the blade with your finger.
4. Keep out of reach of children.
5. Batteries should be recycled or disposed of as per state or local guidelines.
6. Remove the battery if the device is not being used for an extended period of time.

Note: After using the trimmer, you may notice slight redness on the skin. Although this is normal, this can be prevented by using the device against the direction of hair growth. If your skin is still irritated after three days, it is recommended to consult a doctor.

HERE TO HELP

We pride ourselves on providing premium beauty tools which is why all of our products are backed by a 24-month warranty. If you have any questions or need further assistance, you can send us an email, connect with us on Live Chat or give us a call! Our friendly support team is here to help.

FOLLOW US ON



#FanciiCo
@FanciiCo



QUESTIONS?

support@fancii.com

1 • 800 • 285 • 0183

live online chat at:

[fancii.com](https://www.fancii.com)

fancii