

CUSTOMIZE YOUR SKINCARE

With 2 speed settings and 2 different brush heads, you can choose from a gentle facial exfoliation to a deep pore cleanse.

SUPERIOR CLEANSING

Our advanced 360° bi-directional facial spin brush effectively removes oil, dirt and makeup residues from pores for clearer, smoother skin.

SELF-DRYING BRUSH HEADS

The Skylar uses a fan built into the base to dry the brush, which reduces drying time and bacteria buildup after each use.





CORDLESS AND RECHARGEABLE

Simply place the brush on the stand for easy charging. Save money on expensive replacement batteries and reduce environmental waste.


Not suitable as a toy for children.

Cleaning and user maintenance may not be carried out by children without supervision.



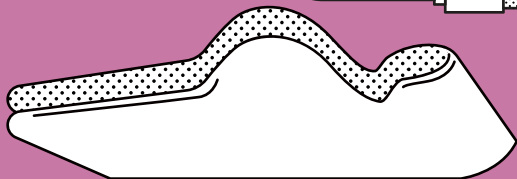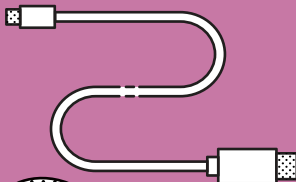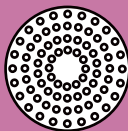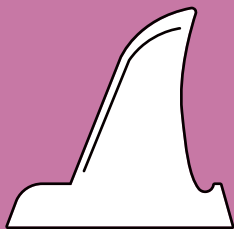


BI-DIRECTIONAL ROTATION & SPEED SETTINGS

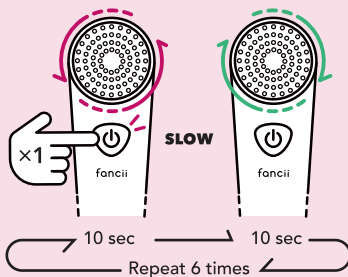


Press the power button once to turn on at first (slower) speed: automatically spins counter-clockwise for 10 seconds, and clockwise for 10 seconds. Repeat 6 times.

Press the power button twice to turn on at second (faster) speed: automatically spins counter-clockwise for 10 seconds, and clockwise for 10 seconds. Repeat 6 times.

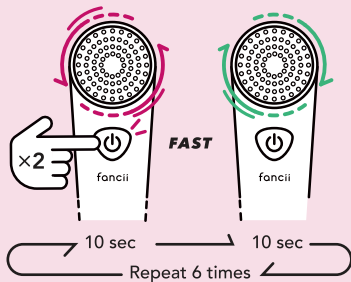


Press the power button three times or long press for about 2-3 seconds to turn off the device.

BRUSH HEADS

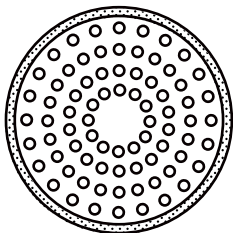

Cleansing Brush Head

The ultra-soft nylon bristles are perfect for daily gentle and deep cleansing when paired with your favorite cleanser. It helps effectively break down dirt and clogged pores, as well as remove makeup residue and excess oil from the skin to leave it looking fresh and healthy.

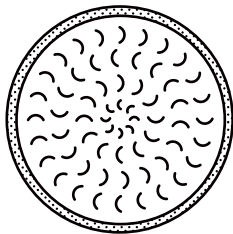


Silicone Brush Head

With short, flexible silicone bristles, this brush head offers a softer cleansing option for people with dry or sensitive skin. This head is best when used on the first (slower) speed setting. It can also help massage skincare products in or to remove face masks.

CHARGING / DRYING

1 / Mount the brush on the base and insert the USB cord (included) to the charging port of the base. Plug the USB cord into a reliable power source such as a computer or USB DC-5V adapter.

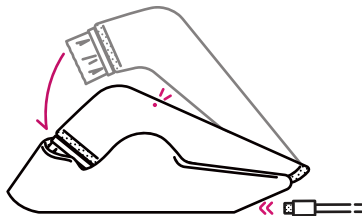

2 / Allow the brush to undergo a full drying and charging process (see Charging/Drying Process)

CAUTION: Charging base is not waterproof!

CHARGING / DRYING

The battery takes approximately 5 hours to fully charge and will be usable for up to 30 days before needing to be plugged in again for charging. The light sequence indicates the drying and charging process while the brush is mounted on the charging base.

 
1/ [Purple >> Red >> Purple] >> 2/ Red >> 3/ Blue

1/ Purple > Red > Purple - Drying mode for 90 minutes

2/ Red - Normal charging mode



3/ Blue - Fully charged

5 HOURS




USING SKYLAR

1 / Wrap, tie or pin your hair away from your face to avoid it getting tangled in the device.

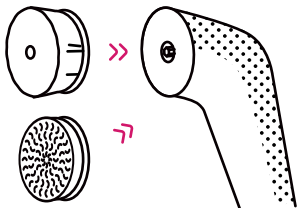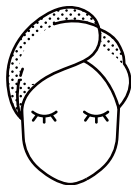

2 / Select the brush head of your choice and attach it to the head of the device by pushing it on firmly until you hear a click.

3 / Dampen skin and brush head with water (cleansing with a dry brush head may cause skin irritation).

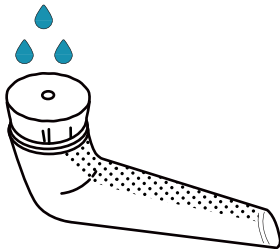

4 / Apply preferred cleanser to face.


USING SKYLAR

5 / Turn ON device and select suitable speed and direction.



6 / Gently massage your face in circular motions with the device for approximately 60 seconds. NOTE: Gently glide the brush over the skin surface. Pressing too hard will obstruct the motion, reduce the effectiveness and could cause irritation. Avoid contact with eyes and any areas where the skin is sensitive, broken or irritated.

7 / Press and hold the power button until the device stops. To remove the brush head, gently pull the attached head directly out, ensuring not to pull at an angle. Additionally, Skylar will automatically shut down after 2 minutes of continuous usage.

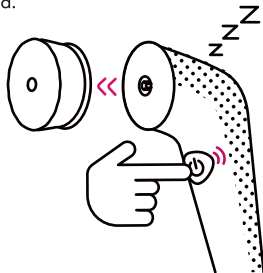


KEEP IT CLEAN

1 / After each use, run warm water over brush head(s) and wash gently between the bristles. Use a clean, dry cloth to wipe down the device before mounting onto the holder.



2 / Store the Skylar, brush heads and charging base in a clean, dry area (outside of your bathroom) when not in use to keep it sanitary and protected. Do not place or store for long periods in a hot or humid environment. If you do not intend to use the device for a long time, fully charge the device before placing it in storage.

3 / Dermatologists recommend replacing brush heads every two to three months or when bristles appear worn and can no longer be restored to their original shape.

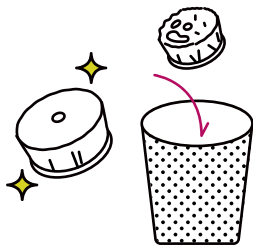

warnings

- 1 /** Keep away from children.
- 2 /** Do not use this product on inflamed, swollen, broken, or sensitive skin.
- 3 /** Do not look directly at the charging light.
- 4 /** Do not attempt to disassemble the device.
- 5 /** This product should not be used by individuals with poor blood circulation or skin sensitivities.
- 6 /** Do not use this product if you suffer from a physical condition that would limit your ability to operate the controls.
- 7 /** This product is not a replacement for medical care and is not recommended for commercial use.
- 8 /** This product is intended for the face only. Do not use this product on your skin for longer than 5 minutes at any one time and avoid contact with the eye area.
- 9 /** Do not submerge device under water.
- 10 /** Do not store the charging base in the bathroom or areas with high humidity as this may result in electric shock or fire.
- 11 /** This product contains a nickel battery and should be recycled or disposed of according to state and local guidelines.

battery disposal

Note: Opening and disassembling the device will void its warranty. The process is not reversible.

This action must only be undertaken when the device is ready to be disposed of. All batteries should be recycled or disposed of as per state or local guidelines, and should not be thrown away in household waste. To remove the battery, you need to disassemble the unit and carefully extract the lithium battery. Wear gloves during this process for your safety. Do not dispose of it in a fire as the battery will likely explode and cause injury.

here to help

We pride ourselves on providing premium beauty tools which is why all of our products are backed by a 24-month warranty. If you have any questions or need further assistance, you can email support@fancii.com, connect with us on Live Chat or give us a call! Our friendly support team is here to help.

want free fancii?

Share photos of you using your Fancii product
with the hashtag #FanciiFam

Send in before and after photos

to our email: results@fancii.com

@FanciiCo



as featured in

allure

GLAMOUR

VOGUE

fancii

Good-bye
Boring Beauty
Routine!