READ ME FIRST

IMPORTANT: Teego[™] Cage Net Assembly Instructions

If after reading these instructions you have questions and need assistance, please e-mail our support department at support@teego.com or call between 8am - 5pm EST at 1-800-698-3346.



Step 5: With both poles completely through the sleeves of the net and crossing in the center, insert the pins on each corner of the net into the corresponding pole end (do both ends of the sample pole before moving to the next pole). When inserting the second pin in a pole, the pole will have to be bent. This bending of the poles will erect the net. See figure 4.

Step 6: Attach the target panel to the net using the elastic bands. With the logo facing outward slip the elastic band through the eyelet of the target panel and the net. Then loop the elastic band around plastic pin on the opposite end of the elastic band to hold it in place. Repeat this at each corner of the target panel. See figure 5.









Step 7: If using outdoors, insert a stake into the ground at each corner of the net to secure it to the ground.



Dissassembly

Reverse the steps above. After the poles are removed, detach the segments and fold them in to a bundle. Then fold the net into a 22" wide rectangle, lay the pole bundles on top of the folded net and tightly roll it up. Then insert it into the carrying case.



For more information on Teego Golf products visit us online at: WWW.teego.com Or call 1-800-698-3346	
6 month limited warranty on all Teego Golf products.	Teego, Teego GTS, and ShagStick are trademarks of Teego Golf.