

IMPORTANT: Teego ShagStick[™] Usage Instructions

For assistance e-mail us at support@teego.com or call between 8am - 5pm EST at 1-800-698-3346 x2. **Thank you for purchasing the Teego Golf ShagStick™!**

Extending

Grasp the trigger end of the ShagStick[™] with one hand and the opposite end with the other hand, then press in the locking tabs at the top and **slowly** pull the tubes apart until the lower locking tabs engage. See figure 1.

 



Figure 1

Picking Up & Releasing Balls

Holding the ShagStick[™] by the handle, place it directly over a golf ball and press down until the ShagStick touches the ground. Repeat this for each ball that is to be picked up. See figure 2.


To release golf balls make sure the ShagStick[™] is tilted downward and press the trigger lever down. See figure 3.

To release a single golf ball quickly tap and release the trigger lever.

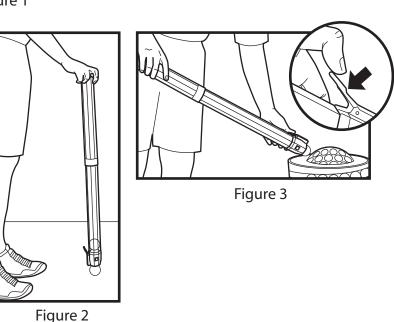

Collapsing

Press in the tabs that lock the overlapping tubes inplace with one hand and slide the inner tube inside the outer tube until it is fully collapsed and snaps into position. See figure 4.

 

 


Figure 4



For more information on Teego Golf products visit us online at: WWW.ÉCEGO.COM Or call 1-800-MY-TEEGO (698-3346)	
6 month limited warranty on all Teego Golf products.	ShagStick is a trademark of Teego Golf