

Changing over nozzles and spare seals Mini Stainless Nozzle.

- 1. To remove the nozzle from the machine, take off the spring and remove the main bolt holding the nozzle to the bar. Make sure to not lose the clear plastic washers. When putting the nozzle back on, make sure these washers go between the bar and nozzle bracket.
- 2. (Enomaster only) When changing from Standard nozzle to Mini nozzle you must put a mini m/f ball valve on the back overflow vessel where the overflow pipe goes. Remove hosetail, fit ball valve and refit hosetail to the valve. Shut this valve when not using the Mini Nozzle.
- 2. To change the nozzle seals, unscrew the top piece (14) from pic below. Can be unscrewed by hand. Then unscrew the piece (2) and pull down. The nozzle then will come apart. Be careful not to bend or damage to tubes as this may result in the nozzle not working correctly.
- 3. The red number are the seal to change over from the nozzle seal kit.
- 4. Re-assemble the nozzle making sure to tighten (14) and (2).

