

Changing over nozzles and spare seals Standard Stainless Nozzle.

- 1. To remove the nozzle from the machine, take off the spring and remove the main bolt holding the nozzle to the bar. Make sure to not lose the clear plastic washers. When putting the nozzle back on, make sure these washers go between the bar and nozzle bracket.
- 2. To change the nozzle seals, put a 10mm spanner on the flat at the tip of the nozzle (open slightly) and use a 12mm spanner on the hosetail at the top, then unscrew.
- 3. When this is off the nozzle itself will come apart. i.e pic below.
- 4. The Red numbers are the seals to change over from the nozzle seal kit.
- 5. Re-assemble, taking care to end up with the little hole at the nozzle tip in the same orientation. (to the side, at 90 deg. to the larger filling holes.)

