Tents and Event

FOG MACHINE DIRECTIONS

1. Insert remote control into rear of machine. 2. To avoid risk of electric shock, plug cord into grounded outlet only. 3. Fill reservoir with water based fog fluid. 4. Close cap tightly. 5. Push clear plastic feeder tube down through the cap if there is slack. 6. When the indicator light on the controller goes on, the machine is ready for use. 7. At times the indicator light will go off. This is NORMAL. Depress the switch ONLY when the indicator light is ON. 8. To use timer mode, press the "TIMER" button. Adjust "DURATION" knob for length of bursts. Adjust "INTERVAL" knob for length of time between fog bursts. 9. Allow fog machine to "COOL DOWN" before packing up for transportation.

For any questions or concerns call 707-544-4132.