



CHOCOLATE FOUNTAIN OPERATION & CLEANING

OPERATION

The fountain is designed for approximately 2-3hrs. of use at 1 time.

*The small fountain (up to 100-125 people) requires 11lbs. of chocolate for normal use & the large fountain (up to 300-350 people) requires 22lbs. of chocolate for normal use. Chocolate **MUST** be obtained through Party, Tents & Events. Use of other chocolate may damage the equipment & lead to the replacement of the machine at the cost of the customer.*

*Pre-melt the tub(s) of chocolate as directed on the chocolate container to a complete liquid form. While melting chocolate, machine should be in the “**OFF**” position & the temp knob should be in the “**OFF**” position. Pour the melted chocolate into the base of the fountain (**Do not pour into center auger**) & turn the on/off switch to “**ON**” starting the auger. The auger should remain “ON” for the entire period of use.*

- *Additional pre-melted chocolate can be added to the fountain during use if required. The heat of the motor & the friction of the auger should be sufficient to keep the chocolate melted during operation.***

*** If the chocolate starts to harden (you will notice thickness in the sheeting of the chocolate) you can turn the heat dial to **LOW 1-4** for several minutes but heat **should not** be left on as it will reduce the running time of machine & may cause damage & overheating. THIS UNIT SHOULD BE MONITORED AT ALL TIMES.*

The auger motor generates heat & is designed to keep chocolate melted during use. Operating the fountain for a substantially longer period than 2-3hrs. or operating the fountain with the auger running & the heat ON or higher than low for more than a few minutes could cause the motor to overheat in the fountain.

Do not turn auger “OFF” at anytime during use. Doing so will cause chocolate to harden in the auger tube, resulting in strain to the fountain & possible overheating & damage to the unit if turned back on without proper cleaning.

Never run the fountain without anything inside. It will damage the fountain.

CLEANING

*Party, Tents & Events asks that you **DO NOT** attempt to clean the fountain. Once you are finished with the fountain, turn all switches “**OFF**” & let the chocolate harden on the fountain. PT&E will clean the fountain upon return with no additional cleaning fees applied to your rental. For any questions or concerns, call 707-544-4132.*

THANK YOU FOR YOUR BUSINESS!!