

6807 - USB Wall Adapter Hidden Video Recorder




Note: Make sure to have a microSD card inserted into the device when setting up the device. Format the SD card before usage. Max size is 64GB

How to use the device:

- Plug the device into the wall after changing the recording settings. You should then see a light, meaning it has started recording. The Face plate cover will block the light from being visible.
- To stop video recording, simply unplug the device from the wall. A red light will blink and then turn off

How to change recording settings:

- Remove the face of the device.
- Underneath the face is a white switch above the camera, marked with an “L” and an “M.”
- “L” for continuous recording
- “M” for motion activation.

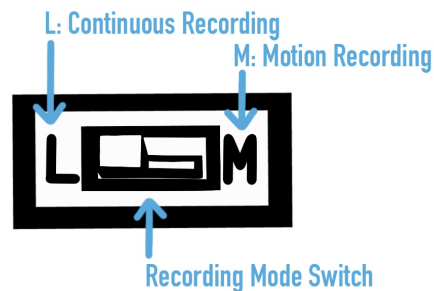

How to set the date and time:

- Plug the camera into a computer using the included USB cable; you should see a red light turn on, and a blue light will be flashing intermittently on the face of the camera.
- Find the removable drive from the file folders section of the computer, or wait for it to prompt you to open the folder to view files.
- In the device folder, you'll see a folder called "Video" and a file called "Timerset" Open the "Timerset" file, and you'll see an old Date/Time that you'll need to update to the current date and time using the format... YearMonthDayHourMinuteSecond Y/N - Y for the time display to be enabled on the recording, N for (Example: 20210515132500 Y). Once updated, go the where it says "File" in the top left corner and select "SAVE" from this point, new recordings will be date and time stamped.

How to playback files on a Windows computer:



- Connect to the USB port of the computer
- The PC will recognize the device as a removable disk
- Open the "Video" folder
- Double-click the file you wish to play

How to delete the files on a Windows computer:



- Open the "Video" folder
- Right-click on the file you wish to delete and select Delete
- Files can only be deleted through a PC or Mac

How to playback files on a MAC computer:



- Either Connect the USB cable to the device and the other end to the USB port of the computer or remove the Micro SD card from the device and connect it to the computer
- When connected, the PC will recognize the device as a "Removable Disk"
- Open the "Video" folder
- Double-click the file you wish to play

How to delete the files on a Mac computer:



- Open the "Video" folder
- Right-click on the file you wish to delete and select Delete
- While the device is still plugged into the Mac, go to your trash folder and empty the trash.

Note: If the above step is not completed on a Mac, the recorded files will not be entirely deleted from the device. You will have a phantom folder containing the deleted files that can not be seen on Mac that still take up memory space. Empty the "trash bin" to clear these files, or your recorder may run out of room.



How to Playback files on a Google Chromebook:

- Connect the device to the USB port of the computer
- A pop-up menu may occur; if so, select “View Files”
- If a pop-up does not occur, select the **O icon** (called the app launcher) “similar to a Windows icon button” located in the bottom left corner of the screen
- Underneath the “Google Drive” are “My Drive,” “Downloads,” “New Services,” and something else that may be named “Removable Drive”
- Select the Removable Drive. If unsure of this step. Disconnect the device from the Chrome Book and see what is no longer available under “Google Drive” from Step 4
- After selecting the “Removable Drive,” you can now navigate the folders in the main folder to find the recorded files.
- Double-click to play



How to playback files on an Android smartphone or tablet (No Apple Products):

- An OTG cable is required for this process. For all other steps, refer to the OTG cable guide at <https://spycentre.com/products/dual-android-otg-cable>, scroll to the bottom of the page, and click on user guides
- Go to your “Device Storage” and look for external memory. Inside will be all the files you can click on to review what was captured.
- For all other steps, refer to the OTG cable guide on spycentre.com

NOTE:



In order to play back the files on these devices, you will need to download a media player that can play .AVI format. We recommend VLC media player

VLC Media Player (Recommended for optimal usage)

How to download and use VLC Media Player on a Windows computer



 
- Go to www.videolan.org and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically begin downloading, press the “Click Here” and select one of the mirrored sites
- Once downloading has been completed, select run and install
- Once finished, a VLC icon will now be available on your PC
- To default, open a file in VLC Media Player, right-click on the file you wish to open and select “Open With,” and choose VLC
- To change all files to default, open with VLC Media Player: Right-click and choose “Properties,” then click on the “Change” button next to “Open With” and change it to VLC, then press ok. Now the files will default open with VLC

How to download VLC Media Player on a Mac computer



- Go to www.videolan.org and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically start downloading, press the “Click Here” and select one of the mirrored sites
- Once completed, a new file named VLC will be visible on the desktop
- Open the folder, and in the folder, move the VLC to the “Applications Folder” by dragging and dropping it
- Once in the “Application Folder,” the VLC player will complete the installation
- Open VLC Media Player in the “Applications Folder” and drag your video files to the “Drag Here” dialog box to open and play
- If the VLC player is not installed, a change to the security and privacy settings is needed
- To access your security and privacy, click on the Apple icon on the taskbar and select “System Preferences”
- Select “Security and Privacy”
- Make sure the lock icon on the bottom of the screen is open and set to “Make Changes”
- Select the button “Open Anyway”
- VLC will now be fully installed

Note: if a folder does not automatically open when connected to PC, disconnect the device and perform the following



- Type “Control Panel” in the search bar and select “Programs”
- Under “Default Programs,” click “Change Default Settings for Media or Devices”
- Under “Removable Devices,” select “Open Folder” to view files
- Save and reconnect the device to the computer

The Spy Gear Superstore® Since 1993