

6809 - Key Fob Hidden Video Recorder

How to charge the battery:

- Connect the recorder to a PC or USB power supply with the provided USB cable
- It takes 3 hours to fully charge
- **A blinking blue/purple light** = Charging
- **No light** = Fully charged

Note: No light will be present when connected to a PC without an SD card inserted. A Purple light will be present when the device is connected to a PC with an SD card inserted.



How to access the SD memory card slot and charging port:

- To remove the cover plate behind the flip-out key, first press the silver button to flip out the key
 - Once the key has been flipped out, turn the device over and slide the bottom cover plate to release the clip
 - When the cover is released from the clip, pull upwards on the cover to fully release
- Note: Do not yank on the cover; pull upwards, and it will release.**
- Once the cover is removed, the SD card slot, as well as the USB charging port, will be accessible

How to record a video file:

- Press and hold the on and off unlock button for 3 seconds until a the red light comes on
- Wait for the red light to begin blinking, indicating that the device is ready
- Press and hold the trunk button for 3 seconds
- The LED light will begin to slowly blink indicating a recording has begun
- To stop the recording press the unlock button and the red light will appear, showing the device has saved the file and is now in standby mode
- To turn off the device press and hold the unlock button and the red light will blink rapidly and disappear, turning the device off

How to turn on motion activation:

- When in standby mode, press and hold the lock button for 3 seconds
- The LED light will begin to blink and disappear slowly, indicating motion activation recording has begun
- When the device notices movement, the red LED will flash on and then off
- To stop the recording press the unlock button and the red light will appear, indicating the device is in standby mode
- To turn off the device, press and hold the trunk button and the red light will blink rapidly and disappear, turning the device off

Note: Motion activation will not extend the battery life of the device. If the device runs out of power during the recording, it will finalize and save the file before the battery dies.

How to turn on the night vision:

- When either recording or in standby mode, tap the lock button
- On the front of the device, next to the camera, a faint red IR light will turn on
- To turn off the device, tap the lock button

How to take a photo:

- When in standby mode, tap the trunk button, and the red light will blink and then return to a solid red LED indicating a picture has been taken, and the device has returned to standby mode

How to playback files on a Windows computer:



- Either connect the USB cable to the device and the other end to the USB port of the computer or remove the Micro SD card from the device and connect it to the computer
- When connected, the PC will recognize the device as a removable disk
- Open the “DCIM” folder
- Open the “100DSCIM” folder
- Select a recording and double click to play

How to playback files on a Mac computer:



- Either connect the USB cable to the device and the other end to the USB port of the computer or remove the Micro SD card from the device and connect it to the computer
- When connected, the Mac will recognize the device as a removable disk
- Open the “DCIM” folder
- Open the “100DSCIM” folder
- Select a recording and double click to play

How to playback files on a Google Chromebook:



- Connect the device to the USB port of the Chromebook
- A pop-up menu may occur; if so, select “View Files”
- If a pop-up does not occur, select the “O” icon called the “App Launcher” similar to a Windows icon button located in the bottom left corner of the screen
- Underneath the “Google Drive” are “My Drive,” “Downloads,” “New Services,” and something else that may be named “Removable Drive”
- Select the “Removable Drive.” If unsure of this step. Disconnect the device from the Chromebook and see what is no longer available under Google Drive from step 4
- After selecting the “Removable Drive,” you can now navigate the folders in the main folder to find the recorded files
- Double click to play

How to playback files on an Android smartphone or tablet (No Apple Products):



- An OTG cable is required for this process. For all other steps, refer to the OTG cable guide at <https://spycentre.com/products/dual-android-otg-cable>, scroll to the bottom of the page and click on user guides
- Go to your “Device Storage,” and look for external memory. Inside will be all the files you can click on to review what was captured
- For all other steps, refer to the OTG cable guide on spycentre.com

Note:  To playback the files on these devices, you will need to download a media player that can play in AVI format. We recommend VLC Media Player.

How to delete files on a Windows computer:



- Open the "DCIM" folder
- Open the "100DSCIM" folder
- Right, click on the file you wish to delete, and left click delete in the pop-up menu

How to delete files on a Mac computer:



- Open the "DCIM" folder
- Open the "100DSCIM" folder
- Click and drag the file you wish to delete to the trash bin
- Empty the trash bin to delete the file from the device permanently

Note: If the above step is not completed on a Mac, the recorded files will not be entirely deleted from the device. You will have a phantom folder containing the deleted files that can not be seen on Mac that still take up memory space. Empty the "trash bin" to clear these files, or your recorder may run out of room.

How to set the time and date on a Windows computer:



- Connect the USB cable to the device and the other end to the USB port of the computer
- When connected, the PC will recognize the device as a removable disk
- Create a plain text file next to the "DCIM" folder
- Right-click with the mouse underneath that folder to open the actions menu, move the mouse over to new, and choose the "TextDocument.txt" file
- Open that file and input the date in year/month/day format and the time in 24-hour format. Example: 04/15/2020 at 1:30 pm = 2020.04.15 13:30:00
- Save the file as time. Now in the folder should be a "DCIM" folder and a "Time.txt" file
- Disconnect the device from the computer and immediately create a new recording to import the corrected time and date stamp
- When the device is connected again to the computer, the time file should no longer be present, indicating the device has accepted the new time and date

How to Set the time and date on a Mac computer:



- Connect the USB cable to the device and the other end to the USB port of the computer
- When connected, the Mac will recognize the device as a removable disk
- Open "TextEdit" and create a new plain text file
- Input the date in year/month/day format and the time in 24-hour format = 2020.04.15 13:30:00 would be 04/15/2020 at 1:30 pm
- Save the file as time. Now move the time file into the folder with the "DCIM" folder
- The folder should now be the "DCIM" folder, and the time file
- Safely eject the device from the computer and create a new recording to import the corrected time and date stamp

- When the device is connected again to the computer, the time file should no longer be present, indicating the device has accepted the new time and date

Note: Plain text and rich text are different formats; you can change the text type by selecting the format and then choosing to make plain text. Also, ensure that the wrap-to page is disabled.

VLC Media Player (Recommended for optimal usage)

How to download VLC Media Player on a Mac computer

- Go to www.videolan.org and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically start downloading, press the “Click Here” and select one of the mirrored sites
- Once completed, a new file named VLC will be visible on the desktop
- Open the folder, and in the folder, move the VLC to the “Applications Folder” by dragging and dropping it
- Once in the “Application Folder,” the VLC player will complete the installation
- Open VLC Media Player in the “Applications Folder” and drag your video files to the “Drag Here” dialog box to open and play
- If the VLC player is not installed, a change to the security and privacy settings is needed
- To access your security and privacy, click on the Apple icon on the taskbar and select “System Preferences”
- Select “Security and Privacy”
- Make sure the lock icon on the bottom of the screen is open and set to “Make Changes”
- Select the button “Open Anyway”
- VLC will now be fully installed

How to download and use VLC Media Player on a Windows computer

- Go to www.videolan.org and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically begin downloading, press the “Click Here” and select one of the mirrored sites
- Once downloading has been completed, select run and install
- Once finished, a VLC icon will now be available on your PC
- To default, open a file in VLC Media Player, right-click on the file you wish to open and select “Open With,” and choose VLC
- To change all files to default, open with VLC Media Player: Right-click and choose “Properties,” then click on the “Change” button next to “Open With” and change it to VLC, then press ok. Now the files will default open with VLC

Note: If the memory folder of the recorder does not automatically open when connected to a PC, disconnect the device and perform the following.



1. Type "Control Panel" in the search bar and select "Programs"
2. Under "Default Programs," click "Change Default Settings for Media or Devices"
3. Under "Removable Devices," select "Open Folder" to view files
4. Save and reconnect the device to the computer

The Spy Gear Superstore® Since 1993