

## Quick Start Guide - 6818 - 1080P Hidden Book Security Camera



### Getting Started:

- 1) Plug the book into either a USB wall adapter or computer for charging purposes. (While charging make sure the book is in its "Off" position)
- 2) Once you have it plugged in and charging the yellow light will stay on, once fully charged the yellow light will be turned off. To fully charge the spy book camera it will take about 20 hours to fully charge it.

### Starting A Recording Continuously or With Motion:

- 1) First you will need to have inserted your micro SD card into the book camera. If you do not have a SD card you will not be able to record until you do.
- 2) To start recording you will need to hold the power button for about 3-5 seconds until the blue LED comes on and stays solid meaning it is in standby mode.
- 3) To record continuously you will hit the "REC" button next to the power button on the book (while you have it turned on and in standby mode) from there the blue LED will flash several times then turn off. Once the LED has turned off it is now on and recording continuously.
- 4) To record based off of motion you will need to hit the "MD" button next to the "REC" button on the book (while you have it turned on and in standby mode) the blue LED should go red and flash several times. Once the red LED has stopped flashing it is on and recording based off of motion. You can also press the MD button while the book is turned off. This will automatically turn it on into MD mode.

## Setting The Time and Date:

- 1) Make sure you have a SD card inserted into the book camera.
- 2) Plug the book camera into your computer via the USB cable.
- 3) Turn the book on while you have it plugged in. If you do not turn the book on it will not register on the computer and will only charge.
- 4) Find the books file folder location through your removable disk drives, Once you are in the file folder you are going to open up a file that says "SETTIME" (which should be pre-loaded onto the book)
- 5) Once you open up the "SETTIME" file you will need to update the time and date according to your time zone. For example 8-16-17 at 1:15pm would be the following format 2017-08-16 Year-Month-Date, 13:15:30 Hour:Minutes:Seconds (keep in mind for the time it is based off of military time)
- 6) Once you have set the time and date you will need to save it, in the top left hand corner it should say "File" click that and it should give you a few different drop downs and you will be looking for the "Save" option.
- 7) Once you have saved the file you can unplug the book from your computer and start recording. If you want to double check to make sure the time and date was held simply make a few recordings and plug it back into the computer once you have made the recordings and see what you get.

## SPECIFICATIONS:

Video Format: .AVI

Video Resolution: 1920 x 1080

Video Frame Rate: 30fps

Max SD Storage Capacity: 32GB

Camera Angle: 75 degrees

PIR Detection Angle: 60 degrees

PIR Detection Distance: 10-20ft

Max PIR Stand-by Time: 2 years

IR Distance: 9-15ft in optimal conditions

Max Daylight Recording Time: 30 hours

Max Nighttime Recording Time: 9-10 hours

Charging Time: about 7-9 hours

PIR Motion Detection Video Record Length: about 1 minute per file

Continuous Record Length: about 2 minutes per file

Maximum Files: 97

Connector: Micro USB

## How to Playback files on a PC:



1. Connect to the USB port of the computer
2. The PC will recognize the device as a removable disk
3. Open Video folder
4. Double click the file you wish to play

## NOTE:



***In order to play back the files on these devices you will need to download a media player that can play .AVI format. We recommend VLC media player***

### How to Delete the files on a PC:



1. Open the Video folder
2. Right click on the file you wish to delete and select Delete
3. Files can only be deleted through a PC or Mac

### How to Playback files on a MAC:



1. Either Connect USB cable to the device and the other end to the USB port of the computer or Remove the Micro SD card from the device and connect it to the computer
2. When connected the PC will recognize the device as a removable disk
3. Open the Video folder
4. Double click the file you wish to play

### NOTE:



***In order to play back the files on these devices you will need to download a media player that can play .AVI format. We recommend VLC media player***

### How to Delete the files on a Mac:



1. Open the Video folder
2. Right click on the file you wish to delete and select Delete
3. While the device is still plugged into the Mac go to your trash folder and empty trash.

**Note: If the above step is not completed the files will not be fully deleted from the device and you will have a phantom folder that will contain the deleted files that can only be seen by a Windows Computer**

### How to Playback files on a Google ChromeBook:



1. Connect the device to the USB port of the computer
2. A pop up menu may occur, if so select "View Files"
3. If a pop up does not occur, select the **O icon** (called the app launcher) "similar to a windows icon button" located in the bottom left corner of the screen
4. Underneath the Google Drive are My Drive, Downloads, New Services, and something else that may be named "REMOVABLE DRIVE"
5. Select the Removable Drive. If unsure of this step. Disconnect the device from the Chrome Book and see what is no longer available under the Google Drive from Step 4
6. After selecting the Removable drive you can now navigate the folders in the main folder to find the recorded files.
7. Double Click to play

### NOTE:



***In order to play back the files on these devices you will need to download an APP that can play .AVI format. We recommend VLC media player, available for free at the GOOGLE PLAY STORE***

## How to Playback files on an Android Smartphone or Tablet:




1. An **OTG Cable** is required for this process.
2. Go to your Device Storage and look for the External Memory. Inside will be all your files that you can click on in order to review what was captured.
3. For all other steps refer to the **OTG cable guide** on **spycentre.com**

**NOTE:** 

***In order to play back the files on these devices you will need to download an APP that can play .AVI format. We recommend VLC media player, available for free at the GOOGLE PLAY STORE***

***NOTE: if a folder does not automatically open when connected to PC, disconnect the device and perform the following***

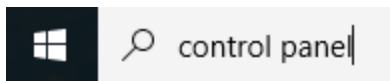

1. Open Control Panel by typing “control panel” in the Search bar
2. Select Programs
3. Under Default Programs, Click “Change default settings for media or devices”
4. Under Removable Devices, select “Open folder to view files”
5. Save
6. Reconnect the device to the PC

## How to download and use VLC media (Windows)



1. [www.videolan.org](http://www.videolan.org)
2. Click the Blue “download VLC”
3. It will open a new window and begin downloading
4. If it does not automatically begin downloading, press the Click here and select one of the mirrored sites
5. Once downloading has completed select Run and install
6. Once finished a VLC icon will now be available on your PC
7. To default open a file in VLC media player, right click on the file you wish to open and select “open with” and choose VLC
8. To change all files to default open with VLC media player: Right click and choose properties then click on the “Change” button next to “open with” and change it to VLC and press OK. Now the files will default open with VLC

## How to download VLC media (Mac)



1. [www.videolan.org](http://www.videolan.org)
2. Click the Blue “download VLC”
3. It will open a new window and begin downloading
4. If it does not automatically begin downloading, press the Click here and select one of the mirrored sites
5. Once completed a new file named VLC will be visible on the desktop
6. Open the folder and in the folder move the VLC to the applications folder by drag and drop
7. Once in the application folder the VLC player will complete the installation
8. Open VLC media player in the Applications folder and simply drag your video files to the “drag here” dialog box to open and play
9. If the VLC player is not installing a change to the Security and privacy settings is needed
10. To access your Security and Privacy click on the Apple Icon on the task bar and select “system preferences”
11. Select “security and privacy”
12. Make sure the Lock icon on the bottom of the screen is open and set to Make Changes
13. Select the button “Open Anyways”
14. VLC will now fully install

**The Spy Gear Superstore® Since 1993**