

## 6956 - 1080P Video Spy Camera Glasses

### How to charge the battery:

- Connect the recorder to a PC or USB power supply with the provided USB cable
- It takes 3-4 hours to charge fully
- **Blinking Red light** = Charging
- **Solid Blue light** = Fully charged



### How to record a video file:

- Hold the on and off buttons for 2-3 seconds to enter standby mode
- A red light will come on, then go solid blue, indicating standby mode.
- Hold the on and off button for another 2 seconds, and the blue light will blink three times to indicate it is now recording.
- Tap the button once more to end and save the recording. The device will show a solid blue light, indicating it is in standby mode
- Press and hold the on and off button for over 5 seconds to turn it off. You will see the light blink blue once, then a red light that will flash three times to tell you it has turned off.

**Note: If the device becomes stuck, use a pin to hit the reset key in a small hole under the glasses' left arm, near where the ear sits.**

### **How to take a photo**

- Hold the on and off buttons for 2-3 seconds to enter standby mode
- A solid blue light will indicate standby mode
- Click the on and off one time to snap a photo. The blue LED will blink once and then return to show it is in standby mode. From here, you may click the button for more photos, hold it down for 2 seconds to initiate a new video recording, or hold it down for 5 seconds to turn it off

### **How to playback files on a Windows computer:**



- Use the included USB cable to connect it to the computer
- When connected, the PC will recognize the device as a removable disk
- Open either the photo or video folder and double-click a video file to play it or a photo to view it

### **How to playback files on a Mac computer:**



- Use the included USB cable to connect the device to the computer
- When connected, the Mac will recognize the device as a removable disk
- Open either the photo or video folder and double-click a video file to play it or a photo to view it

### **How to playback files on a Google Chromebook:**




- Connect the device to the USB port of the Chromebook
- A pop-up menu may occur; if so, select "View Files"
- If a pop-up does not occur, select the "O" icon called the "App Launcher" similar to a Windows icon button located in the bottom left corner of the screen
- Underneath the "Google Drive" are "My Drive," "Downloads," "New Services," and something else that may be named "Removable Drive"
- Select the "Removable Drive." If unsure of this step. Disconnect the device from the Chromebook and see what is no longer available under Google Drive from step 4
- After selecting the "Removable Drive," you can now navigate the folders in the main folder to find the recorded files
- Double-click to play

### How to playback files on an Android smartphone or tablet (No Apple Products):



- An OTG cable is required for this process. For all other steps, refer to the OTG cable guide at <https://spycentre.com/products/dual-android-otg-cable>, scroll to the bottom of the page, and click on user guides
- Go to your “Device Storage,” and look for external memory. Inside will be all the files you can click on to review what was captured
- For all other steps, refer to the OTG cable guide on spycentre.com

**Note:**  To playback the files on these devices, you will need to download a media player that can play in H.264 format. We recommend VLC Media Player.

### How to delete files on a Windows computer:



- Open the photo or video folder
- Right-click on the file you wish to delete and left-click delete in the pop-up menu

### How to delete files on a Mac computer:



- Open the photo or video folder
- Click and drag the file you wish to delete to the trash bin
- Empty the trash bin to delete the file from the device permanently

**Note:** If the above step is not completed on a Mac, the recorded files will not be entirely deleted from the device. You will have a phantom folder containing the deleted files that can not be seen on Mac that still take up memory space. Empty the “trash bin” to clear these files, or your recorder may run out of room.

### How to set the time and date on a Windows computer:



- Plug the device into the computer with the USB cable
- When connected, the PC will recognize the device as a removable disk
- Open the Time file
- Format the time and date this way: Year-Month-Day Hour:Minutes:Seconds Y/N.  
Example: 2023-11-11 13:30:00 Y = 11/11/2023 at 1:30 pm
- Place a “Y” to watermark the recordings or an “N” to remove the watermark
- Save the file and create a new recording to import the corrected time and date stamp



### How to set the time and date on a Mac computer:

- Plug the device into the computer with the USB cable
- When connected, the Mac will recognize the device as a removable disk
- Open the Time file
- Format the time and date this way: Year-Month-Day Hour:Minutes:Seconds Y/N.  
Example: 2023-11-11 13:30:00 Y = 11/11/2023 at 1:30 pm
- Place a “Y” to watermark the recordings or an “N” to remove the watermark
- Save the file and create a new recording to import the corrected time and date stamp

### VLC Media Player (Recommended for optimal usage)



#### How to download VLC Media Player on a Mac computer

- Go to [www.videolan.org](http://www.videolan.org) and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically start downloading, press the “Click Here” and select one of the mirrored sites
- Once completed, a new file named VLC will be visible on the desktop
- Open the folder, and in the folder, move the VLC to the “Applications Folder” by dragging and dropping it
- Once in the “Application Folder,” the VLC player will complete the installation
- Open VLC Media Player in the “Applications Folder” and drag your video files to the “Drag Here” dialog box to open and play
- If the VLC player is not installed, a change to the security and privacy settings is needed
- To access your security and privacy, click on the Apple icon on the taskbar and select “System Preferences”
- Select “Security and Privacy”
- Make sure the lock icon on the bottom of the screen is open and set to “Make Changes”
- Select the button “Open Anyway”
- VLC will now be fully installed

 


#### How to download and use VLC Media Player on a Windows computer

- Go to [www.videolan.org](http://www.videolan.org) and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically begin downloading, press the “Click Here” and select one of the mirrored sites
- Once downloading has been completed, select run and install
- Once finished, a VLC icon will now be available on your PC
- To default, open a file in VLC Media Player, right-click on the file you wish to open and select “Open With,” and choose VLC

- To change all files to default, open with VLC Media Player: Right-click and choose “Properties,” then click on the “Change” button next to “Open With” and change it to VLC, then press ok. Now the files will default open with VLC

**Note: If the memory folder of the recorder does not automatically open when connected to a PC, disconnect the device and perform the following.**



1. Type “Control Panel” in the search bar and select “Programs”
2. Under “Default Programs,” click “Change Default Settings for Media or Devices”
3. Under “Removable Devices,” select “Open Folder” to view files
4. Save and reconnect the device to the computer

The Spy Gear Superstore® Since 1993