

## 9229 - Mini WIFI Security Camera with Rotatable Lens

### How to charge the battery:

- Connect the recorder to a PC or USB power supply with the provided USB to USB cable
- It takes 4 hours to fully charge
- **Green light** = Charging
- **Light off** = Fully Charged



**Note: Make sure the unit is fully charged and insert an SD card up to 256GB.**

### How to turn on the camera:

Flip the on and off switch to the on position. The indicator light will then turn red, with a blue blinking light to indicate it is searching for a WIFI signal.

### How to turn off the camera:


Flip the on and off switch to the off position. The indicator lights will power off.

### How to connect to the camera's WIFI signal:

- Download the HomeEye app from the "iOS App Store" or the "Google Play Store"
- Turn on the device. A blue light will blink to show it is searching for a WIFI signal
- Enter your phone or tablet settings and go to the "WIFI Settings." Search for the camera's WIFI signal (AYS-xxxxxx) and click on it



**Note: If at any point in this process, your phone asks you whether to keep trying WIFI or connect with cellular service, click on the option to stay with WIFI**

- Once your phone or tablet shows, it is connected to the camera's WIFI signal, enter the HomeEye application. The camera will be listed on the homepage of the app. Click on the camera to view the live stream and verify your connection

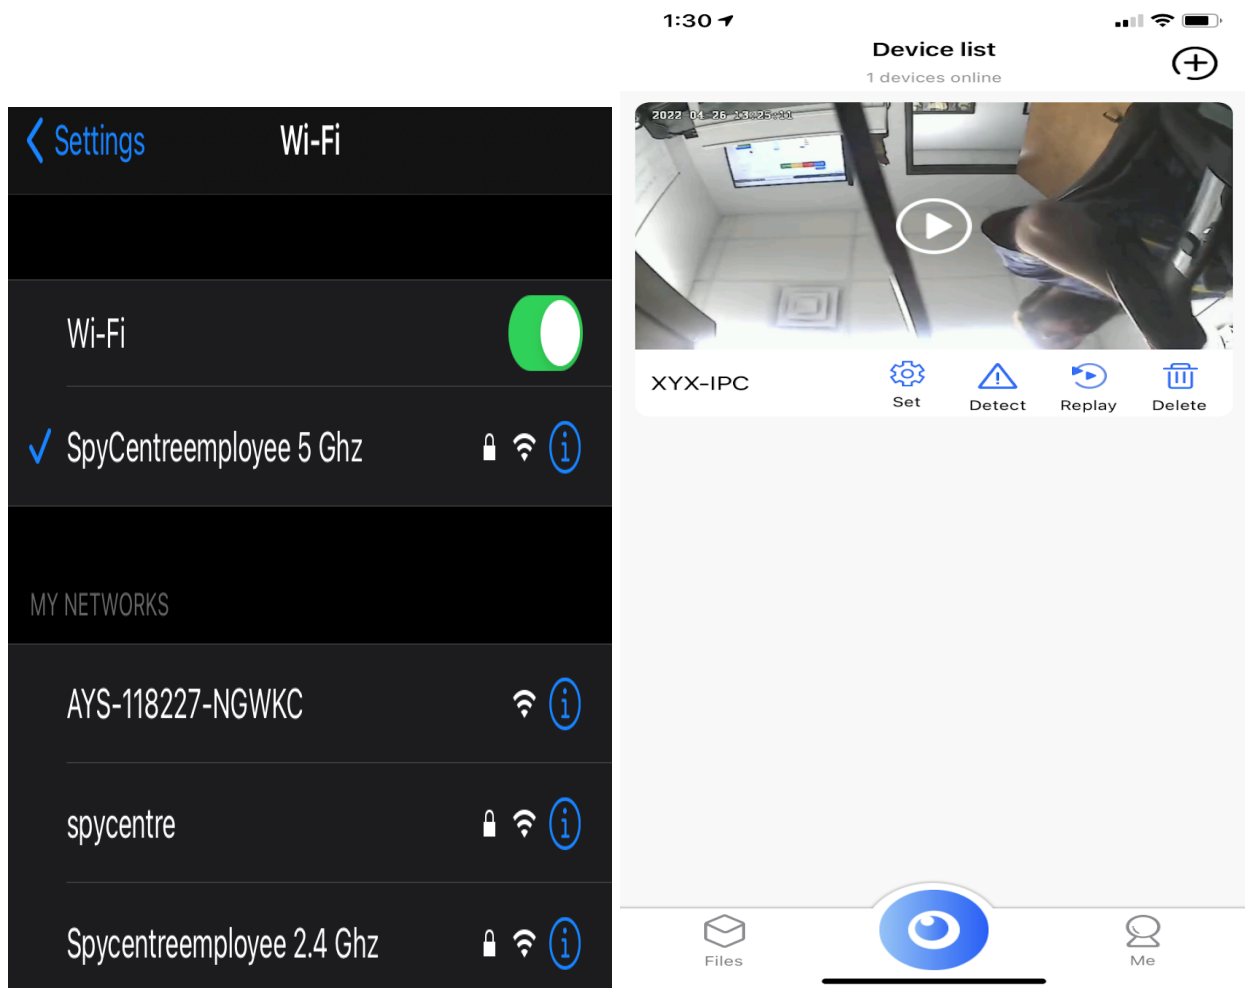


## How to set up the WIFI Connection for remote access:

  - Once connected to the camera's WIFI signal, click on the "Cogwheel Settings Icon" next to the camera on the homepage of the HomeEye app
- Click on "WIFI Settings." Find the name of the WIFI router you wish the camera to connect with and click on it. Then input the password for the WIFI router and click next
- The camera will reboot and connect with the WIFI network if the password is input correctly
- Verify the camera is connected to the home or office WIFI network by checking which WIFI signal your phone or tablet is connected to or by taking yourself off of WIFI and using cellular service and clicking the big "Play Button" on the camera to enter the live stream

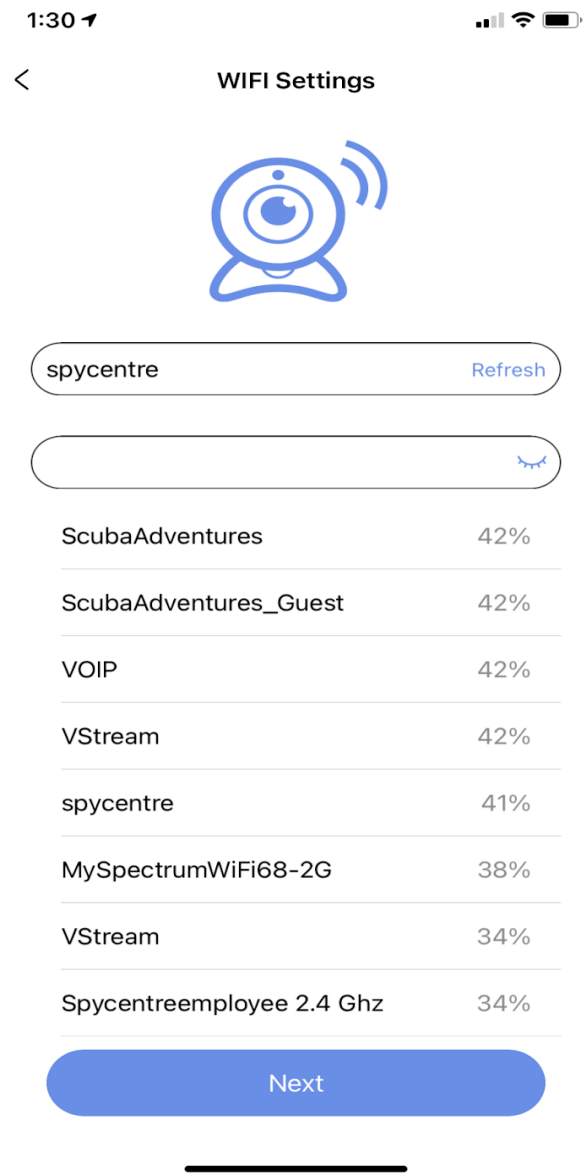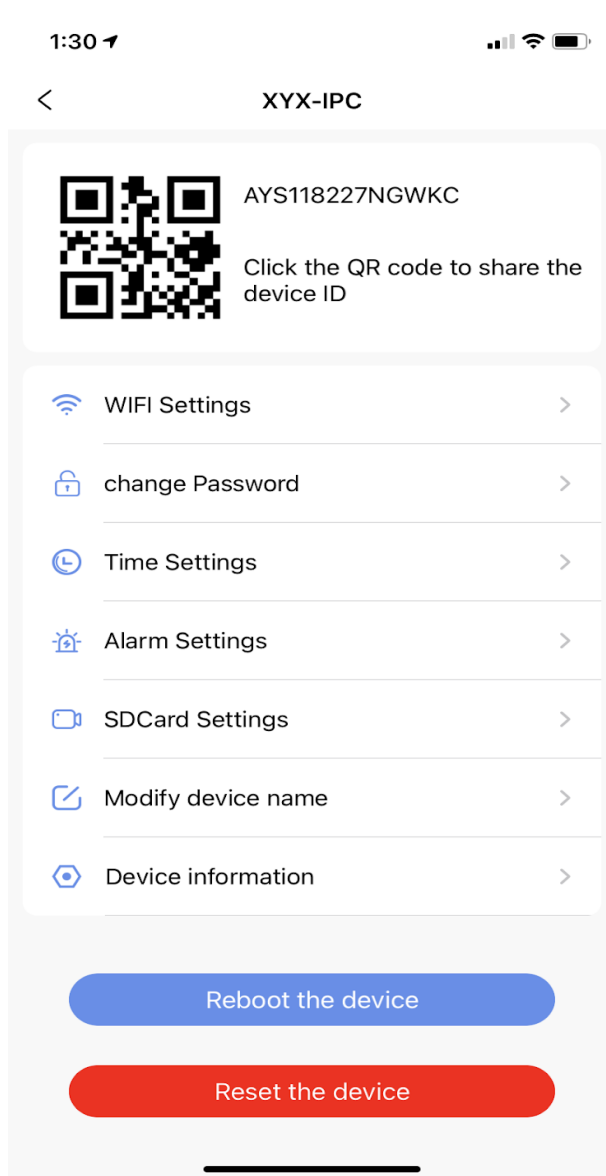


### How to set up motion recording, scheduled recording, and continuous recording:

 - Once connected to the camera's WIFI signal, click on the "Cogwheel Settings Icon" next to the camera on the homepage of the HomeEye app
- Click on "SD Card Settings." You can set the maximum file length and pick different recording modes, including "Alarm" (Motion Activated), "Timing" (Scheduled), and "Throughout" (Continuous)

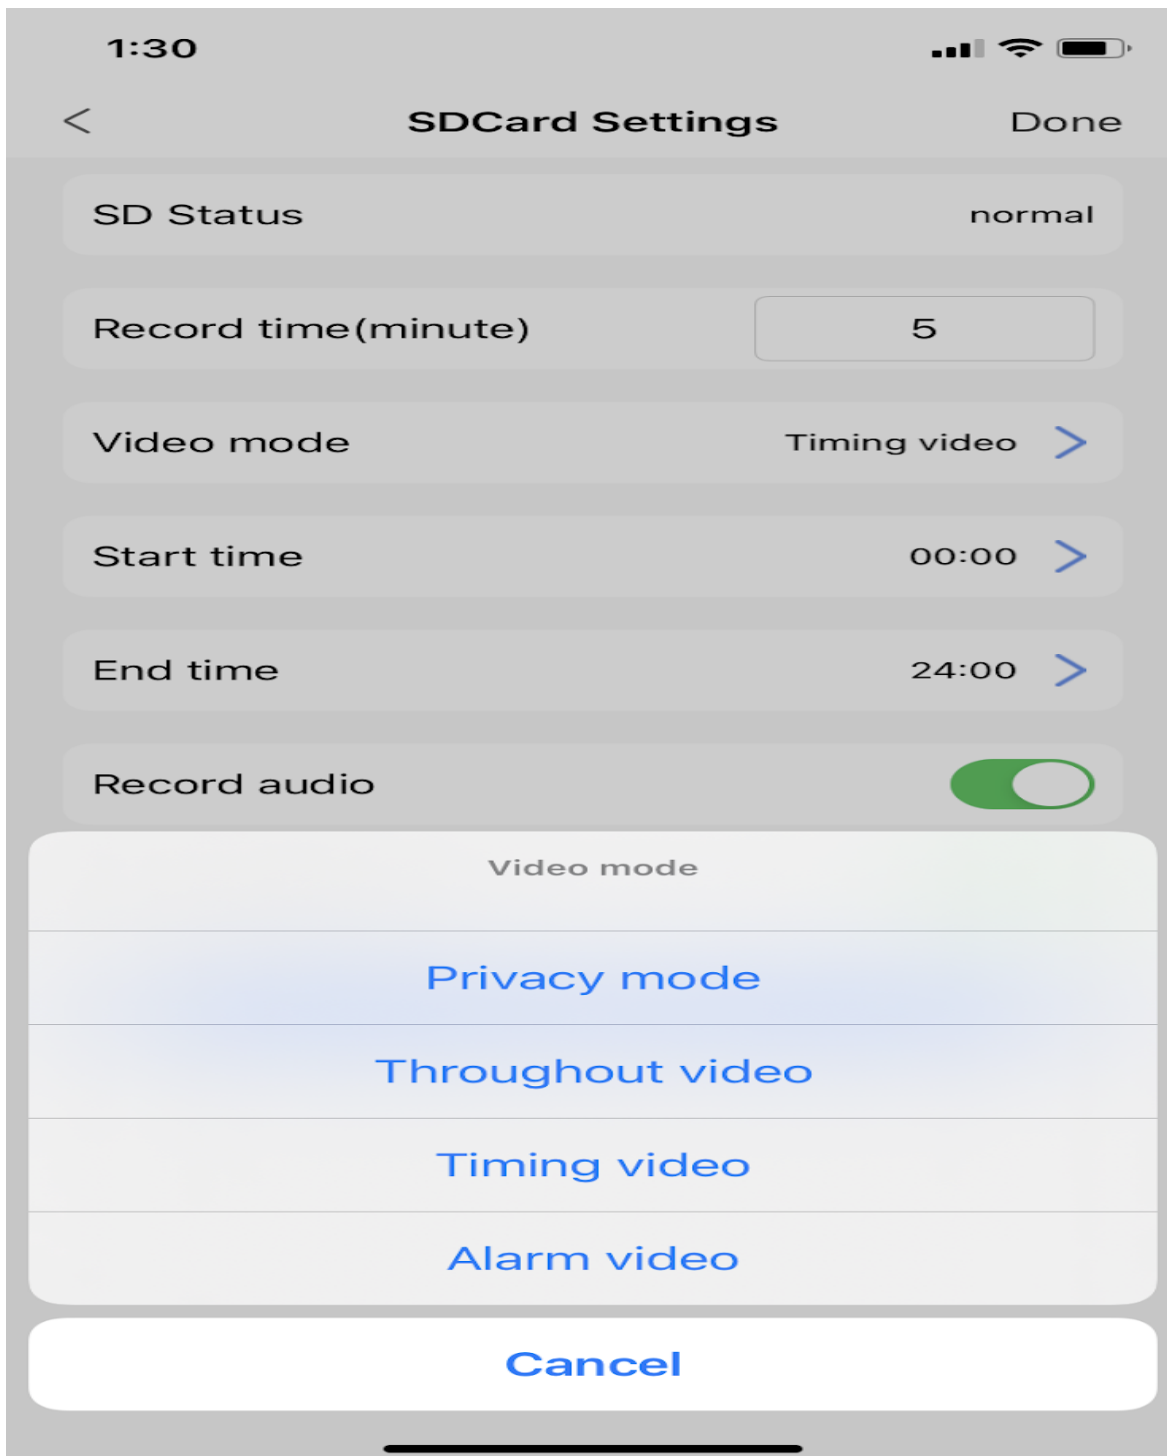



## How to live stream, record video, take photographs, turn on the night vision and enable audio:

 - Click the "Play Button" over the camera feed from the homepage to begin viewing the live-stream footage
- Click the "Video Camera" icon to record a separate video in the "Files Section"
- Click the "Photograph Button" to save a photo to the "Files Section"
- Click the "Lightbulb Icon" to turn on or off the night vision
- Click the "Cogwheel Button" to go into "Settings"
- Click on the "Speaker Icon" to listen through the security camera

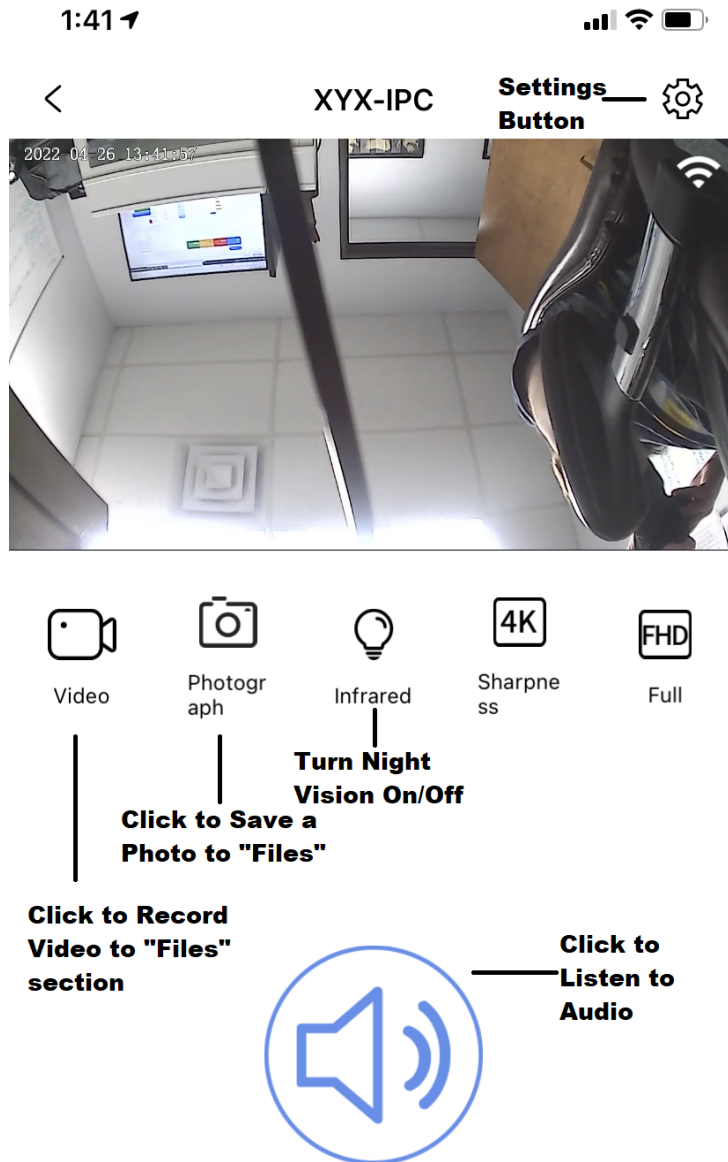

## How to review recordings:

 - To view "Motion Activated Alert Images," click on the "Detect Icon." Click the three dots at the top of the screen to open sharing options
- To view recordings stored on the SD card, click the "Replay Icon." To save files to the HomeEye app, click the download icon next to the recording in the recording list
- To view recordings or photos stored on the application, click on "Files"
- The video and photos sections within "Files" are separated by date to organize your recordings and pictures
- When viewing a recording or a photo from these sections, click the three dots at the top of the screen to open sharing options

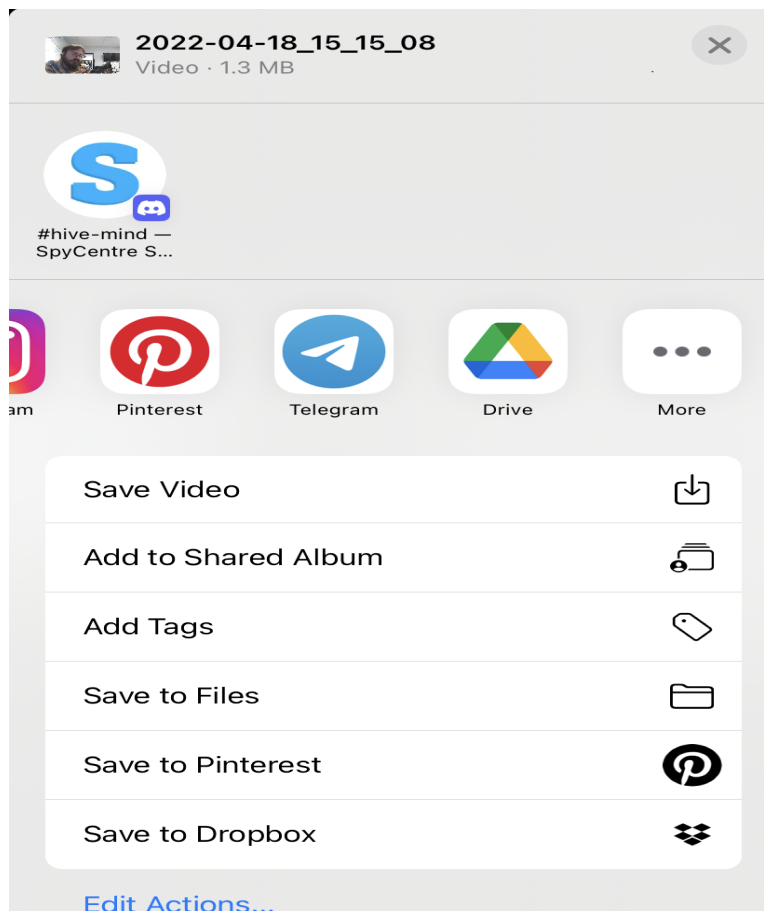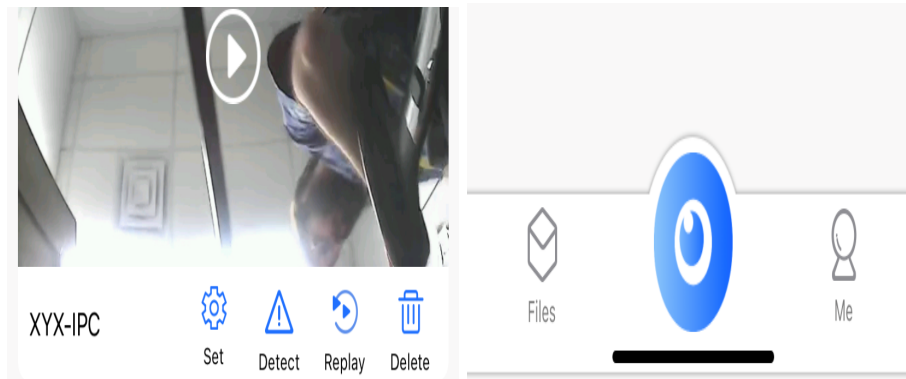

### How to playback files on a Windows computer:



- Remove the micro SD card from the device and connect it to the computer with the included SD card reader
- The PC will recognize the device as a removable disk
- Open the “Record” folder and double-click the file you wish to play

### How to playback files on a Mac computer:



- Remove the micro SD card from the device and connect it to the computer with the included SD card reader
- The Mac will recognize the device as a removable disk
- Open the “Record” folder and double-click the file you wish to play

### How to playback files on a Google Chromebook:



- Connect the device to the USB port of the Chromebook
- A pop-up menu may occur; if so, select “View Files”
- If a pop-up does not occur, select the “O” icon called the “App Launcher” similar to a Windows icon button located in the bottom left corner of the screen
- Underneath the “Google Drive” are “My Drive,” “Downloads,” “New Services,” and something else that may be named “Removable Drive”
- Select the “Removable Drive.” If unsure of this step. Disconnect the device from the Chromebook and see what is no longer available under Google Drive from step 4
- After selecting the “Removable Drive,” you can now navigate the folders in the main folder to find the recorded files
- Double click to play

### How to playback files on an Android smartphone or tablet (No Apple Products):



- An OTG cable is required for this process. For all other steps, refer to the OTG cable guide at <https://spycentre.com/products/dual-android-otg-cable>, scroll to the bottom of the page and click on user guides
- Go to your “Device Storage,” and look for external memory. Inside will be all the files you can click on to review what was captured
- For all other steps, refer to the OTG cable guide on spycentre.com

**Note:**  To playback the files on these devices, you will need to download a media player that can play in MP4 format. We recommend VLC Media Player.

### How to delete files on a Windows computer:

- Open the “Record” folder
- Right-click on the file you wish to delete and select “Delete”
- Files can only be deleted through a PC or Mac

### How to delete files on a Mac computer:

- Open the “Record” folder
- Right-click on the file you wish to delete and select “Delete”
- While the device is still plugged into the Mac, go to your trash folder and empty the trash

**Note: If the above step is not completed on a Mac, the recorded files will not be entirely deleted from the device. You will have a phantom folder containing the deleted files that can not be seen on Mac that still take up memory space. Empty the “trash bin” to clear these files, or your recorder may run out of room.**

### VLC Media Player (Recommended for optimal usage)

#### How to download VLC Media Player on a Mac computer

- Go to [www.videolan.org](http://www.videolan.org) and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically start downloading, press the “Click Here” and select one of the mirrored sites
- Once completed, a new file named VLC will be visible on the desktop
- Open the folder, and in the folder, move the VLC to the “Applications Folder” by dragging and dropping it
- Once in the “Application Folder,” the VLC player will complete the installation
- Open VLC Media Player in the “Applications Folder” and drag your video files to the “Drag Here” dialog box to open and play
- If the VLC player is not installed, a change to the security and privacy settings is needed
- To access your security and privacy, click on the Apple icon on the taskbar and select “System Preferences”
- Select “Security and Privacy”
- Make sure the lock icon on the bottom of the screen is open and set to “Make Changes”
- Select the button “Open Anyway”
- VLC will now be fully installed




## How to download and use VLC Media Player on a Windows computer



- Go to [www.videolan.org](http://www.videolan.org) and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically begin downloading, press the “Click Here” and select one of the mirrored sites
- Once downloading has been completed, select run and install
- Once finished, a VLC icon will now be available on your PC
- To default, open a file in VLC Media Player, right-click on the file you wish to open and select “Open With,” and choose VLC
- To change all files to default, open with VLC Media Player: Right-click and choose “Properties,” then click on the “Change” button next to “Open With” and change it to VLC, then press ok. Now the files will default open with VLC

**Note: If the memory folder of the recorder does not automatically open when connected to a PC, disconnect the device and perform the following.**

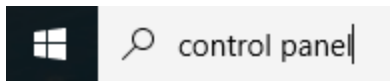

1. Type “Control Panel” in the search bar and select “Programs”
2. Under “Default Programs,” click “Change Default Settings for Media or Devices”
3. Under “Removable Devices,” select “Open Folder” to view files
4. Save and reconnect the device to the computer

The Spy Gear Superstore® Since 1993