

GPS Tracking Platform User Guide

Table of Contents:

Accessing GPS Tracking Platform and Mobile App	1
Mobile App Guide	2
Complete Website Guide	8
Troubleshooting FAQ	25

For additional assistance and tech support you can create a ticket in the portal.

You can also reach SpyCentre Security at 1-800-292-7748 Monday through Friday from 9 am to 5 pm CST to assist you with creating a ticket for tech support.

Accessing GPS Platform Mobile App

Download 3DTracking Tracking Services



Your username will be your email address. Your default password is **Pro@ctive2024**

Important: Change the default password by clicking on "Forgot Password." An email will be sent so that you can change your password to a unique one

The 3D Tracking Mobile Application provides fast, simplified information such as live data and historical playback. For more information, such as reports and alerts, use the website <u>proactivegps.com</u>.

Home Page Guide Mobile App:

- 1. Vehicle Information:
 - a. Live information and historical playback.
- 2. Map Current Information:
 - a. Current location, street view.
- 3. Layer Switch:
 - a. Change map type.

4. Top Menu:

a. Messages, alerts, admin preferences, log out.



1: Vehicle Information Guide:

The vehicle filter allows you to access information about the current location as well as the history of the vehicle.

Today Playback:

- Located on the vehicle information tab is a stop button
- Tap the stop button to pull up trip information.
- Tap the green information button.
- Once filtered, you can tap the vehicle information button to expand and minimize the map.



History Playback:

After opening the vehicle information tab, click on the filter icon.

Information Can be Displayed by Today or History:

- Select the vehicle and press the filter button.
- Choose the vehicle and the date range for the information and press the filter button.
- Once filtered, you can tap the vehicle Information button to expand and minimize the map.
- This will display the entire trip; if an extensive date range was selected in history, then all trips will be displayed.
- Click the green information icon for more isolated information, then tap the summary.
- Tap on the individual trips to show them on the map.



2: Map-Current Information:

• Information regarding the current and last known location will be displayed. If the vehicle is in motion, the map will consistently update with the new information. Google Street View will be displayed if you tap the person icon on the map.



4: Layer Switch:

When the tab is open, you can select between a few display options. All information is provided through Google Earth. To exit this menu, tap on the map.

- Base Layers:
 - Road: General road information
 - Satellite: Google Maps without information
 - Hybrid: Road information with Google Maps
- Overlays:
 - Show Vehicle: Current vehicle location

Show trip icons will display extra information, such as vehicle routes.

	3D tracking	⊠⊅	۲
(C) 35 ⁴	Layer Switcher		\otimes
1 1 B	Base Layers		
ALLA .	Hybrid		٥
and the second	Overlays		
2	Name		
E 7	Show vehicles		~
	Show route Marke	rs	~
	Show trip icons		2 2 2 2
Groule			

4: Top Menu:

The top menu will display any messages, alert notifications, and all for preference changes.

- Messages:
 - Messages will be displayed here for tech support.
- Alert Notifications:
 - The alerts for geo-fence, no-go areas, and low battery will be stored here.
- Preferences:
 - Custom map and tracking preferences can be adjusted here. If information is changed from the following setting and needs to be defaulted, follow the following settings.

₹		cking 🖂		Tracking	
Messages	Alerts			Admin 🗸	Alerts
Select action: Page:	Filter:	Preset filters:			Filter:
Please select O 1 C		Today	0	Preferences	
	Priority:	Status: t » Please select		Logout	Priority: Please
Date - Message	Vehicles:			Logout	Vehicles:
15 Jan Ticket	Please selec	t » C			Please
	¢ ≎ Name ≎ Tyj	be 🗘 Unit Name 🗘 Status 🗘 L	.ast Updated		¢ ¢ Name
		F	Row Count: 0		

Preferences	Preferences	Preferences
Timezone	SYSTEM MAP PREFERENCES TRACKING	Move active inputs
(GMT -06:00) Central Time (US & Canada)	Map type	Reset zoom on auto update
Language	Google \diamond	Show last known driver
English	Base Layer	Hide Additional Diagnostic
Distance Measurement	Hybrid (Google)	Info Show inactive inputs
Miles	Show Google POI Points	Show unit as arrow
Litres or Gallons	Show vehicles	
Gallons (US)	Show vehicle icon	
Date format	Show vehicle label	Show diagnostic data
dd MMM yyyy e.g. 21 Jun 2009	Dynamic label size when zooming	Show input/output status
Celsius or Fahrenheit	Show labels in unit status	Show driver name
°F O	colour	Show last data
Messages per page		Show Last GPS Time
10 0		Show vehicle location
Delete Messages Older Than		Show odometer/engine
365 Days 0		Show todays activity
_		
Save	Save	Save

Accessing The GPS Platform Website

Website: https://proactivegps.com/

Your username will be your email address. Your default password is **Pro@ctive2024**

Important: Change the default password by clicking on "Forgot Password." An email will be sent so that you can change your password to a unique one

When you log in to the website for the first time, if you receive the 3D Tracking page, log in at the top right of the screen.



Note: There are two different layouts for the website. Full Website and mobile website, both layouts will be covered in this guide

Home Page Guide Full Website:

- 1. Vehicle Information:
 - Live information, historical playback
- 2. Draw tool: Hand tool, geo-fence, no-go area
 - Setting up an area alert

3. Map, Current Information:

- Current location, street view
- 4. Report Tab: Location management, report center, alert manager
 - Manage location information, review and download reports and alerts

5. Layer Switch:

• Change map type

6. Top Menu:

 Messages, tickets, alerts, admin preferences, log out, changing full to mobile view



1: Vehicle Information Guide:

The vehicle filter allows you to access information about the current location as well as the history of the vehicle.

Information can be displayed by today or history.

Today Playback:

- A stop button is located on the vehicle information tab.
- Tap the stop button to pull up trip information.
- Once filtered, you can tap the vehicle information button to expand and minimize the map.





History Playback:

- To enter the history playback, tap the blue filter Icon on the top left.
- Select the history tab.
- Select the vehicle and press the filter button.
- Once filtered, you can tap the green vehicle information button.
- This will display each trip; if an extensive date range was selected in history, then all trips will be displayed.
- Tap on the individual trips to show them on the map.
- Press the play button to replay the trip.
- For more isolated information, such as stops, click the green information icon, then tap the summary.









2: How to set up a Geo-Fence: Alerts Upon Exit of Zone

- Select the draw tool next to the hand icon near the vehicle information tab.
- Draw the area you want to isolate.

Note: If a draw tool is absent, zoom in closer to the map.

- Once the area is fenced off, you can name and customize the location.
- Choose geo-fence and save.
- Now that the area is marked on the map, an alert can be assigned.
- Select the alert tab on the top right of the screen.
- Select geo-fence and press the plus button.
- Now, you can create the specific alert and assign the geo-fence created and what happens when the alert is triggered.



PRACTIVE				16: Jan 2024 16:08 🗘 🔖 🖂 🏟 🔒
PRŮACTIVE GPS				
LOCATION SETTINGS	Loc	Edit Location -		\otimes
Location Management		Name:	SpyCentre	
	Filte	Description: (255)		
		Group:	Unassigned	
		Address 1:		
		Address 2:		
		Address 3:		
		Address 4:		
		ZIP/Postcode:		
		Country:		
		Line Colour:		TEREBRARBERAR E DE ANT
		Intensity:	(40%	
		Longitude/Latitude:	-96.7094 / 33.0307	
				+ 5
				nterprise Dr Enterprise Dr Enterprise Dr
				Google Keyboard shortcuts Map Data 20 m G7
		Save Delete		



		16 Jan 202	4 16:08 .	4 🔖 🖂	3 🌣 🗖
GPS		Tracking	Admin	Reports	Alerts
ALL ALERTS	Geofence Alert				
All Alerts	Filter:				
ACTIVITY ALERTS					Œ
Battery Level		≑ Enable	d	🕈 Status	
SECURITY ALERTS					Row Count: 0
Geo-Fence					
No-Go Zone					
1					

PRÉACTIVE				4 16:09 (7 🔶 🖂	\$\$ G
PROACTIVE						
ALL ALERTS	Geofen	Geofence Alert				\otimes
All Alerts	Filter:	SETTINGS SCHEDULE				
ACTIVITY ALERTS		Name:	Office			
Battery Level	\$ Na	Unit/Tag:	(•)			
SECURITY ALERTS		Geo-fence:	SpyCentre »			
Geo-Fence		Block editing:	SpyCentre »			
No-Go Zone		Enabled:				
		Priority:				
		Send To:				
		Users:	All users >>>			
		Alerts Inbox:				
		SMS:				
		Warn Driver:				
		Email: iOS / Android:				
		Editable By:	-			
		-				
		Users:	All users »			
		Alert Actions:				
		Alert Action Template:	(Please select ᅌ			
		Save				

How to set up a No-Go Zone: Alert Upon Entry of Zone

- Select the draw tool next to the hand icon near the vehicle information tab.
- Draw the area you want to isolate.

Note: If a draw tool is absent, zoom in closer to the map.

- Once the area is fenced off, you will be able to name and customize the location
- Choose the no-go zone and save.
- Now that the area is marked on the map, an alert can be assigned.
- Select the alert tab on the top right of the screen.
- Select the no-go zone and press the plus button.
- Now, you can create the specific alert and assign the no-go zone created and what happens when the alert is triggered.





PRŮACTIVE GPS							16 Jan 2024 16	5:13 🗘 ┡ 🖡	X 🗘 🗖
GPS							Tracking A	dmin Reports	s Alerts
ALL ALERTS	No-Go	Zone Alert							
All Alerts	Filter:								
ACTIVITY ALERTS									Œ
Battery Level	¢ Na	ame 🗘 🗘 Alert	t type	≑ Owner	\$ Start	\$ End	Enabled	≑ Status	
SECURITY ALERTS									Row Count: 0
Geo-Fence									
No-Go Zone									
a							16 100 0004 16		X X I
PREACTIVE								::14 🗘 🔖 🛙	
GPS								anin Reports	s Alerts
ALL ALERTS	No-Go	No-Go Zone d	Alert						
All Alerts	No-Go Filter:	No-Go Zone A	Alert						s Alerts
ALL ALERTS ALL ALERTS ACTIVITY ALERTS	Filter:	SETTINGS Name:		Water park	4				s Alerts
ALL ALERTS ALL ALERTS ACTIVITY ALERTS Battery Level	_	SETTINGS		Water park	1		Tracking A		s Alerts
ALL ALERTS ALL ALERTS ACTIVITY ALERTS Battery Level SECURITY ALERTS	Filter:	SETTINGS Name: Unit/Tag:		(\oplus)		»)			s Alerts
ALL ALERTS ALL ALERTS ACTIVITY ALERTS Battery Level	Filter:	SETTINGS Name: Unit/Tag: No-go zone:	SCHEDULE	(\mathbf{F})	19	») »)	Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag:	SCHEDULE	() = GL320_725	19		Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: No-go zone: Block editing:	SCHEDULE	() = GL320_725	19		Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: No-go zone: Block editing: Enabled:	SCHEDULE	= GL320_725	19		Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: No-go zone: Block editing: Enabled: Priority: Send To: Users:	SCHEDULE	€ GL320_725 Ft worth p M All users	19		Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: No-go zone: Block editing: Enabled: Priority: Send To:	SCHEDULE	€ (GL320_726) Ft worth p 	19	»	Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: Block editing: Enabled: Priority: Users: Alerts Inbox: SMS: Warn Driver:	SCHEDULE	(gL320_725) Ft worth p 	19	»	Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: Block editing: Enabled: Priority: Send To: Users: Alerts Inbox: SMS: Warn Driver: Email:	SCHEDULE	EL 320_726 Ft worth p All users Y Y	19	»	Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: No-go zone: Block editing: Enabled: Priority: Send To: Users: Alerts Inbox: SMS: Warn Driver: Email: ioS / Android:	SCHEDULE	(gL320_725) Ft worth p 	19	»	Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: Block editing: Enabled: Priority: Send To: Users: Alerts Inbox: SMS: Warn Driver: Email:	SCHEDULE	<pre> GL320_726 Ft worth p C All users V C V V V V V V V </pre>	19	»)	Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: No-go zone: Block editing: Enabled: Priority: Send To: Users: Alerts Inbox: SMS: Warn Driver: Email: IOS / Android:	SCHEDULE	EL 320_726 Ft worth p All users Y Y	19	»	Tracking A		s Alerts
ALL ALERTS ALL ALERTS ALL ALERTS Battery Level SECURITY ALERTS Geo-Fence	Filter:	SETTINGS Name: Unit/Tag: No-go zone: Block editing: Enabled: Priority: Users: Alerts Inbox: SMS: Warn Driver: Email: IOS / Android: Users: Users:	SCHEDULE Vehicle	<pre> GL320_726 Ft worth p C All users V C V V V V V V V </pre>	ı9 ark	»)	Tracking A		s Alerts

3: Map, Current Information:

Information regarding the current and last known location will be displayed. If the vehicle is in motion, the map will consistently update with the new information. Google Street View will be displayed if you tap the person icon on the map.

4: Report Tab:

The report tab provides the ability to review the information and set up specific alerts.

Admin:

• The admin tab will give access to the locations marked with either a geo-fence or a nogo zone and provide the ability to edit information.



PRÉACTIVE GPS					16 Jan 2024 12:29 🗸	7 萨 🖂 🏟 🗆	
GPS					Tracking Admin	Reports Alerts	
LOCATION SETTINGS	Location Manageme	ent					
Location Management	LOCATIONS GRO	DUPS					
	Filter:	Location Type: Please select	»			t 🕀	,
	▲ Name	◆ Type ◆ Group	♦ Address	≑ Type	ocation Diameter (Feet)	♦ Created Date	
	E Ft worth park	No-Go Zone Unassigned	32.747520 / -97.326650	Polygon N/A		16 Jan 2024	
	SpyCentre	Geo-Fence Unassigned	33.030660 / -96.709360	Polygon N/A		16 Jan 2024	
						Row Count:	2

PRMACTIVE						16 Jan 2024 12:29	🗘 🔖 🖂	🌣 🖬
PRŮACTIVE GPS						Tracking Adm	nin Reports	Alerts
LOCATION SETTINGS	Loc	Edit Location -						\otimes
Location Management		Name:	SpyCentre		87 0 0 +		7	0
	Filte	Description: (255)			341.4L			
		Group:	Unassigned	٥	A diame		-	1
		Address 1:				H - ALL A	8 51	9/34
		Address 2:				. 14	SAU	
		Address 3:				· · · · · · · · · · · · · · · · · · ·		54
		Address 4:				and the second	22.24 ·	E
		ZIP/Postcode:					11	
		Country:			the grant	-		-
		Line Colour:				GERR'SE CAR		
		Intensity:	(40%	٢	E BALL		a so h sea	
		Longitude/Latitude:	-96.7094 / 33.0307		808	B RECENCER		-
					Star Valle and			and the second
						TAL MA	BABBAR .	CA A
					31		- Farmered	+ 6
					nterprise Dr	Enterprise Dr	EnterpriseDr	
					Google	oard shortcuts Map Data		Terms
		Save Delete						

Reports:

This is where detailed information can be viewed, stored, or saved. The activity report will display stopped information, and the detailed report will provide all movement data. The security report is where the geo-fence activity and no-go-zone activity can be reviewed as a report. Reports can also be specifically scheduled to occur and stored.

Reports How To:

- When clicking on reports, several options are available.
- For a stop report, highlight the stop under the activity reports.
- The most important thing is to add a vehicle, and when deciding on a stop time, a duration of 5 minutes provides the most accurate data.
- Press ok.
- Once the status is completed, you can view the information through the site (HTML) or choose one of the download file options.
- From here, there is a world icon on the right side of each event, and when clicked on, it will show the location on a map.



PRACTIVE								16 Jan 202	4 12:29 🌡	¢ 🥟 🖂	¢ □
PRŮACTIVE GPS								Tracking	Admin	Reports	Alerts
REPORT SCHEDULES	Stop										
Schedules	INSTANT REPO	RT PRE	EVIOUS R	EPOR	TS	SCHEDULED REPORTS					
ACTIVITY REPORTS	Criteria:										
Stop	cifteria.										
Detailed Data	Name:			C							
SECURITY REPORTS	Unit/Driver:			Ð)						
Geo-Fence		Vel	nicle =	A	ll ve	nicles	\gg				
No-Go Zone	Start:			1	1 Jan	2024 00:00					
	End:			1	2 Jan	2024 23:59					
	Stop duration:			6	>	2021 20100					
				5	ノ		Minutes				
	Summarize:			L			_				
	Report format:			(1	NEB	<)				
	Columns:										
	Field	Di Age	gregate			Available Fields					
	Vehicle			Ξ		Google Map Link					
	Driver		one ᅌ								
	Location	Co	ount ᅌ								
	Start	m	in ᅌ								
	End	m	ax 🔿	Ξ							
	Duration	(su	um 🗘	Ξ							

PRACTIVE			16 Jan 2024 12:	:29 🗘 🍆 🖾 🛱 🔒
PR ^B ACTIVE GPS			Tracking Ad	dmin Reports Alerts
REPORT SCHEDULES	Stop			
Schedules	INSTANT REPORT PREVIOUS REPORTS	SCHEDULED REPORTS		
ACTIVITY REPORTS	Filter:			
Stop				C
Detailed Data		♦ Status		
SECURITY REPORTS	♦ Name Stop		2024 09:40:30	Downloads
Geo-Fence				
No-Go Zone			HTML XLS PC	DF CSV

 Vehicle 	×					
		100 v items per page				1 - 1 of 1 items
Driver	· ~	Location	~	Start ~	End \vee	Duration (hh:mm) \sim
 Vehicle 	e: GL320_99	999				C
		33.0304 / -96.7093 [33.0304 / -96.7093]		11 Jan 2024 08:31:39	12 Jan 2024 23:59:59	39:28
		1		11 Jan 2024 08:31:39	12 Jan 2024 23:59:59	39:28
		1		11 Jan 2024 08:31:39	12 Jan 2024 23:59:59	39:28



Detailed Data Reports:

The difference with the detailed report is that it will display all information regarding the trip. These data reports can only be a week at a time but are excellent for scheduling.

- Like the stop report, select the device and the time frame to run.
- Once the status is completed, you can view the information through the site (HTML) or choose one of the download file options.
- At the bottom of the report is a movement started and ended section where the entire trip can be displayed on a map. This trip information can also be accessed from the downloaded report.
- Detailed data reports can display one week's worth of data.

	MAC		6 _									1	6 Jan 2024	4 12:29 .	4 🕟 e	a 🏟	
	GP:	S	_									Tra	icking	Admin	Reports	Alert	ts
REPORT	SCHEDULES	S	Det	ailed Dat	a												
Schedu	lles			INSTANT RE	EPORT	PREVIOUS	REPORTS	SCHEE	ULED REPOR	TS							
ACTIVITY	Y REPORTS		Filt	or:											ē 1		
Stop			Pito	ei.										G			
Detailed	d Data		¢ Na	me		_		\$ State	us 🗘 🗘 Ru	n dat	e	Dov	vnloads				
SECURIT	Y REPORTS			Detailed	Data			Compl			24 09:43:)		
Geo-Fei No-Go												//	11				
									нтм		LS PI	DF	sv	,			
PRÉ	JACTI GPS	VE De	tailed Data r	eport from 0	8 Jan 2024	00:00 to	14 Jan 202	4 23:50									
Trip 34326529327	GL320_9999	Date/	Time A	ddress 2 / -96.7094 22 / -) Latitude 33.030198	Longitu -96.7		sading	Speed (mph)	No	Ignition	Inputs/Output	ts Varia	ble Inputs	map		Map Link Map Link
Trip	Vehicle	Date/ 08:31:33	Time A 24 33.030 [33.030 96.709	ddress 2 / -96.7094 12 / - 4]	Latitude	-96.3	ide He	ading		No	Ignition	Inputs/Outpu	ts Varia	ble Inputs	map	Google	
Trip 34326529327	Vehicle GL320_9999	Date/ 11 Jan 20. 08:31:33 11 Jan 20. 08:31:39	Time A 24 33.030 [33.034] [33.034] 36.709 24 33.030 [33.034] [36.709] 36.709	ddress 2/-96.7094 22/-96.7094 4/- 4/- 3]	Latitude 33.030198	-96.7 -96.7	ide H	sading 46	13 0	No	Ignition	Inputs/Outpu	ts Varia	ble inputs		Google Google	Map Link
Trip 34326529327 34326529327	Vehicle GL320_9999 GL320_9999 GL320_9999 GL320_9999	Date/ 11 Jan 20 08:31:33 11 Jan 20 08:31:39 11 Jan 20 08:33:16	Time A 24 33.030 [33.030] 96.709 24 33.030 [33.033] 96.709 24 33.030 [33.033] 96.709 24 33.030 [33.034] 96.709	ddress 2/-96.7094 22/-96.7094 42/- 4/-96.7093 34/- 3] 7/-96.7093 3]	Latitude 33.030198 33.030420	-96.1 -96.1	1 de H 709403 709288	ading 46 1	13 0	No No No	Ignition	Inputs/Outpu	ts Varia	ble Inputs	map	Google I Google I Google I	Map Link Map Link Map Link
Trip 34326529327 34326529327 34326529327 34326529327	Vehicle GL320_9999 GL320_9999	Date/ 11 Jan 20. 08:31:39 11 Jan 20. 08:33:16	Time A 24 33.030 [33.030] 96.709 24 33.030 [33.033] 96.709 24 33.030 [33.033] 96.709 24 33.030 [33.034] 96.709	ddress 2/-96.7094 22/-96.7094 4/- 4/- 3]	Latitude 33.030198 33.030420 33.030679	-96.1 -96.1	ide Hi 709403	aading 46 46 300 300 400 400 400 400 400 400 400 400	13 0 0	No No No	Ignition	Inputs/Outpu	ts Varia	ble inputs	map	Google I Google I Google I	Map Link Map Link
Trip 34326529327 34326529327 34326529327 34326529327	Vehicle GL320_9999 GL320_9999 GL320_9999 GL320_9999	Date/ 11 Jan 20 08:31:33 11 Jan 20 08:31:39 11 Jan 20 08:33:16	Time A 24 33.030 [33.030] 96.709 24 33.030 [33.033] 96.709 24 33.030 [33.033] 96.709 24 33.030 [33.034] 96.709	ddress 2 / -96.7094 2 2 / /-96.7093 2 3] - 796.7093 3 9 / -96.7093 3	Latitude 33.030198 33.030420 33.030679 33.030862	-96.1 -96.1	ide Hi 709403	aading 46 46 300 300 400 400 400 400 400 400 400 400	13 0 0	No No No	Ignition	Inputs/Outpu	ts Varia	ble Inputs	map	Google I Google I Google I	Map Link Map Link Map Link
Trip 34326529327 34326529327 34326529327 34326529327 34326529327 34326529327 Movement Started	Vehicle GL320_9999 GL320_9999 GL320_9999 GL320_9999	Date/ 11 Jan 20 08:31:33 11 Jan 20 08:31:39 11 Jan 20 08:33:16 11 Jan 20 09:17:29	Time A 24 33.03 33.03 86.709 24 33.03 33.03 96.709 24 33.03 33.03 96.709 24 33.030 86.709 24 Closing	ddress 2/-96.7094 22/-96.7094 42/- 4/-96.7093 34/- 3] 7/-96.7093 3]	Latitude 33.030198 33.030420 33.030679 33.030862	-96.7 -96.7 -96.7	ide H 709403	aading 46 46 300 300 400 400 400 400 400 400 400 400	13 0 0	No No No	Ignition	Inputa/Output		ble Inputs	map	Google I Google I Google I	Map Link Map Link Map Link



Alerts:

This is where alerts such as geo-fence, no-go zones, and even battery levels can be created. Refer to the how to create a geo-fence or no-go alert section to create an alert.



PRACTIVE					16 Jan 2024 16:14 🗘 🔖 🖂 🔅 📮			
PROACTIVE GPS								
ALL ALERTS	No-Go	No-Go Zone Alert				\otimes		
All Alerts	Filter:	SETTINGS SCHEDULE						
ACTIVITY ALERTS		Name:	ater park					
Battery Level	\$ Na	Unit/Tag:						
SECURITY ALERTS			.320_7299 »	\otimes				
Geo-Fence				0				
No-Go Zone		Block editing:	worth park »					
		Enabled:						
		Priority:						
		Send To:						
		Users:	users »					
		Alerts Inbox:						
		SMS:						
		Warn Driver:						
		Email:						
		iOS / Android:						
		Editable By:						
		Users:	users »					
		Alert Actions:						
		Alert Action Template:	Please select >					
		Save						

6: Top Menu:

The top menu can access alerts, tickets, messages, and user settings. This is also where the full site can be switched between full and mobile view.

Switch Full to Mobile View: Tap the lcon in the top right corner to switch between the view models.

Note: Under mobile view, some full site options are limited.



Alerts Icon:

When an alert is set up, the individual times the alert is triggered will be archived here for quick access.



Tickets Icon:

Tickets are for any tech support question or if an issue arises. This will allow a tech support team member to review the problem and message back. Similar to the messages, conversations can be accessed under the ticket list.





Messages Icon:

Once a ticket has been submitted, the response will return as a message. Any further communication can be shared here.



User Settings Icon:

Things such as display settings, map preferences, tracking view preferences, and password updating can be adjusted. The default display settings are set for optimization and are recommended for the best results. Refer to the following images if you need to default the setting.



Set	ttings				\otimes
	SYSTEM	MAP PREFERENCES	TRACKING	PASSWORD UPDATE	
Display name:					
Display name: Timezone:			(GMT -06:00)) Central Time (US 🗢	
Lang Dista Litre Spee Fuel Date Cels Mess Dele Stari Play Mess	guage:		English	٢	
Dista	ance Measur	ement:	Miles	٢	
Litre	s or Gallons	:	Gallons (US)	٢	
Spee	ed:		(Miles/h	٢	
Fuel	Economy:		Miles/Gallon	(US) (mpg) 🗘	
Date	e format:		dd MMM yyy	y e.g. 21 Jun 2009 ᅌ	
Cels	ius or Fahrer	nheit:	(°F	٢	
Mess	sages per pa	ge:	(10	٢	
Dele	te Messages	Older Than:	365 Days	٢	
Star	t Screen:		Tracking	٢	
Play	Audible Aler	t:	Off	٢	
Mess	sage Notifica	tion:	No	٢	

Settings					\otimes	
SYSTE	MAP PREFERENC	ES TRACKING	PASSWORD UPDAT	re		
Map type:		Google	0)		
Base Layer:		(Hybrid (Goo				
Show Google	POI Points:	0				
Dynamic labe	l size when zooming:	~ @				
Show Driver M	lame As Unit Label:					
Cluster Vehic	es:					
	Show	/ Groups Icor	n Label Areas	Zoom	Colour Code Label	
Vehicle						1
Show traffic						
Interactive T	rip Graph 🔽					
Save						

Settings				\otimes
SYSTEM	MAP PREFERENCES	TRACKING	PASSWORD UPDATE	
Move active inpu	ts:			
Reset zoom on a	uto update:	0		
Show last known	driver:	0		
Hide Additional D	Diagnostic Info:			
Show inactive inp	outs:	0		
Show unit as arro	ow:	0		
Show vehicle des	scription:			
Show diagnostic	data:			
Show input/outp	ut status:			
Show driver nam	e:			
Show last data:				
Show Last GPS T	ime:			
Show vehicle loc	ation:			
Show odometer/	engine hours:	0		
Show todays acti	vity:			
Highlight latest t	rip:	Yes	٥ (٥	
Address format:				
	Address Element			
	Street Address			
	Location			
	Latitude/Longitude			
	[Latitude/Longitude	2]		
Sava				
Save				
Save				

FAQ:

Q: I need help with my device. What do I do?

A: Open a Support Ticket located on the Top Menu, and a Tech Support Assistant will be with you shortly. Our support hours are Monday through Friday from 9 am to 5 pm CST.

Q: Why isn't my device showing up on the map?

A: The device is either not on, has no power, or is in a position where it can not communicate data. Turn the device on, take it outside, and go for a short walk.

Q: How can I find an exact address for where the device currently is?

A: The location of the device is given in longitude and latitude. You can highlight this on the website or through the app, open a map app, or Google Maps and paste.

Q: Where is the battery percentage?

A: The battery percentage will be located above the tracker ID in the Vehicle Information Tab

Q: I'm having issues logging in. Is there something I'm doing wrong?

A: The username and password are cap-sensitive, so ensure the information is correct. You can always use the forgot password to create a new password.