

9321 - 1080P Security Camera Watch

How to charge the battery:

- Connect the recorder to a PC or USB power supply with the provided USB cable
- It takes 3-4 hours to charge fully
- **Red light on** = Charging
- **Red light off** = Fully charged



How to record a video file:

- Press and hold the On/Off button for 3 seconds until the Green and Blue lights are present.
- The device is ready once the Green light blinks and turns off, and the Blue light remains.
- Tap the On/Off button, and the Blue light will blink two times and disappear, indicating a recording has begun.

Note: Nightvision turns on automatically in low light, using invisible IR's

- To stop the recording, tap the On/Off button, and the blue light will return, indicating the device has saved the file and is now in standby mode.
- To turn off the device, press and hold the On/Off button, and the Green and Blue lights will blink rapidly and disappear, turning the device off.

How to record in-motion activation:

- When in standby mode, press and hold the mode button located at #4 for two seconds
- The Green and Blue light will turn on, blink rapidly, and disappear, indicating motion-activated recording has begun.

Note: Nightvision turns on automatically in low light, using invisible IR's

- To stop, tap the On/Off button again, and the light will return to a solid Blue.
- To turn off the device, Press and Hold the On/Off button long, and both lights will blink and disappear, turning the device off.

Note: Motion activation will not extend the battery life of the device. If the device runs out of power while recording, the file will be saved before turning off.

How to record audio only:

- When in standby mode, tap the mode button located at the #4
- The Blue light will go off, and a solid Green light will be present
- Tap the On/Off button, and the Green light will blink two times and disappear, indicating it is recording an audio-only file.
- To stop, tap the On/Off button again, and the light will return to a solid Green.
- To turn off the device or return to normal recording, Press and Hold the On/Off button long, and both lights will blink and disappear, turning the device off.

How to take a photo:

- When in standby mode, tap the mode button located at the #4 two times
- A Blue and Green light will be present
- Tap the On/Off button, and the lights will blink off and then back on, indicating a photo has been taken.
- To turn off the device or return to normal recording, Press and Hold the On/Off button long, and both lights will blink and disappear, turning the device off.

How to reset the device:

- If a fault occurs, the device can be reset with the following.
- When the device is on, quickly tap both the On/Off and Mode buttons.
- The lights will turn off, and the device will reset and power down.

How to format the device:

- WARNING: Formatting will erase all files on the device
- When the device is on and in standby mode, press and hold both the On/Off button and the Mode button for 3 seconds
- The lights will blink and then return to standby mode, indicating that all recorded information has been deleted.

How to playback files on a Windows computer:



- Connect the USB cable to the device by unscrewing the silver USB port cap located on the #9
- Once connected, the PC will recognize the device as a removable disk
- Open the “Video/Photo/Audio” Folder
- Select a recording and double-click to play

How to playback files on a Mac computer:



- Connect the USB cable to the device by unscrewing the silver USB port cap located on the #9
- When connected, the Mac will recognize the device as a removable disk
- Open the “Video/Photo/Audio” folder
- Select a recording and double-click to play

How to playback files on a Google Chromebook:



- Connect the device to the USB port of the Chromebook
- A pop-up menu may occur; if so, select “View Files”
- If a pop-up does not occur, select the “O” icon called the “App Launcher” similar to a Windows icon button located in the bottom left corner of the screen
- Underneath the “Google Drive” are “My Drive,” “Downloads,” “New Services,” and something else that may be named “Removable Drive”
- Select the “Removable Drive.” If unsure of this step. Disconnect the device from the Chromebook and see what is no longer available under Google Drive from step 4
- After selecting the “Removable Drive,” you can now navigate the folders in the main folder to find the recorded files
- Double-click to play

How to playback files on an Android smartphone or tablet (No Apple Products):



- An OTG cable is required for this process. For all other steps, refer to the OTG cable guide at <https://spycentre.com/products/dual-android-otg-cable>, scroll to the bottom of the page, and click on user guides
- Go to your “Device Storage” and look for external memory. Inside will be all the files you can click on to review what was captured
- For all other steps, refer to the OTG cable guide on spycentre.com

Note:  To playback the files on these devices, you will need to download a media player that can play in AVI format. We recommend VLC Media Player.

How to delete files on a Windows computer:



- Open the "Video/Photo/Audio" folder
- Right-click on the file you wish to delete and left-click delete in the pop-up menu

How to delete files on a Mac computer:



- Open the "Video/Photo/Audio" folder
- Click and drag the file you wish to delete to the trash bin
- Empty the trash bin to delete the file from the device permanently

Note: If the above step is not completed on a Mac, the recorded files will not be entirely deleted from the device. You will have a phantom folder containing the deleted files that can not be seen on Mac that still take up memory space. Empty the "trash bin" to clear these files, or your recorder may run out of room.

How to set the time and date on a Windows computer:



- Connect the USB cable to the device and the other end to the USB port of the computer
- When connected, the PC will recognize the device as a removable disk
- Open the "TIME.txt" file
- 2020-10-16 00:00:00-Y-1-T
Modified for current time
Y---File time watermark display
N---No time watermark display
1---1080P resolving power: 1920*1080
2---720P resolving power: 1280*720
3---VGA resolving power: 640*480
T---Video cycle
F---Video does not cycle
- Input the date in year/month/day format and the time in 24-hour format.
Example: 03/4/2024 at 1:30 pm = 2024-03-04 13:30:00-Y-1-T
- Save the file.
- Disconnect the device from the computer and immediately create a new recording to update the time and date stamp on the device.
- When the device is connected again to the computer, the newly recorded file will now have the updated time.



How to Set the time and date on a Mac computer:

- Connect the USB cable to the device and the other end to the USB port of the computer
- When connected, the Mac will recognize the device as a removable disk
- Open the "TIME.txt" file
- 2020-10-16 00:00:00-Y-1-T
Modified for current time
Y---File time watermark display
N---No time watermark display
1---1080P resolving power: 1920*1080
2---720P resolving power: 1280*720
3---VGA resolving power: 640*480
T---Video cycle
F---Video does not cycle
- Input the date in year/month/day format and the time in 24-hour format.
Example: 03/4/2024 at 1:30 pm = 2024-03-04 13:30:00-Y-1-T
- Save the file.
- Disconnect the device from the computer and immediately create a new recording to update the time and date stamp on the device.
- When the device is connected again to the computer, the newly recorded file will now have the updated time.

VLC Media Player (Recommended for optimal usage)



How to download VLC Media Player on a Mac computer


- Go to www.videolan.org and click the "Download VLC"
- It will open a new window and begin downloading
- If it does not automatically start downloading, press the "Click Here" and select one of the mirrored sites
- Once completed, a new file named VLC will be visible on the desktop
- Open the folder, and in the folder, move the VLC to the "Applications Folder" by dragging and dropping it
- Once in the "Application Folder," the VLC player will complete the installation
- Open VLC Media Player in the "Applications Folder" and drag your video files to the "Drag Here" dialog box to open and play
- If the VLC player is not installed, a change to the security and privacy settings is needed
- To access your security and privacy, click on the Apple icon on the taskbar and select "System Preferences"
- Select "Security and Privacy"
- Make sure the lock icon on the bottom of the screen is open and set to "Make Changes"
- Select the button "Open Anyway"
- VLC will now be fully installed

How to download and use VLC Media Player on a Windows computer



- Go to www.videolan.org and click the “Download VLC”
- It will open a new window and begin downloading
- If it does not automatically begin downloading, press the “Click Here” and select one of the mirrored sites
- Once downloading has been completed, select run and install
- Once finished, a VLC icon will now be available on your PC
- To default, open a file in VLC Media Player, right-click on the file you wish to open and select “Open With,” and choose VLC
- To change all files to default, open with VLC Media Player: Right-click and choose “Properties,” then click on the “Change” button next to “Open With” and change it to VLC, then press ok. Now the files will default open with VLC

Note: If the memory folder of the recorder does not automatically open when connected to a PC, disconnect the device and perform the following.

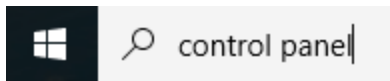

1. Type “Control Panel” in the search bar and select “Programs”
2. Under “Default Programs,” click “Change Default Settings for Media or Devices”
3. Under “Removable Devices,” select “Open Folder” to view files
4. Save and reconnect the device to the computer

The Spy Gear Superstore® Since 1993