



Installation, Operating and Servicing Instructions

Lynx Deck Pizza Oven LDPO

Please make a note of your product details for
future use:

Date Purchased: _____

Model Number: _____

Serial Number: _____

Dealer: _____

CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	4
Operating Instructions	5-6
Cleaning	7
Servicing, Maintenance and Component Replacement	7
Fault Finding	7
Spare Parts List	7
Accessories	7
Service Information and Guarantee	8

IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



 
WARNING!

This symbol is used whenever there is a risk of personal injury.



CAUTION!

This symbol is used whenever there is a risk of damaging your Lincat product.



NOTE:

This symbol is used to provide additional information, hints and tips.

KEEP THIS MANUAL FOR FUTURE REFERENCE

WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.



The thermostats within this unit contain Potassium-Sodium alloy that react with water and can cause burns. Under no circumstances should the capillary/bulb be cut open.

TECHNICAL DATA

Height (mm)	300
Width (mm)	530
Depth (mm)	560
Weight (kg)	28
Power Rating (kW)	2.2

CHECK LIST OF ENCLOSURES

Instructions manual
Kiln Bat

INSTALLATION AND COMMISSIONING

This appliance must be earthed.




An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:



Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L

Supply cords shall be oil resistant, sheathed flexible cable not lighter than ordinary polychloroprene or equivalent elastomer sheathed cord (code 60245 IEC 57)

 Install this appliance on a level surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material. Minimum distances A 100mm, B 100mm – see Fig 1. Allow 50mm at rear of unit for vent.

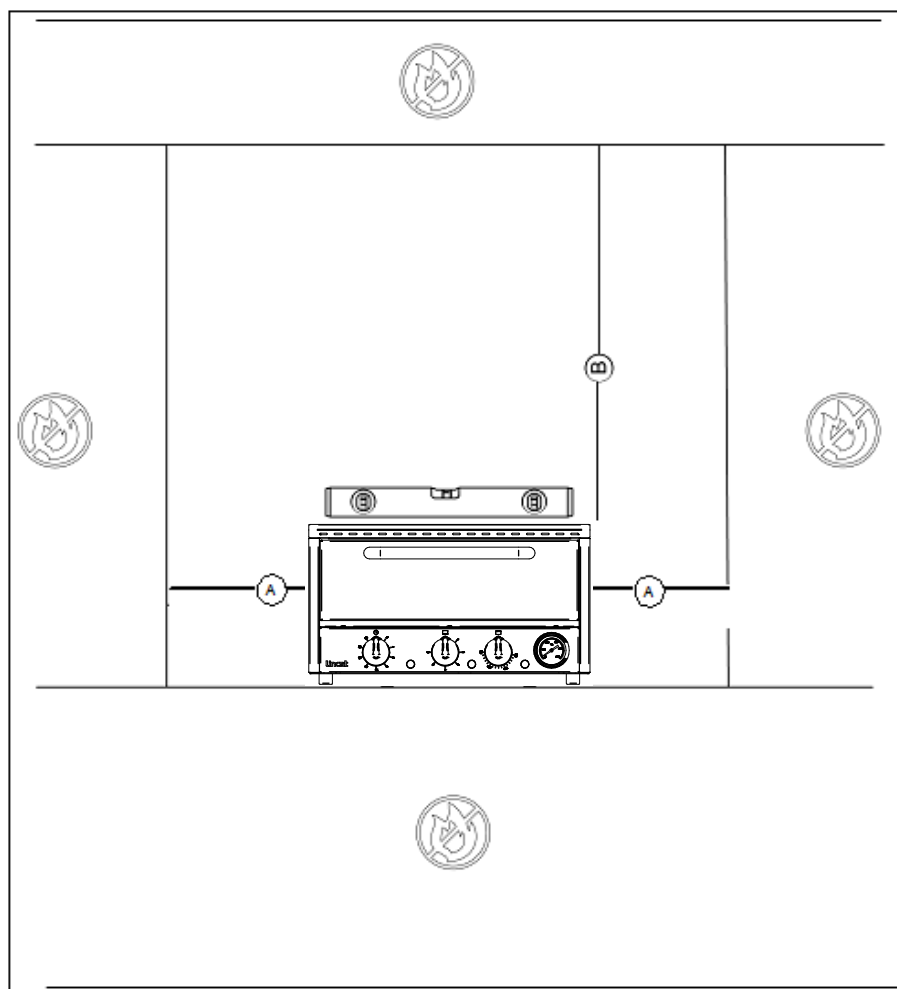

OPERATING INSTRUCTIONS

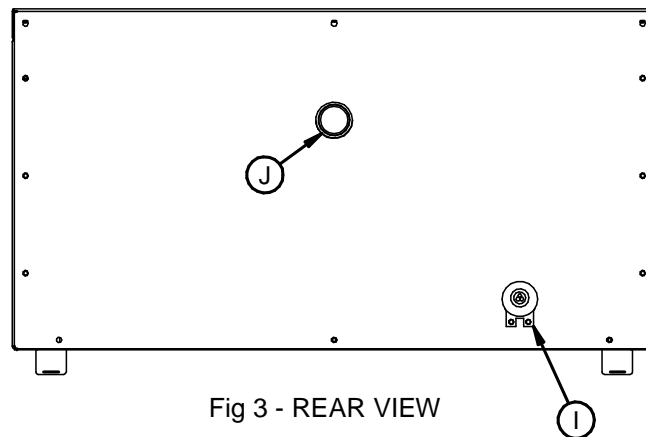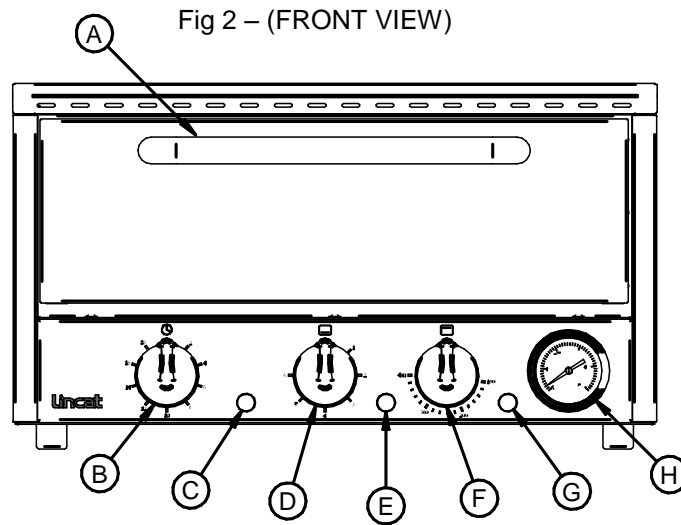  

- A – DOOR HANDLE
- B – 20 MINS MECHANICAL TIMER
- C – GREEN NEON (POWER)
- D – BASE CONTROL THERMOSTAT (1 – 6)
- E – BASE THERMOSTAT AMBER NEON (HEATING)
- F – OVEN CONTROL THERMOSTAT (Up to 400°C)
- G – OVEN THERMOSTAT AMBER NEON (HEATING)
- H – THERMOMETER (TEMPERATURE DIAL)

- I – MAINS POWER INLET
- J – OVEN VENT

Only qualified or trained personnel should use this appliance.

With all the control knobs in the 'off/ 12 o'clock' position, plug the unit into a 13A wall socket and switch on. The green neon (C) located on the fascia will then illuminate indicating power to the appliance.

Set the oven element control knob (F) to the desired temperature. The amber neon (G) will illuminate.

Note: Oven is thermostatically controlled, the amber neon will only illuminate when temperature drops below desired temperature.

Turn the base element control knob (D) to desired setting. The amber neon (F) will illuminate.

Temperatures on both thermostats are approximate, dial for indication only.

At high oven temperatures such as 370°C, the base element will only need to power on when stone cools below 300°C (e.g. when food is heavily loaded)

*Note: Base is thermostatically controlled. The amber neon will only illuminate when base stone drops **below** temperatures listed below:*

Setting	Approximate Temperature (°C)
1	50
2	100
3	150
4	200
5	250
6	300

Allow approximately 20-30 minutes for unit to reach max temperature on pre heat.

The oven cavity temperature is indicated by the dial (H).

Timer (B) is a mechanical timer only. Set to desired time (Minutes), a short bell will sound when time has lapsed.

To turn the appliance off, set control knobs (D) and (F) to the off 12 o'clock position and switch outlet socket to off. The green neon will no longer be illuminated, indicating no power to the unit.

CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

Occasionally remove the kiln bats and sweep/ vacuum out any debris from the base of the appliance. It is suggested a lever is used to aid in removing the stone from the slot at front of the unit.

SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

FAULT FINDING

Please refer to the Service Help Desk number on the final page of this manual.

SPARE PARTS LIST

Please contact the spares department for all spares requirements.

ACCESSORIES

Part Number	Description
LT01	Load Tool

SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

☎ UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
 - Product code
 - Type number
 - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.