 
 
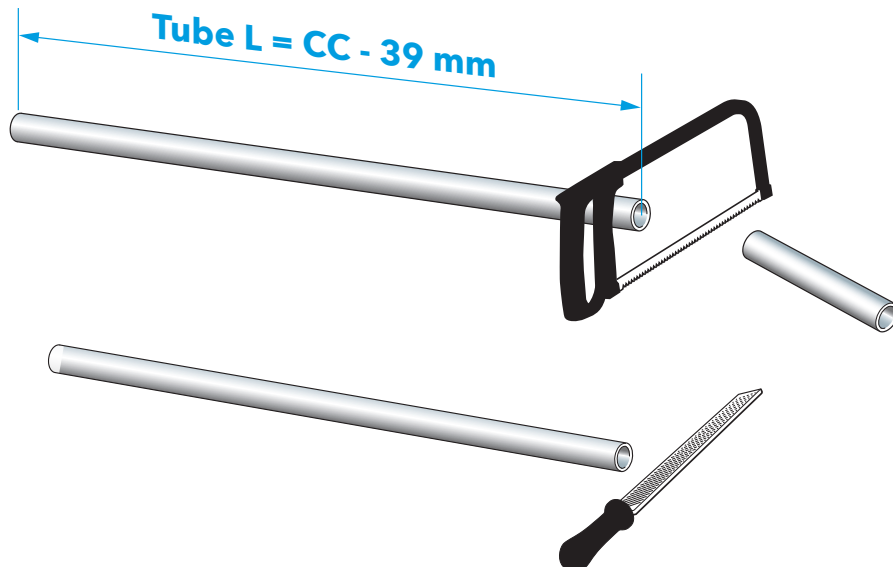 
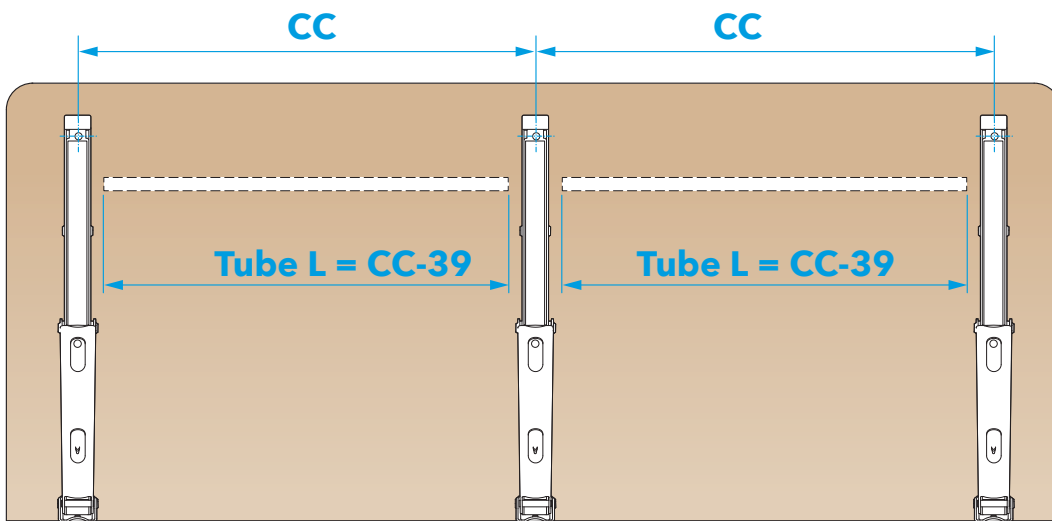 
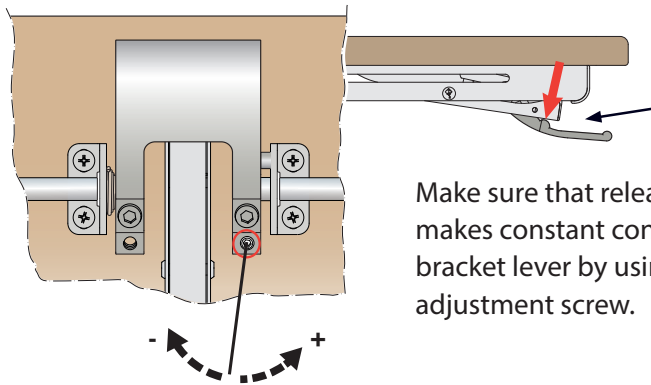 
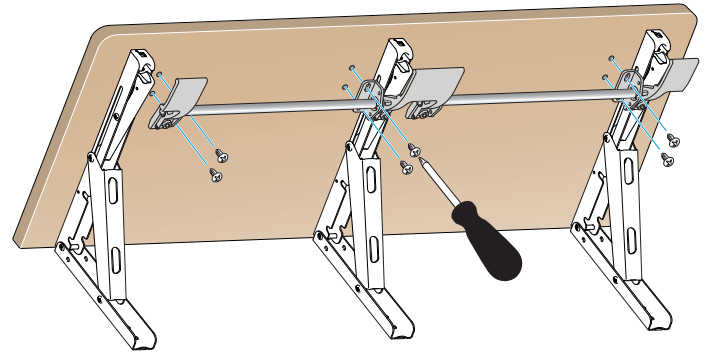 
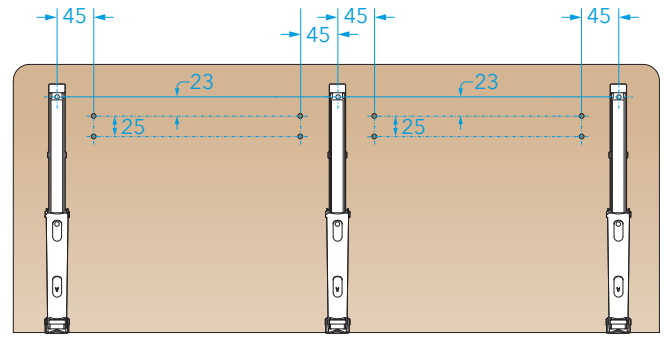 



## WITH LOCKING FUNCTION

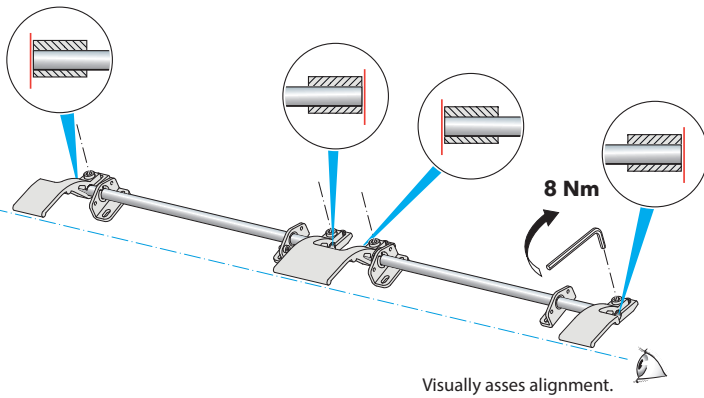

**Extra for long tube >0,7 m**




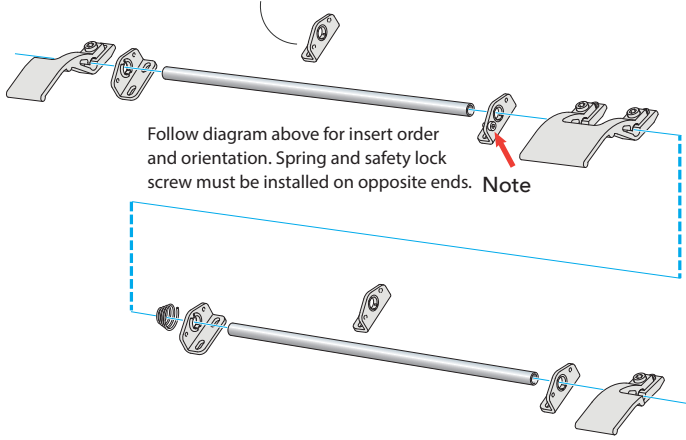


 Make sure that release lever makes constant contact with bracket lever by using adjustment screw.

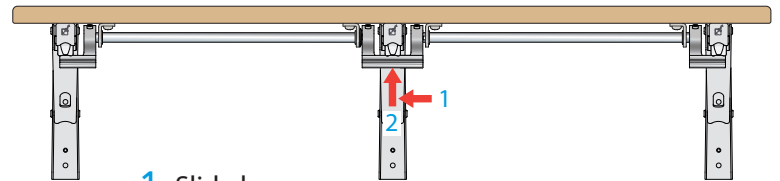

1. Slide lever.
2. Push release lever to engage bracket.

# WITHOUT LOCKING FUNCTION

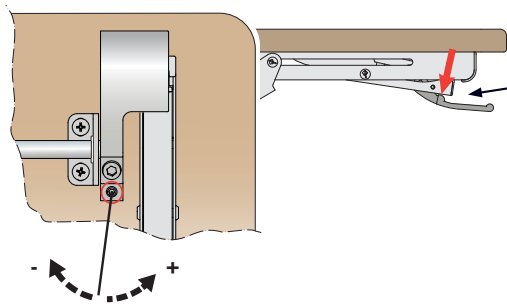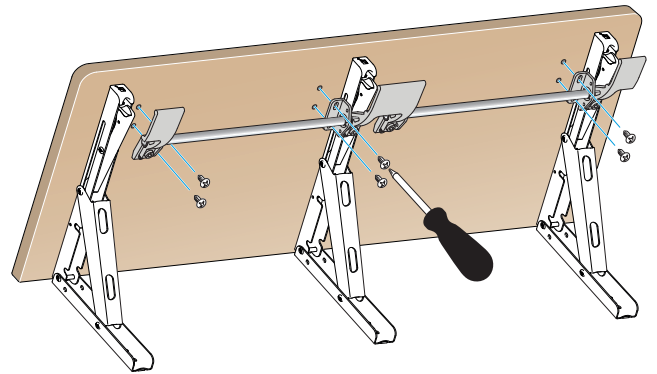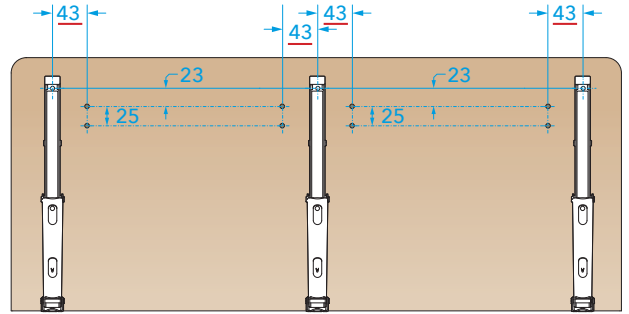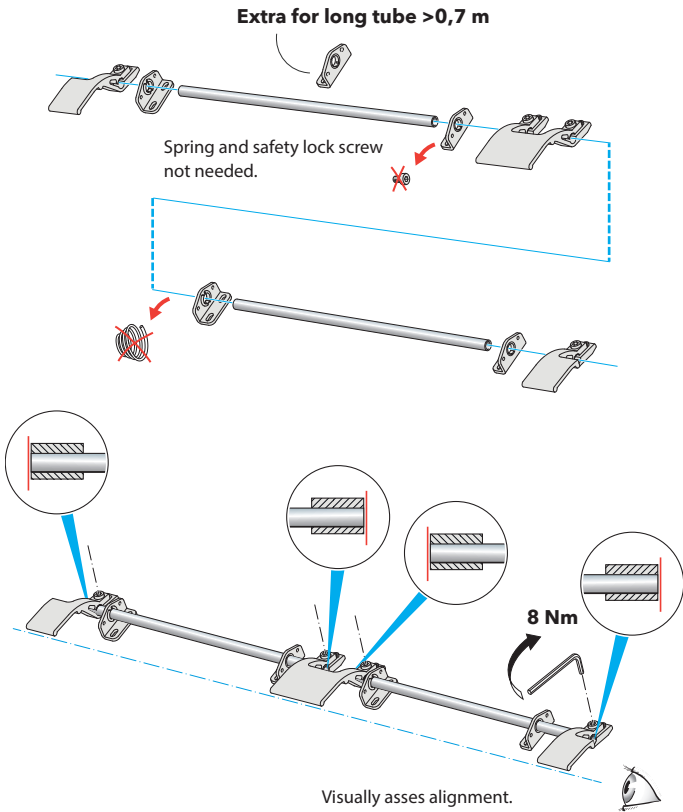    

**Note**  
No gap

Make sure that release lever makes constant contact with bracket lever by using adjustment screw.

