Alphaeus 3

Installation Instructions - Page 1/2



READ BEFORE INSTALLATION


WARNING

Installation must be carried out by a qualified electrician only.

- Disconnect power before installing
- Do NOT exceed specified power rating.
- Refer to specification for operating conditions.
- Do NOT connect luminaire directly to mains power. Luminaire must be connected to an LED driver.
- Control system connected to driver NOT, Luminaire.
- Ensure correct polarity of all LED & control connections.
- Disconnect fitting before any maintenance or investigating any faults.

- Do NOT connect fitting to Live Driver.
- Do NOT install fitting under water
- Do NOT clean with high pressure water jets or harsh chemicals
- Do NOT install or turn on if luminaire or connectors are damaged
- All connections must be IP67
- ONLY CONNECT LUMINAIRE TO POWER SUPPLY WITH MAINS POWER TURNED OFF!

Provided

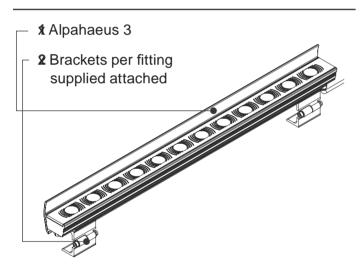

You will need

Tools: Drill

Fixings: M6 Fasteners (not supplied)

Additional:


10m Extension Lead (Order Separately)

Dimensions

0 10

1 Distance between brackets		
Fitting Length	L1	L2
627mm	497mm	537mm
927mm	797mm	837mm
1227mm	1097mm	1137mm
	100711111	
L2 -		
L1 -]

2 Leave a minimum gap of 2mm between fittings.

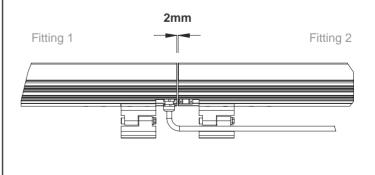

0110



Installation Instructions - Page 2/2

 


Surface Mount Installation

1 Drill fixing holes in mounting surface. Refer to table for slot locations.
Fix the Alphaeus 3 fitting to the mounting surface.
2 Set the angle of fitting and tighten bolts

3 Connect the luminaire to the driver using an extension lead.

Cut to length if needed (10m Supplied)




ONLY CONNECT LUMINAIRE TO POWER SUPPLY WITH MAINS POWER TURNED OFF!



DISTRIBUTED BY Wired 4 Signs USA +1 (865) 339 4956 info@w4susa.com 7669 Clinton Highway, Powell, Tennessee, 37849

 ALP-3-1121



sales@kempslighting.com

kempsarchitecturallighting.com



Wired 4 Signs USA +1 (865) 339 4956 info@w4susa.com 7669 Clinton Highway, Powell, Tennessee, 37849