

STANDARD FRY BASKET FIT GUIDE

How to use this chart: Look for the make and model of your fryer to find the corresponding Winco® basket model number. If your fryer is not listed, choose the Winco® basket with the dimension equal to or smaller than those specified by your fryer manufacturer.

FRYER MANUFACTURER AND MODEL NO.	WINCO® FRY BASKET FRONT HOOK MODEL
ADCRAFT	
GF-90, GF-120	FB-05, FB-10, FB-20, FB-25, FB-35 or FB-40
GF-150	FB-05, FB-10, FB-20, FB-25, or FB-40
AMERICAN RANGE	
AF25, AF25/25, AF35/40, AF35/50, AF40, AF45	FB-25
ANETS	
11UT22	FB-05
14 Series, FGS	FB-25
14, 14B, 14D, 14E, 14G, 14GS, 14X1AA, 14X1B, 14X1D, 14X1DG, 14X1E, 14X1G, 144T22	FB-10
14UT22	FB-10
18 Series	FB-40
20D, 20E, 20EG	FB-40
D1-11, D1-17, D1-22	FB-10
E-11, E-17, E-22	FB-10 or FB-25
E-11AA, E-11D, E-15, E-15AA, E-15B, E-15D, E-17AA, E-17D, E-22A, E-22D, EC-11, EC-15, EC-17, EC-22	FB-10
FGS14-6, FGS14-6A, FGS14-6B	FB-10
MX14AA, MX14D, MX14E, MX14EG	FB-10
SX14AA, SX14B, SX14D, SX14E	FB-10
CECILWARE	
EMP & FMS35B30	FB-05
EMP & FMS 40 Series	FB-10
EMP & FMS 65	FB-40
EF65, EFS65	FB-40
FMP65, FMS54	FB-40
COMSTOCK CASTLE	
2616HG	FB-20
14HF, 14HC	FB-20 or FB-30
18HF	FB-40
DEAN	
11E, 11G	FB-10 or FB-25
1212G, 12126, 1212GMS, 1212GTS	FB-05
14 Series	FB-10 or FB-30
14E, 1414G, 1414GMS, 1414GTS	FB-10 or FB-25
14GMS	FB-25
18 Series, 1818E, 1818G, 1818G+S	FB-40
1824G	FB-25
1842G	FB-10
2020E, 2020GMS, 2020G+S	FB-40
2424E, 2424G	FB-10 or FB-25
32G	FB-40

FRYER MANUFACTURER AND MODEL NO.	WINCO® FRY BASKET FRONT HOOK MODEL
35/40 GO1, 36/40 GO1	FB-20
601	FB-20
714E	FB-10, FB-20 or FB-25
714GMS, 714GTS	FB-10 or FB-25
D20G	FB-10
D50G	FB-10 or FB-30
D60G, D80G	FB-40
SM20G, SM50G	FB-10
SM60G	FB-40
SM35G	FB-20
FAR WEST	
14 Series	FB-10 or FB-30
18 Series	FB-40
FRYMASTER	
12EF	FB-25
13EF	FB-10
17EF, 22EF	FB-10 or FB-25
ESG35T	FB-10
EPH Series	FB-10
FM35	FB-20
GF14	FB-20
G18FB, G24FB	FB-40
GF40	FB-10 or FB-25
H14, H17, H22, H50	FB-10 or FB-25
H14-2, H17-2	FB-25
JIC, JIX	FB-05
J2X	FB-20
JCFX	FB-40
MJ15	FB-05
MJ35, MJ35G	FB-20
MJ40, MJ41, MJ41E, MJ45, MJ45E, MJH50	FB-10 or FB-25
MJH50E	FB-25
MJCF, MJCFE, MJCFZ	FB-40
MJH45/47	FB-10
GARLAND	
280A14, 280B14	FB-25
35-280, 35-40, 35-50	FB-20
36E Series	FB-40
36EIS11BL, 36ES11, 36ES11SF, 36ES11SFBL, 36ET11, 36ET11SF	FB-20
40 - 18	FB-40
40A14, 40B14	FB-25
50 - 18	FB-40
50A14, 50B14	FB-25
380A14, 380B14	FB-25
680-31F, 680-31FBL, 680-31SF	FB-20
780-31SF, 780-31SFB6, 780-31SFBL	FB-20
1031	FB-20
E24-31F, E24-31SF	FB-20
G280A14SS, G280B14, G280B14SS	FB-25

STANDARD FRY BASKET FIT GUIDE

How to use this chart: Look for the make and model of your fryer to find the corresponding Winco® basket model number. If your fryer is not listed, choose the Winco® basket with the dimension equal to or smaller than those specified by your fryer manufacturer.

FRYER MANUFACTURER AND MODEL NO.	WINCO® FRY BASKET FRONT HOOK MODEL
GARLAND (cont.)	
J3XLRST	FB-20
HENNY PENNY	
OE, OG Series	FB-05
HOBART	
CK20, CK201, CK21, CK40, CK45, CK421, CK831, CK841, CK40, CK42	FB-20
DK20, DK40, DK42, DK831	FB-20
EFO40	FB-10 or FB-30
GF35 Series	FB-20 or FB-30
GF65A Series	FB-40
HFD40, HFD50, HFD225	FB-30
HF85	FB-40
IMPERIAL	
IFS-40	FB-10
KEATING	
10 Series	FB-05
11 Series	FB-05
14 Series	FB-10, FB-20, FB-25 or FB-30
18 Series	FB-40
CM-E3	FB-20 or FB-25
LANG	
C-28 & 28L, F-28 & 28L	FB-25
MAGIC CHEF	
301, 310, 312, 314, 316	FB-20
GA35A, GA42A, GC29A	FB-20
HD18	FB-20
PITCO	
6 Series: 6D, 6DI	FB-05
7 Series, 14BA	FB-20, FB-25 or FB-30
7DI	FB-25
12 Series: 12C, 12CS, 12D, 12D2, 12D1, 12DIS, 126D, E12, E12A, E12A2, E12S, 12S	FB-05
14 Series, 14-2, 14-2UFM, 14-R2, 147, 147UFM, 14BDI, 14DI	FB-25
14, 14C+	FB-20 or FB-30
18 Series, 18-2, 18-2UFM, 18 DI, E18-2, E18-B, E18	FB-40
35C+	FB-20 or FB-30
E7, E7B, E14, E-14-2, E14-3UFM, E147, E147UFA, E14UFM, E14B, E14B-2	FB-25
HE-7, HE14, HE147	FB-25
P35/35C, PC35/35C, 14C	FB-20
PM14, PR14	FB-25
VF-35S	FB-20
ROYAL RANGE	
RHEF-45-CM, RHEF-45-DM, RHEF-45-EM	FB-10

FRYER MANUFACTURER AND MODEL NO.	WINCO® FRY BASKET FRONT HOOK MODEL
RFT-25, RFT-2525, RFT-50	FB-10
RFS-40	FB-10
RCF-25	FB-10
STAR	
404	FB-20
EM12, EM40	FB-20
FM14DL	FB-20
M14, M14D, M14DL, M43	FB-20
SOUTHBEND	
14-32, 14-36, 14-42	FB-25
18-36, 18-42	FB-40
SUPER CHEF	
FM 14 & 14	FB-20
TX-14-FM	FB-05
18S	FB-40
TOASTMASTER	
1404E, 1405, 1405E, 1406 DROP IN, 1414B, 1433, 1435, 1445, 1454, 1455, 1465, 1475, 1485, 1495	FB-20
14C4	FB-20
FR29, FLOOR MODEL	FB-20
VULCAN-HART	
17891E, 17891G	FB-25
7494E, 7594G	FB-20, FB-25 or FB-30
7495E, 749SE	FB-40
7594E, 7594G, 7691	FB-20
7595G, 759SG	FB-40
7891E, 7891G	FB-25
CCFS1 & 7891	FB-20 or FB-30
CCFS2	FB-20 or FB-30
CCF18 & 7892	FB-40
ER40, ER50, ER225	FB-20 or FB-30
ER85	FB-40
GHF91, HSF-22	FB-20 or FB-30
GR25	FB-05
GR65	FB-20, FB-35 or FB-40
GR85	FB-40
HEF22, HEF22F	FB-25
SPE1	FB-20, FB-25 or FB-30
SPG1	FB-20 or FB-30
SPE101, SPE11, SPE111, SPE12, SPE202, SPE22, SPE222M, SPG12	FB-25
SPG2 & SPE2	FB-20, FB-25 or FB-30
TK35	FB-20, FB-25 or FB-30
TK45, EF3, GR35, GR45	FB-20 or FB-30
TK65	FB-20, FB-35 or FB-40
VF1, VMF1	FB-20
WELLS	
F-58, F-68, F-88	FB-10
F-101, F1725	FB-10 or FB-30

Designs and specifications subject to change without notice.

09/2018 pg 2/3



STANDARD FRY BASKET FIT GUIDE


How to use this chart: Look for the make and model of your fryer to find the corresponding Winco® basket model number. If your fryer is not listed, choose the Winco® basket with the dimension equal to or smaller than those specified by your fryer manufacturer.

FRYER MANUFACTURER AND MODEL NO.	WINCO® FRY BASKET FRONT HOOK MODEL
WELLS (cont.)	
F(FS)1200, F(FS)1275, FB108	FB-10
WFG-40-2, WFE-40 Series	FB-10 or FB-30

FRYER MANUFACTURER AND MODEL NO.	WINCO® FRY BASKET FRONT HOOK MODEL
WOLF	
WTF35 Series (Triton)	FB-20, FB-25 or FB-30
WTF42 Series (Commander)	FB-20, FB-25 or FB-30

() - CAN BE SUBSTITUTED

STANDARD FRY BASKET DIMENSIONS

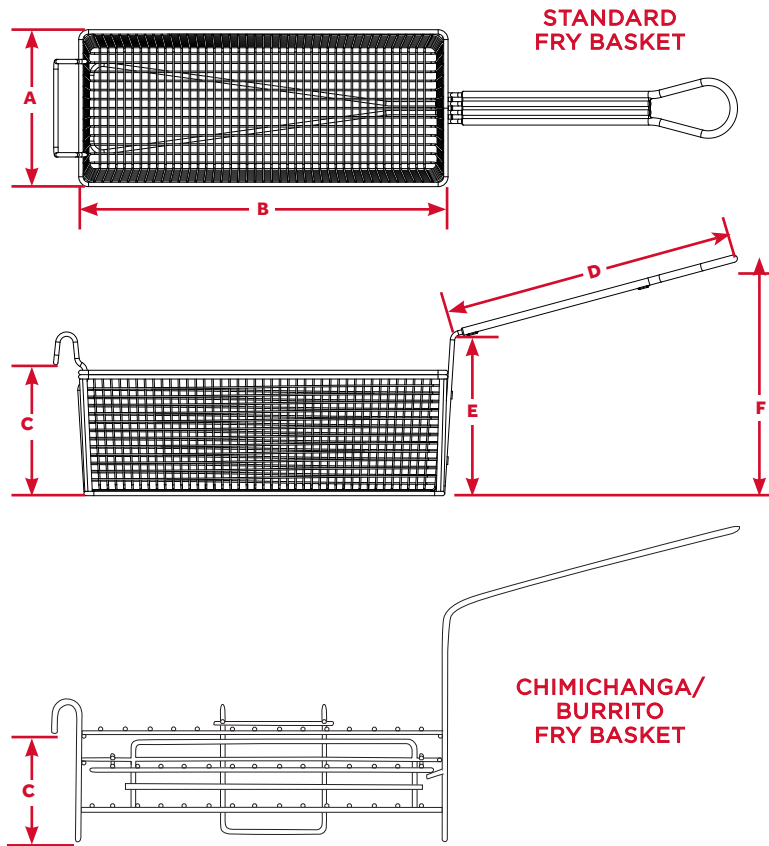

MODEL NO.	PRODUCT NAME	DIMENSIONS (IN.)					
		Length B	Width A	Height C	Handle D	Handle E	Handle F
FB-03	Chimichanga/Burrito Fry Basket	11-1/2	6	3-7/8 (4-5/8 with hook)	8	8-1/4	12
FB-05	Fry Basket	11	5-1/2	4-1/4	10	6-1/8	8-1/4
FB-10	Fry Basket	12-1/8	5-3/8	6	10	9	10-5/8
FB-20	Fry Basket	13-1/4	5-5/8	5-5/8	10	9	11
FB-25	Fry Basket	12-7/8	6-1/2	5-1/4	10	8-7/8	11-1/2
FB-30	Fry Basket	13-1/4	6-1/2	6	10	9	11-7/8
FB-35	Fry Basket	13-3/8	9-1/2	6	10	9-1/4	11-3/8
FB-40	Fry Basket	17	8-1/4	6	12	8	10-5/8