

 
stick on whiteboard

Application Guide

Writeyboard.com.au


1. Unroll

Take your WriteyBoard out of the packaging tube, unroll it and let it relax for a few hours. To ensure the WriteyBoard lays flat for the entire period of time, place objects of substantial weight on the edges.

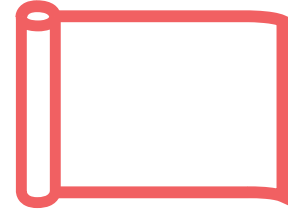

2. Level & Mark

Next, assign a wall for transformation. Clean off all dust and debris. With a level, indicate with a pencil where the top left corner of the WriteyBoard will be stuck. Measure 4 feet directly down and mark the bottom corner with the pencil.

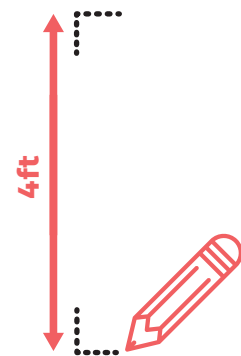


3. Peel

YOU WILL NEED A PARTNER TO ASSIST WITH INSTALLATION.

Designate a “holder” and a “smoother”. You can let them use your Premium WriteyBoard as compensation. Peel back the protective film from the WriteyBoard. You and your partner will pick up the WriteyBoard and the “smoother” (person on the left) will carefully align the corners with the markings on the wall.

4. Apply

The “holder” (person on the right) will hold the whiteboard away from the wall while the “smoother” applies the top and bottom left corners. The holder will continue to hold the WriteyBoard as close as they can to the wall without it touching. Starting at the left, the smoother will use a cloth and smooth the WriteyBoard onto the wall with a vertical motion and work towards the holder.

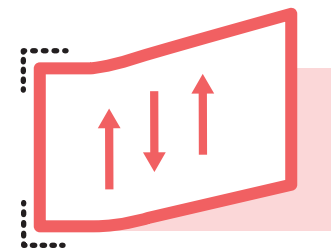

5. Mistake?

If you make a mistake, there is no need to panic! Simply have the holder lift up their end of the WriteyBoard until the bubble is gone. The smoother will then reapply.

TAKE IT WITH YOU

If you wish to travel with your XL Premium WriteyBoard, safely **store the protective film** that initially sealed the adhesive inside the packaging tube it arrived in. With the help of a partner, gently and slowly peel the WriteyBoard off the surface and lay face down (adhesive up) on a clean, dry surface. Unwrap the protective backing and place it on the adhesive. You can then roll up the WriteyBoard.

Warranty

Warning: Not suitable for children 3 years of age and under. For use on most sealed surfaces. Do not stick the WriteyBoard to any surface until you've read the conditions regarding the required integrity of the walls. As all walls are not created equal, Writey Company cannot guarantee that no damage will result after the removal of the product.

Before Application: The wall must have a properly applied primer layer and a properly applied paint layer fully cured. Test for surface compatibility in an inconspicuous space. All other surfaces must be 100% sealed properly to guarantee safe adhesion to the surface.

Do not apply on:

- Fragile surfaces such as wallpaper, fabrics, some finished wood surfaces, and heavily textured walls.
- Poor quality topcoats that include paint coats that are thin, poorly applied, or of advanced age.
- Walls painted within 30 days.
- Glass, as the smooth surface will create too strong of a bond and when removed will potentially leave foam residue on the glass surface.

Applying the Writeyboard to these walls may result in damage to the substrate if removed. Other poor wall integrity conditions may apply. **If you are unsure if your surface is compatible please contact us before application directly at 1300 633 459**

Application: Follow the instructions. Peel the protective plastic and carefully return it to the shipping tube. To use if you would like to take your Writeyboard with you. Then stick your WriteyBoard to a flat surface that is clean and dry.

Warranty: Writeyboard Premium Restickable Whiteboards come with a 2 year / 2,000 applications guarantee! They will always stick, erase and reapply or we will replace them.

Warranty is voided if the product is abused or mishandled in any way such as:

- Handling adhesive without washing hands first.
- Dropping adhesive on surfaces with contaminants and debris.
- Scratching and damaging the surface causing a loss of dry erase ability.

Portability: If you wish to take your WriteyBoard with you on the go:

- Erase all markings and gently remove the WriteyBoard from the surface.
- Take the original backing and apply it to the back of the board and roll it up.

Do not leave the WriteyBoard rolled up for more than 5 days.

- Doing so will result in the foam layer being imprinted with the shape of the roll it was formed in.

-After reapplied to the wall, the WriteyBoard may begin to curl at the edges due to being imprinted with the roll shape.