

Cordless Easy Spot Repair Solution



Spot repair with Mirka® AOS-B sander and the Mirka® AROP-B cordless polisher



For removing of defect use Polarstar[®] SR and Mirka[®] AOS-B 130NV sander.



Always use water when sanding, apply water to both abrasive and the defected area. Use Mirka damper for best result.



Lightly press with the sander and sand for 2–3 seconds.



Wipe clean and check the surface. Repeat step 3 if needed. Use Mirka soft micro fibre cloth.



For polishing and finalising use the cordless Mirka® AROP-B 312NV polisher, Mirka® Yellow waffle pad and Polarshine® 12.



Apply a small amount of Polarshine® 12 on the polishing pad or directly to the defected surface area.



Polish by gently pressing. Use at moderate speed. Wipe clean and check the surface. Repeat if necessary.



Use Mirka soft micro fibre cloth for final cleaning.



