# DOCTOR WHO ()



# TARDIS BLUETOOTH SPEAKER

**USER GUIDE** 

Applicable models: MT40







# Features:

- Officially licenced BBC<sup>™</sup> TARDIS collectable
- Sound Clips: Materialize, Dematerialize, Cloister Bell, Flight, Turbulence
- Top LED flashes soft blue when powered On/Off
- POLICE PUBLIC CALL BOX sign illuminates when connected to device
- Auxiliary in/out for linking multiple models together for surround sound
- Built in Omni-directional Microphone for phone calls with noise cancellation
- Multi-Function interface for Volume / Play / Pause / >> / << / Phone / Power
- Dual speakers with precision tuned ported enclosure
- Mil spec PCB with SMD parts for amplification
- Built-in noise rejection circuitry

Speakers:

• USB Rechargeable lithium-ion battery with 10 hours life



# **Specifications:**

Connectivity: Wireless Bluetooth™ Wireless Range: 33 Feet / 10 meters

Dimensions: 8.53"H x 4.35"W x 4.35"D

Battery Life: 10 hr. (varies upon volume and connection)
Battery: Rechargeable Lithium-ion via Micro USB
Tuning: Direct wave guide for 360 degree dispersion

2" High Power + 2.5" Passive Bass Radiator

Direct Connect 3.5mm Auxiliary In/Out


Microphone: Omni-directional -43db, SNR>60dB

USB Port: Micro-USB, DC5V/1A

Frequency: 100Hz - 20KHz

S/N: >80dB



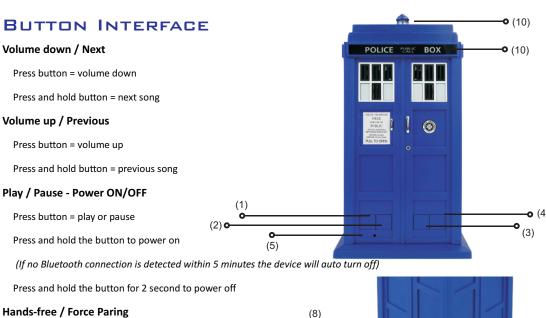

When you receive a call, press to answer, Press again to end

Press and hold 2 seconds to reject

When you are on the call, press and hold the button to switch from speaker to phone.

If you want to redial last call, double click the button

Press and hold button = Force pair Bluetooth

## Power ON/OFF Switch

Slide button to right to turn on

Slide button to left to turn off

1	Volume up / Previous	6	AUX IN / AUX OUT
2	Volume down / Next	7	USB charging port
3	Hands-free / Force pairing	8	Battery indicator
4	Play, Pause / Power On/Off	9	Power ON/OFF
5	Microphone	10	LED indicators

(6)

# **POLICE PUBLIC CALL BOX LED Indicator**

Flashes white continuously = Bluetooth connection in process

White LED stays lit = Paired to device

White LED stays lit = Auxiliary connection

#### **Roof Lamp LED Indicator**

The LED will flash blue when powered on

The LED will flash blue when powered off

(Hold down power button)

### **Base LED Indicator**

White LED stays lit = Unit is charging

Green LED stays lit = Unit is fully charged

# **Bluetooth Pairing**

The Bluetooth name is "TARDIS"

Turn on speaker, it will search for the last paired device and auto-pair to it

If no device can be auto-paired, the speaker will wait for a new device to connect

To force pair, hold the hands-free button to start a new pairing



#### **Voice Indication**

Power ON: Materialize

Power OFF: Dematerialize (Hold down power button)

Bluetooth pairing: We're in trouble

Bluetooth connected: Cloister Bell

Aux In mode: Flight Noise

Low Battery: Turbulence

# **Charging**

We recommend turning off Tardis before charging

Connect Tardis and power source via Micro-USB cable

The LED will be white while charging

The LED will be green when charging is completed

## **Auto Power Off**

If no Bluetooth connection within 5 minutes, device auto power off.

When the battery is too low, the device will auto power off.



#### TROUBLESHOOTING:

- 1 HEARING DISTORTION
  - A Lower the volume on your TARDIS and/or phone/device.
  - B Make sure it's charged up. Check for low battery, then charge Tardis via USB.
- 2 NOT LOUD ENOUGH?
  - A Turn up the volume on your phone/device or your TARDIS.
  - B Make sure it's charged up.
  - C Try plugging your TARDIS into your phone/device via 3.5mm cable.
- 3 UNABLE TO PAIR WITH BLUETOOTH DEVICE?
  - A Confirm that your phone/device is Bluetooth™ compatible.
  - B Follow Bluetooth paring instructions in this guide page 4
  - C Visit www.massiveaudio.com/support
- 4 EXPERIENCING SIGNAL LOSS OR DROPOUTS VIA BLUETOOTH?
  - A Move TARDIS closer to your phone/device.
  - B Make sure it's charged up.
  - C Turn off your TARDIS and phone/device, then power up and reconnect.



Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

#### Fire and Electric Shock Hazard

- Do not expose your Massive® Speaker to liquid, moisture, humidity, or rain. Do not use the Massive® Speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the Massive® Speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the Massive® speaker. such actions could result in electric shock.
- Clean the Massive® Speaker only with a dry cloth.
- Do not expose your Massive® Speaker to extremely high or low temperatures.
- Do not leave your Massive® Speaker in direct sunlight for extended periods of time.
- Do not leave your Massive® Speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

#### Battery/Charger Hazard

- Do not dispose of your Massive® Speaker in a fire. The battery could explode causing injury , death or paradox.
- Only charge the battery in accordance with the user instructions supplied with the Massive® Speaker.
- Do not attempt to disassemble the Massive® Speaker charger or force open the built-in battery because this may result in electric shock.
- Do not charge the Massive® Speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the Massive® Speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

#### Automobile Accident Hazard

- Do not leave or store the Massive® Speaker near or over your automobile's air bag because serious injury may result when an air bag deploys.
- Do not place the Massive® Speaker on high surfaces such as shelves. During music playback the speaker may fall.





• Do not use abrasive cleaners to clean your Massive® Speaker because this could cause scratches and damage.

- Do not bring your Massive® Speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Massive® Speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Massive® Speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Massive® Speaker battery, it is built-in and is not changeable.
- Keep out of the range of children under 6 years old to prevent choking on small removable parts.
- Use only the manufacturer suggested charger for your Massive® Speaker. Other chargers could result in electric shock and damage speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your Massive® Speaker prior to boarding an aircraft. Do not use the Massive® Speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and the speaker's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.
- Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.

#### **FCC STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference,
- 2 This device must accept any interference received, including interference that may cause undesired operation.

#### FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this
  equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

This product is compliant with the CE directive. All returns must be made to the original place of purchase.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of the device that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the device. Read these instructions before operation. Keep these instructions for future reference. Follow all instructions for installation, use and maintenance of the device. To avoid tilt or drop, place the device on a flat and hard surface. To clean the device, turn off device first. Clean only with soft and dry cloth. To ensure compatibility, only use accessories recommended by the manufacturer. When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture evaporates. To ensure compatibility, only use accessories recommended by the manufacture.

- Do not expose the device to sand or dust, or cover it with items, such as newspapers, table cloths, or curtains.
- Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation.

Make sure that the power supply voltage is within the range indicated on the label on the device or power adapter. If you are not sure of the type of power supply, consult you dealer or local power company. Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel. Do not use the device if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair the device yourself. Avoid using dropped or damaged appliances. If the device is dropped and the housing is damaged, the internal components may not function normally. To reduce the risk of electric shock, do not touch any connector with wet hands. Never remove the housing of the device. Never lubricate any part of the device. Never place the device on top of any other electrical equipment. Never block ventilation openings. Install in accordance with manufactures instructions. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

#### RoHS COMPLIANCE

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



The directive on Waste Electrical and Electronic Equipment (WEEE0, which entered into force as European law on 13<sup>th</sup> February 2003, resulted in a major change in the treatment at end of life. The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycle and other forms of recovery of such wastes so as to reduce disposal.mn The WEEE logo on the product or on its box indicating collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown above. This product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical Waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service. shoo from where you purchased the equipment. or manufacturer of the equipment.







The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Massive Audio Inc. is under licence.



BBC, DOCTOR WHO (word marks, logos and devices), TARDIS, DALEKS, CYBERMAN and K-9 (word marks and devices) are trademarks of the British Broadcasting Corporation and are used under licence. Doctor Who logo © 2009 and TM BBC. Licensed by BBC WW Ltd.

© 1999 Massive Audio, Inc. All rights reserved. MASSIVE® and LOGO are registered trademarks of Massive Audio, Inc. in the United States and/or other countries.

## **GET MASSIVE SUPPORT**

VISIT www.massiveaudio.com/support

CALL 1-323-262-2262

PURCHASE Massive® products and accessories at WWW.MASSIVE AUDIO.COM

Become a fan of Massive on Facebook®

VISIT WWW.FACEBOOK.COM/MASSIVECARAUDIO



