

## Features:

- Officially licensed STAR TREK: The Original Series collectible
- Sound Clips: Fascinating, Tricorder, Live long and prosper, Most unpleasant, Vulcan mind probe, Minds are merging, Most illogical, Warp factor one, Logical choice.
- Auxiliary In for direct connection
- Microphone for phone calls
- Precision tuned ported speaker enclosure
- Mil spec PCB with SMD parts for amplification
- Built-In noise rejection circuitry
- USB Rechargeable Lithium-Ion 500 mh battery
- Rotate nine different sound clips from TOS
- Battery indicator display / low battery voice indicator
- Sound effects that indicate ON / Bluetooth / Low Battery
- Battery indicator display / low battery voice indicator
- Sound effects that indicate ON / Bluetooth / Low Battery

## Specifications:

- Connectivity: Wireless Bluetooth®
- Dimensions: 3.39" x 3.20" x 6.23" / 86.1mm x 81.28mm x 158.24mm
- Battery Life: 4-6 hours (varies volume and connection)
- Battery: Rechargeable Lithium-Ion via Micro USB
- Speakers: 1.5" / 38mm Massive Audio® driver
- Microphone: Omni-Directional with noise cancellation
- USB Port: Micro USB, DC 5V/1A
- Frequency: 50Hz - 20KHz
- S/N: 88dB

 
## Packing:

Unit x 1, USB cable x 1 User guide x 1, Warranty Card x 1



# STAR TREK™

## THE ORIGINAL SERIES



## MR. SPOCK BLUETOOTH SPEAKER USER GUIDE

Applicable models: FT-SPK



## Button Interface:

### Switch:

Left = Bluetooth mode\*  
Middle = Auxiliary mode  
Right = OFF

### Sound Effects:

 
- Press and hold SFX button for 2 seconds when the unit is OFF to activate SFX
- When activated press SFX button 1 time to rotate through each sound effect.
- Move switch or press and hold the SFX button for 2 seconds to turn off SFX Mode

### Play / Pause Music ~ Answer / End Phone Calls:

- Press SFX button while the unit is connected to Bluetooth to answer or hang up
- Press SFX button while music is playing to Pause or Play a track.

\*Do not use while charging, Use 5V / 1A USB charge block or computer's USB port

\*Due to constant improvements specifications are subject to change without notice

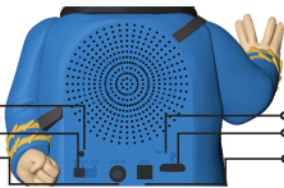

1	Charge/ON Status LED Indicator	4	Micro USB Charging
2	Bluetooth / Auxiliary / OFF Switch	5	SFX Try Me button (9 sound effects)
3	Auxiliary Input	6	Microphone



Bluetooth The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by FAMETEK LLC. is under license.

STAR TREK™ TM & © 2016 CBS Studios Inc. STAR TREK and related marks and logos are trademarks of CBS Studios Inc. All rights reserved.

FAME FAMETEK® and LOGO are registered trademarks of FAMETEK LLC. in the United States and/or other countries.

### GET FAMETEK SUPPORT

VISIT [www.fametek.com](http://www.fametek.com)

CALL 1-323-262-2262

 
PURCHASE Other great FAMETEK products at [www.fametek.com](http://www.fametek.com)

Become a fan of FAMETEK on Facebook and Twitter

VISIT [www.facebook.com/FameTekElectronics](https://www.facebook.com/FameTekElectronics)

VISIT [www.twitter.com/fametek](https://www.twitter.com/fametek)

© 2016 FAMETEK LLC ALL RIGHTS RESERVED



## Voice Indication:

Power ON: ~ "Live long and prosper"  
Bluetooth Connected: ~ Tricorder hum  
Low Battery ~ "Most unpleasant situation"

### Base LED Indicator:

LED OFF = Fully Charged  
Red LED = Charging  
Blue LED = Connected to Bluetooth or AUX  
Red Flashing LED = Low Battery  
Blue Flashing LED = Looking for Bluetooth connection

### Bluetooth Paring:

Move the switch on the back to the Bluetooth symbol (far left) position  
The Bluetooth name is ~ FT-KRK  
The device will auto pair to the last device it was connected to  
If no device can be auto-paired, the speaker will wait for a new device to connect

### Charging:

Remember tuning off the device before charging  
Connect the device and power source via Micro-USB cable Use a 1A / 5V USB charging block\* or connect to your computers USB port  
The LED will turn OFF when charging is complete \*although we employ protection circuitry, using a higher Amp/Volt charging block than recommended may damage your unit

### TROUBLESHOOTING:

- 1 HEARING DISTORTION**
  - A Lower the volume on your phone/device.
  - B Make sure it's charged up! Check for low battery, and charge speaker via USB.
- 2 NOT LOUD ENOUGH?**
  - A Turn up the volume on your phone/device
  - B Make sure it's charged up!
- 3 UNABLE TO PAIR WITH BLUETOOTH® DEVICE?**
  - A Confirm that your phone/device is Bluetooth™ compatible.
  - B Follow Bluetooth pairing instructions in this guide
  - C Visit <http://www.FameTek.com>
- 4 EXPERIENCING SIGNAL LOSS OR DROPOUTS VIA BLUETOOTH®?**
  - A Move speaker closer to your phone/device.
  - B Make sure it's charged up!
  - C Turn off your speaker and phone/device, then power up and reconnect.



- Do not insert anything into your FameTek® Speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your FameTek® Speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your FameTek® Speaker battery, it is built-in and is not changeable.
- Keep out of the range of children under 6 years old to prevent choking on small removable parts.
- Use only the manufacturer suggested charger for your FameTek® Speaker. Other chargers could result in electric shock and damage speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your FameTek® Speaker prior to boarding an aircraft. Do not use the FameTek® Speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and the speaker's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.
- Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.

### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
1 This device may not cause harmful interference,  
2 This device must accept any interference received, including interference that may cause undesired operation.

### FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
  - This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.
- ⚠ This product is compliant with the CE directive. All returns must be made to the original place of purchase. The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of the device that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

### Fire and Electric Shock Hazard

- Do not expose your FameTek Speaker to liquid, moisture, humidity, or rain. Do not use the FameTek Speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the FameTek Speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the FameTek Speaker, such actions could result in electric shock.
- Clean the FameTek Speaker only with a dry cloth.
- Do not expose your FameTek Speaker to extremely high or low temperatures.
- Do not leave your FameTek Speaker in direct sunlight for extended periods of time.
- Do not leave your FameTek Speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

### Battery/Charger Hazard

- Do not dispose of your FameTek Speaker in a fire. The battery could explode causing injury, death or warp coil failure.
- Only charge the battery in accordance with the user instructions supplied with the FameTek Speaker.
- Do not attempt to disassemble the FameTek Speaker charger or force open the built-in battery because this may result in electric shock.
- Do not charge the FameTek Speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the FameTek Speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

### Automobile Accident Hazard

- Do not leave or store the FameTek Speaker near or over your automobile's air bag because serious injury may result when an air bag deploys.
- Do not place the FameTek Speaker on high surfaces such as shelves. During music playback the speaker may fall.

### CAUTION

- Do not use abrasive cleaners to clean your FameTek® Speaker because this could cause scratches and damage.
- Do not bring your FameTek® Speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your FameTek® Speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your FameTek® Speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your FameTek® Speaker battery, it is built-in and is not changeable.

### CAUTION

- Do not use abrasive cleaners to clean your FameTek® Speaker because this could cause scratches and damage.
- Do not bring your FameTek® Speaker in to contact with any sharp objects because this could cause scratches and damage.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the device. Read these instructions before operation. Keep these instructions for future reference. Follow all instructions for installation, use and maintenance of the device. To avoid tilt or drop, place the device on a flat and hard surface. To clean the device, turn off device first. Clean only with soft and dry cloth. To ensure compatibility, only use accessories recommended by the manufacturer. When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture evaporates. To ensure compatibility, only use accessories recommended by the manufacturer.

• Do not expose the device to sand or dust, or cover it with items, such as newspapers, table cloths, or curtains.  
• Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation.  
Make sure that the power supply voltage is within the range indicated on the label on the device or power adapter. If you are not sure of the type of power supply, consult your dealer or local power company. Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel. Do not use the device if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair the device yourself. Avoid using dropped or damaged appliances.  
If the device is dropped and the housing is damaged, the internal components may not function normally. To reduce the risk of electric shock, do not touch any connector with wet hands. Never remove the housing of the device. Never lubricate any part of the device. Never place the device on top of any other electrical equipment. Never block ventilation openings. Install in accordance with manufacturer's instructions. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

### RoHS COMPLIANCE

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

### WEEE NOTICE

The directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment at end of life. The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycle and other forms of recovery of such wastes so as to reduce disposal. The WEEE logo on the product or on its box indicating collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown above. This product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical Waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

