


STAR TREK™
THE NEXT GENERATION®

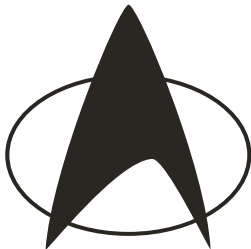

STAR TREK: TNG
Bluetooth Communicator
USER GUIDE

Applicable models: FT-PIN

STAR TREK™
THE NEXT GENERATION®



Features:

- Officially licensed **STAR TREK: The Next Generation** collectible
- Sound Clips: TNG Badge "Chirp" for Functions & Cos-play Mode
- Wireless Bluetooth® Connection to Phones, Tablets & Computers
- Built-In Omni-Directional Microphone
- Talk to SIRI or GOOGLE NOW for a hands free & ear free experience
- Answer or Make Phone Calls
- USB Rechargeable Battery
- Strong Neodymium Magnet for a comfortable wear
- Send and Listen to Texts and Emails
- Universal Translator *with 3rd party translation app



Specifications:

- Connectivity: Wireless Bluetooth® v4.1 System
- Dimensions: 1.65" x 2.1" x 0.38" / 42mm x 53mm x 9.8mm
- Battery Life: 2-48 hours (varies on type of usage)
- Battery: Rechargeable Lithium-Ion via Micro USB
- Speakers: Custom made finely tuned chambered micro transducers
- Microphone: Omni-Directional with noise cancelation
- USB Port: Micro USB, DC 5V/1A
- Frequency: 500Hz-20KHz
- S/N: 88dB

Packing:

- Unit x 1, USB cable x 1
- User guide x 1, Warranty Card x 1, Diagram x 1



Button Interface:

ON:

Press and hold the button for 3 seconds or until you hear the "Chirp" sound effect.

BLUETOOTH CONNECT:

If this is the first time connecting, wait until the blue and red LED flashes. Look for FT-PIN on phone and press PAIR. If you have previously paired the badge it will auto-pair. You will hear a "beep" when connected and the blue LED will flash every 5 seconds. If no usage after 1 minute the badge will enter "Sleep Mode". Any action like play/pause, incoming call, or text and the badge will wake

PLAY / PAUSE:

When connected you can PLAY / PAUSE music by pressing the button once

ANSWER / HANG-UP & REJECT CALLS:

Press the button 1 time to answer or hang up (will chirp)

Press and hold 2-3 seconds to reject call (will beep)

SIRI / GOOGLE NOW:

Press button twice (quickly) to activate voice recognition on phone or tablet

(will chirp before activates) If unit is sleeping you must press once to wake unit then double tap

COS-PLAY MODE / UN PAIR:

After the unit is ON it will automatically enter COSPLAY mode as long as you are not auto-connected to Bluetooth®. (COSPLAY mode is the same as PAIR MODE) If you are already connected to Bluetooth® press and hold the button for 2 seconds or until you hear the "chirp" and the blue and red LED flash at 2 second intervals. While in this mode press the button once for the "chirp" effect anytime on-demand. This unit will enter "sleep mode" after 5 minutes of non-use. To wake press button once and then resume "chirps".


OFF:

Press and hold the button for around 5 seconds or until you hear the "chirp" noise and all LEDs are off

*Hold the gold oval when removing the back magnet plate. Do not pull on the metal Delta when removing the magnet plate

*Use 5V / 1A USB charge block or computer's USB port

*Due to constant improvements specifications are subject to change without notice

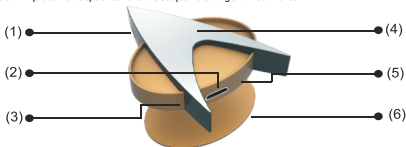

| | | | |
|---|-------------------------------|---|--------------------------|
| 1 | SPEAKERS | 4 | FUNCTION BUTTON |
| 2 | MICRO USB CHARGE INPUT | 5 | LED INDICATOR |
| 3 | MICROPHONE | 6 | MAGNET PLATE BACK |

Voice Indication:

Power ON: ~ "Chirp"

Bluetooth Connected: ~ Devices standard connect noise

Cos-Play / Pair / Un-Pair Mode ~ "Chirp"

Voice Recognition: ~ "Chirp" / devices standard noise

Answer / End Call: ~ "Chirp"

Reject Call: ~ Devices standard connect noise

Receive Call: ~ "Chirp"

Wake From Cosplay: ~ "Chirp"

Power OFF: ~ "Chirp"



Base LED Indicator:

Red LED flash = Low Battery

Red LED = Charging

Blue LED = Fully Charged (When USB Connected)

Blue LED Slow Flash = Connected to Bluetooth (every 5 seconds)

Blue and red LED Flashes = Unpair / Cosplay Mode (every 2 seconds)

Blue and red LED Flashes = Looking for Bluetooth connection (every 2 seconds)

Bluetooth Paring Troubleshooting:

If FT-PIN does not appear in your phone or tablets device manager make sure you are in PAIR MODE by confirming that the RED and BLUE LED's are flashing at 2 second intervals. If you still do not see FT-PIN in the device manager recycle the unit by turning OFF and ON again.

Charging:

We recommend tuning off the device before charging

Connect the device and power source via Micro-USB cable

Use a 1A / 5V USB charging block or connect to your computers USB port

The Blue LED will turn on when charging is complete

*Although we employ protection circuitry, using a higher Amp/Volt charging block than recommended may damage your unit

 **PROPERTY OF** 



**U.S.S. ENTERPRISE
NCC-1701-D**

TROUBLESHOOTING:

1 HEARING DISTORTION

- A Lower the volume on your phone/device.
- B Make sure it's charged up! Check for low battery, and charge speaker via USB.

2 NOT LOUD ENOUGH

- A Turn up the volume on your phone/device.
- B Make sure it's charged up!

3 UNABLE TO PAIR WITH BLUETOOTH DEVICE

- A Confirm that your phone/device is Bluetooth® compatible.
- B Follow Bluetooth® pairing instructions in this guide.
- C Visit <http://www.FameTek.com>.

4 EXPERIENCING SIGNAL LOSS OR DROPOUTS VIA BLUETOOTH

- A Move speaker closer to your phone/device.
- B Make sure it's charged up!
- C Turn off your speaker and phone/device, then power up and reconnect.

WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not expose your FameTek Speaker to liquid, moisture, humidity, or rain. Do not use the FameTek Speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the FameTek Speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the FameTek Speaker, such actions could result in electric shock.
- Clean the FameTek Speaker only with a dry cloth.
- Do not expose your FameTek Speaker to extremely high or low temperatures.
- Do not leave your FameTek Speaker in direct sunlight for extended periods of time.
- Do not leave your FameTek Speaker near open flames such as cooking burners, candles, or fireplace s.
- Do not block any ventilation openings.

Battery/Charger Hazard

- Do not dispose of your FameTek Speaker in a fire. The battery could explode causing injury , death or warp coil failure.
- Only charge the battery in accordance with the user instructions supplied with the FameTek Speaker.
- Do not attempt to disassemble the FameTek Speaker charger or force open the built -in battery because this may result in electric shock.
- Do not charge the FameTek Speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the FameTek Speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

Automobile Accident Hazard

- Use caution while using this speaker when you are engaging in any activity that requires your full attention. Whether using a motor vehicle, boat or bike always drive safely, avoid distractions and follow local laws!
- Do not leave or store the FameTek Speaker near or over your automobile's air bag because serious injury may result when an air bag deploys.
- Do not place the FameTek Speaker on high surfaces such as shelves. During music pl ayback the speaker may fall.

CAUTION

- If you have a pacemaker or other electrical medical devices, you should consult your physician before using this product. This product contains a neodymium magnet. Magnetic fields may interfere with the function of cardiac pacemakers and implantable cardioverter-defibrillators (ICDs).
- Do not use abrasive cleaners to clean your FameTek® Speaker because this could cause scratches and damage.
- Do not bring your FameTek® Speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your FameTek® Speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your FameTek® Speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your FameTek® Speaker battery, it is built-in and is not changeable.
- Keep out of the range of children under 6 years old to prevent choking on small removable parts.
- Use only the manufacturer suggested charger for your FameTek® Speaker. Other chargers could result in electric shock and damage speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your FameTek® Speaker prior to boarding an aircraft. Do not use the FameTek® Speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and the speaker's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.
- Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference,
- 2 This device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

 This product is compliant with the CE directive. All returns must be made to the original place of purchase.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of the device that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the device. Read these instructions before operation. Keep these instructions for future reference. Follow all instructions for installation, use and maintenance of the device. To avoid tilt or drop, place the device on a flat and hard surface. To clean the device, turn off device first. Clean only with soft and dry cloth. To ensure compatibility, only use accessories recommended by the manufacturer. When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture evaporates. To ensure compatibility, only use accessories recommended by the manufacturer.

- Do not expose the device to sand or dust, or cover it with items, such as newspapers, table cloths, or curtains.
- Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation. Make sure that the power supply voltage is within the range indicated on the label on the device or power adapter. If you are not sure of the type of power supply, consult your dealer or local power company. Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel. Do not use the device if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair the device yourself. Avoid using dropped or damaged appliances. If the device is dropped and the housing is damaged, the internal components may not function normally. To reduce the risk of electric shock, do not touch any connector with wet hands. Never remove the housing of the device. Never lubricate any part of the device. Never place the device on top of any other electrical equipment. Never block ventilation openings. Install in accordance with manufacturer's instructions. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

RoHS COMPLIANCE

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



WEEE NOTICE

The directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment at end of life. The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycle and other forms of recovery of such wastes so as to reduce disposal. The WEEE logo on the product or on its box indicating collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown above. This product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical Waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.





The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by FAMETEK LLC. is under license.



TM & © 2016 CBS Studios Inc. *Star Trek* and related marks and logos are trademarks of CBS Studios.



© 2016 FAMETEK © All rights reserved. FAMETEK® and LOGO are registered trademarks of FAMETEK LLC. in the United States and/or other countries.

GET FAMETEK SUPPORT

VISIT www.fametek.com

CALL 1-323-262-2262

PURCHASE Other great FAMETEK products at www.fametek.com

Become a fan of FAMETEK on Facebook and Twitter

VISIT www.facebook.com/FameTekElectronics

VISIT www.twitter.com/fametek

© 2016 FAMETEK LLC ALL RIGHTS RESERVED

 **PROPERTY OF** 



**U.S.S. ENTERPRISE
NCC-1701-D**

STAR TREK™
THE NEXT GENERATION®

