

# REPLACING SEAT PACKERS

## STEP 1

Flip seat over and remove the 6g Phillip head screws holding the seat to the rolling platform. There will be two M4 washers on the screw and its important these are retained as they prevent any minor variation in screw length to ensure the screws do not penetrate through the seat top.



## STEP 2

Lift up undercarriage away from the seat and remove the old spacers.



## STEP 3

Put bigger or smaller spacers of choice (6,12, or 18mm) on the seat and then put undercarriage in position on top.



## STEP 4

Each size spacer requires a different length screw. Please refer to the table showing what length screws are need for which size spacer.

Spacer	6g – Phillips - Screw	Washers
6mm	¾ inch	M4 Flat washer x2
12mm	1 inch	M4 Flat washer x2
18mm	1 ¼ inch	M4 Flat washer x2



When putting new screws in remember to transfer the washers across from old screws or replace with new ones.

## STEP 5

Tighten up screws till firmly tight and ensure there is not gap between the spacer and the seat. You have successfully adjusted/changed the seat packers on the seat.

