 


# HIGH SPEED BLENDER

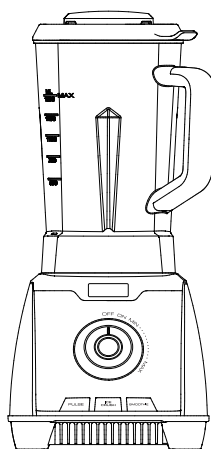

## USER MANUAL

BL2515

## CONTENT

|                                       |   |
|---------------------------------------|---|
| IMPORTANT SAFETY INSTRUCTIONS.....    | 1 |
| PART NAME.....                        | 3 |
| TECHNICAL DATA OF THE PRODUCT .....   | 3 |
| INSTRUCTIONS FOR USE.....             | 4 |
| RECIPES.....                          | 6 |
| ABNORMALITY ANALYSIS AND HANDING..... | 7 |
| CLEANING AND MAINTENANCE .....        | 8 |
| CIRCUIT PRINCIPLE DIAGRAM.....        | 9 |

**IMPORTANT NOTE:** Please read the manual carefully before operating your product. Retain it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

To avoid the risk of serious injury when using your blender, basic safety precautions should be followed, including the following.

### **READ ALL INSTRUCTIONS, SAFEGUARDS, AND WARNINGS BEFORE OPERATING BLENDER**

1. There is a potential injury from misuse. Please handle it with care.
2. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
3. This appliance shall not be used by children. Keep the appliance and its cord out of children reach.
4. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
5. Children shall not play with the appliance.
6. Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
7. Be careful if hot liquid is poured into blender as it can be ejected out of the appliance due to a sudden steaming.
8. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
9. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments .
10. If the supply cord is damaged, it must be replaced by the manufacturer,

## IMPORTANT SAFETY INSTRUCTIONS

its service agent or similarly qualified persons in order to avoid a hazard.

**SAVE THESE INSTRUCTION.**

**THIS UNIT IS INTENDED FOR HOUSEHOLD USE ONLY.**

### **Caution:**

Ensure that the blender is switched off before removing


### **Caution:**

The failure to follow any of the important safeguards and the important instructions for safe use is a misuse of your Table blender that can void your warranty and create the risk of serious injury.

### **Safety system**

This appliance is equipped with motor thermal protector. If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down until room temperature then put the mains plug back into the power outlet and switch on the appliance again. Please contact your dealer or an authorized service center if it is activated too often.

PART NAME

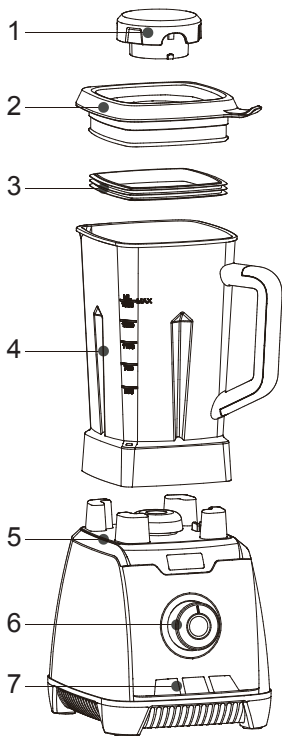


| No. | Description        |
|-----|--------------------|
| 1   | Measuring cup      |
| 2   | Jar cover          |
| 3   | Seal               |
| 4   | 1.5 litre jar      |
| 5   | Main body          |
| 6   | Speed control dial |
| 7   | Function buttons   |

TECHNICAL DATA OF THE PRODUCT

| Product name       | Model No. | Rated voltage | Rated frequency | Rated power |
|--------------------|-----------|---------------|-----------------|-------------|
| HIGH SPEED BLENDER | BL2515    | 220-240V~     | 50-60Hz         | 1500W       |

# INSTRUCTIONS FOR USE

## Table blender

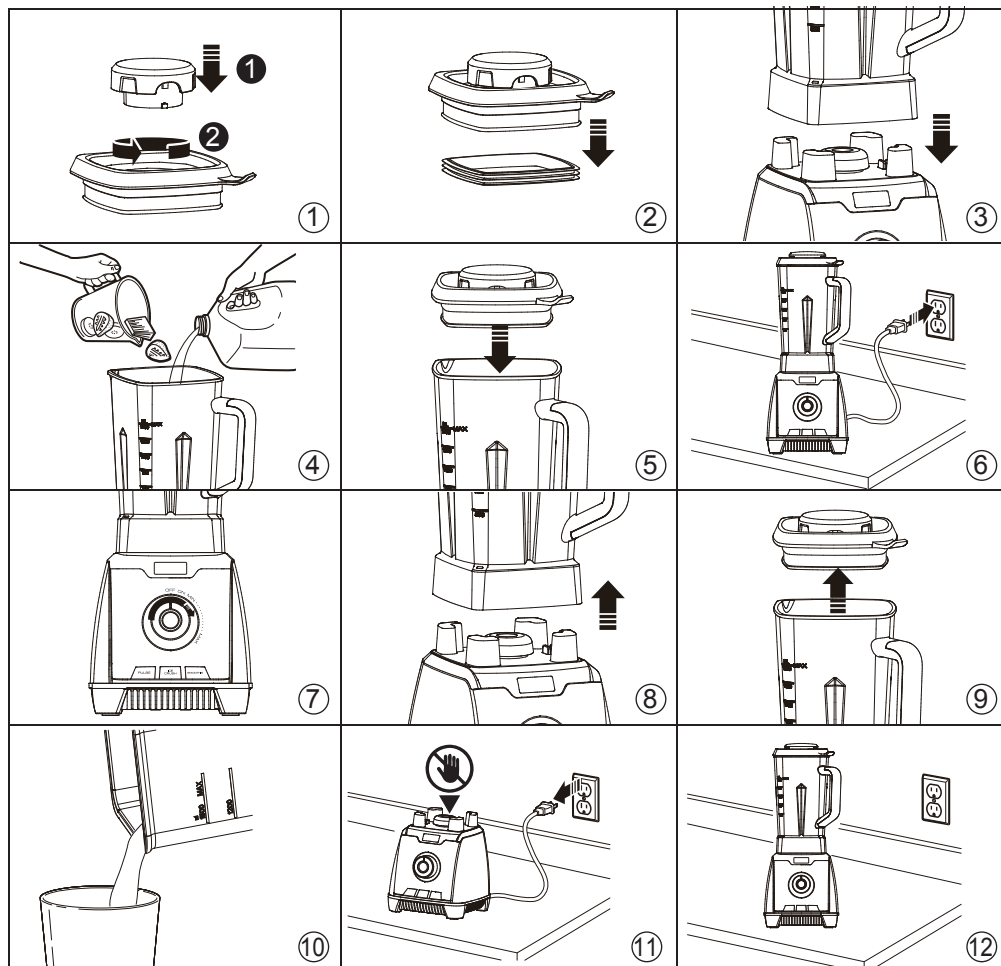

### **⚠ Caution:**

Do not contact surface of the lower clutch to prevent burning when the mixer works.

### **Before First Use**

- Be careful when handling the blades as they are extremely sharp.
- Wash the jar, lids, blade assembly and attachments in warm soapy water with a soft cloth. Rinse and dry thoroughly. All parts (except motor base) may be washed in the dishwasher machine, on the top shelf.

## INSTRUCTIONS FOR USE

### **Speed control dial ( OFF / ON / MIN / MAX )**

The speed control dial can turn on or off the Unit, adjust the setting from Min. to max speed;

#### **Min. speed:**

Low speed to combine more delicate foods with a folding motion, and is good for combining wet and dry ingredients.

#### **Middle speed:**

(Middle setting is between Max .and Min setting): Medium speed and more control for creating batters or coarser textures.

#### **Max. speed setting:**

High speed is ideal for breaking down ingredients to make cocktails and other finely blended mixtures.

#### **Pulse:**

Momentary burst of highest power.

#### **Smoothie:**

Optimises the blender's capabilities to create great smoothies and drinks.

#### **Ice Crush:**

crush the ice function.

### **Help to protect motor**

- The blender will not knead dough, or mash potatoes.
- Do not blend hot or boiling ingredients. Allow food cool down to a warm state before placing in the blender. This is to safeguard against sudden bursts of steam that could cause the lid to dislodge.

### **Overload protection system**

- The blender is equipped with an internal non-self resetting overload protector to protect the motor from damage under heavy loads or continuous, the motor may stop. If the blender suddenly stops during use, this protector may have tripped.
- Unplug the power supply and remove the jar and leave it to cool for at least 30 minutes.
- Tripping the protector indicates that the blender is being loaded too heavily, or with excessive continuous use. Reduce the amount of ingredients used or allow more time in between blending to prevent it from happening again, which will help preserve the life of the motor.
- The MAX line is usually a good indicator to prevent overloading, Please do not blend the recipe exceeded the max line.

## RECIPES

### Blending programs

The blending times in the chart below are not approximate and should be adjusted to suit your own tastes, different food quantities and food manufacturer's instructions.

| Button           | Duration                | Speed (operation cycle)                                          | Action                                   | Use                         |
|------------------|-------------------------|------------------------------------------------------------------|------------------------------------------|-----------------------------|
| Control knob     | max. 3 minutes          | set speed (within MIN - MAX range)                               | switching on/off; set desired speed      | blending raw or cooked food |
| SMOOTHIE button  | max. 2 minutes          | soft start for 15s followed with acceleration to reach max speed | press once to start, press again to stop | preparing smoothies, shakes |
| ICE CRUSH button | 40-46 seconds           | 0.15s blade rotation followed with 0.9s resting time             | press once to start, press again to stop | crushing ice                |
| PULSE button     | at will; max. 3 minutes | max speed                                                        | press and hold; release to stop          | blending at max speed       |
| Control knob     | max. 3 minutes          | max speed                                                        | 600g carrots, 900g water, 2 min          | carrots juice               |

Note: If you want to prepare a larger quantity, let the appliance cool down to room temperature before you process the next batch of ingredients.

#### **Caution:**

- Hot liquids can erupt during blending. Do not blend hot liquids.
- This product is not suitable for mixing dry food. Never run the appliance empty.

#### **Tip:**

- Press the PULSE button at any time to bring the motor to max speed. If used for 3 minutes, the appliance will switch off automatically. Wait 3 minutes before using the appliance again.
- Press and release the PULSE button during the ICE CRUSH and SMOOTHIE programs to stop the operation early. The appliance switches to standby mode and indicators are flashing.
- Pressing the ICE CRUSH and SMOOTHIE buttons will not affect control knob operation. Press and release the PULSE button or turn the control knob to OFF position to finish the program during operation early.
- Turning the control knob during ICE CRUSH and SMOOTHIE programs will modify the motor unit speed, following the control knob setting. Then turn the control knob to ON position to stop operation.
- Turn the control knob to OFF position to stop any program during operation and switch the appliance off.

# ABNORMALITY ANALYSIS AND HANDLING


## Abnormality Handling

1. In case of abnormalities such as abnormal noises, smell, smoke, etc., you should immediately cut off power and stop use.
2. If the product cannot work, please check if the power supply is connected, if the switch is put to the ON position and if fittings are installed in place.
3. If the product still cannot work after checks mentioned above, please consult the designated repair centre for maintenance.

## Fault Analysis and Elimination

| Problem                             | Cause                                                                                                                                                                                                                                                                                               | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance is not working        | <ul style="list-style-type: none"><li>• Appliance not plugged in</li><li>• Wall outlet not energized</li><li>• Appliance not switched on</li><li>• Overheated appliance</li><li>• Over current protection activated</li><li>• Too much food in the jar</li><li>• Malfunctioning appliance</li></ul> | <ul style="list-style-type: none"><li>• Insert the plug into the wall outlet</li><li>• Check fuses and circuit breaker</li><li>• Turn the control knob to the ON position to place the appliance in standby mode. Indicator lights are flashing blue</li><li>• Turn the control knob to the OFF position, unplug the appliance from the wall outlet and allow to cool down before using it again</li><li>• Turn the control knob to the OFF position to switch the appliance off, then to the ON position to place the appliance in standby mode. Resume blending operation</li><li>• Turn the control knob to the OFF position, remove some food, shake ingredients to redistribute and restart blending operation</li><li>• Turn the control knob to the OFF position, unplug the appliance from the wall outlet and contact qualified personnel to check and repair the appliance</li></ul> |
| The blades are rotating very slowly | <ul style="list-style-type: none"><li>• Too much food in the jar / Motor is overloaded</li><li>• Not enough liquid in the jar / Motor is overloaded</li></ul>                                                                                                                                       | <ul style="list-style-type: none"><li>• Turn the control knob to the OFF position, remove some food, shake ingredients to redistribute and restart blending operation</li><li>• Turn the control knob to the OFF position, add some liquid and restart blending operation</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Food not fully blended              | <ul style="list-style-type: none"><li>• Ingredients too large</li><li>• Too much food in the jar</li></ul>                                                                                                                                                                                          | <ul style="list-style-type: none"><li>• Turn the control knob to the OFF position, remove ingredients and cut them into smaller pieces</li><li>• Turn the control knob to the OFF position, remove some food, shake the jar to redistribute the ingredients and then restart blending operation</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Water leakage                       | <ul style="list-style-type: none"><li>• Parts not tightly secured</li><li>• Missing seal ring on the lid</li><li>• Damaged seal ring on the lid</li><li>• Damaged seal ring on the blade unit</li></ul>                                                                                             | <ul style="list-style-type: none"><li>• Check and secure the parts carefully</li><li>• Place the required seal</li><li>• Replace with a proper new seal</li><li>• Replace the blade unit</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## CLEANING AND MAINTENANCE

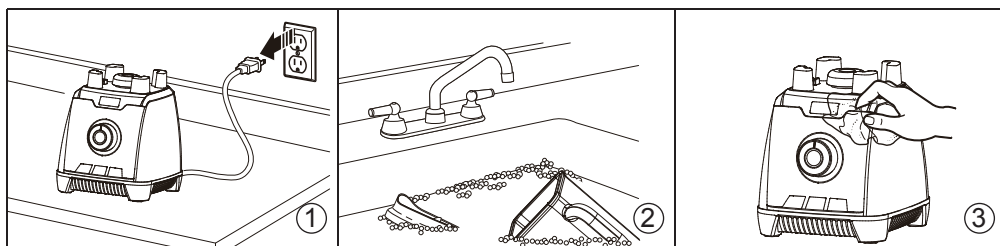

### Warning:

- **Cat hazard:** Blades in jar are very sharp. Use caution when cleaning.

Unplug the power cord from the power outlet after use for safety reasons.

### Jug, blades and lids

Avoid allowing food residue to dry on. Follow these steps as soon as possible after use:

- Rinse most of the residue off the jug, blades and lids.
- Hand wash in warm, soapy water using a mild liquid detergent and nonabrasive sponge.

### Motor base

To clean the motor base, wipe with a soft, damp cloth then dry thoroughly. Wipe any excess food particles from the power cord.

### Cleaning agents

Do not use abrasive scouring pads or cleaners on either the motor base or any part of the blender, as they may scratch the surface. Use only warm soapy water with a soft cloth.

### Pressurisation

The blending jar may be rinsed by adding cold water, attaching blades, and either blending or shaking by hand for 10 seconds.

**IMPORTANT: There is a risk of pressurisation from hot water.**

### Dishwasher

jar, lids and blade assembly may be washed in the dishwasher machine on the top shelf only.

### Stubborn food stains and odours

Strong smelling foods such cumin and coriander, and some vegetables such as carrots may leave an odour or stain.


## CLEANING AND MAINTENANCE

To remove, pour warm soapy water and fill to the MAX mark. Set aside to soak for 5 minutes. Then wash with a mild detergent and warm water, rinse well and dry thoroughly. Store blending bottle and jug with lids off.

### Storage

Store your blender upright with the blender jar assembled on the motor base, or beside it. Do not place anything on top. To allow air to circulate, keep the lid off.

## CIRCUIT PRINCIPLE DIAGRAM

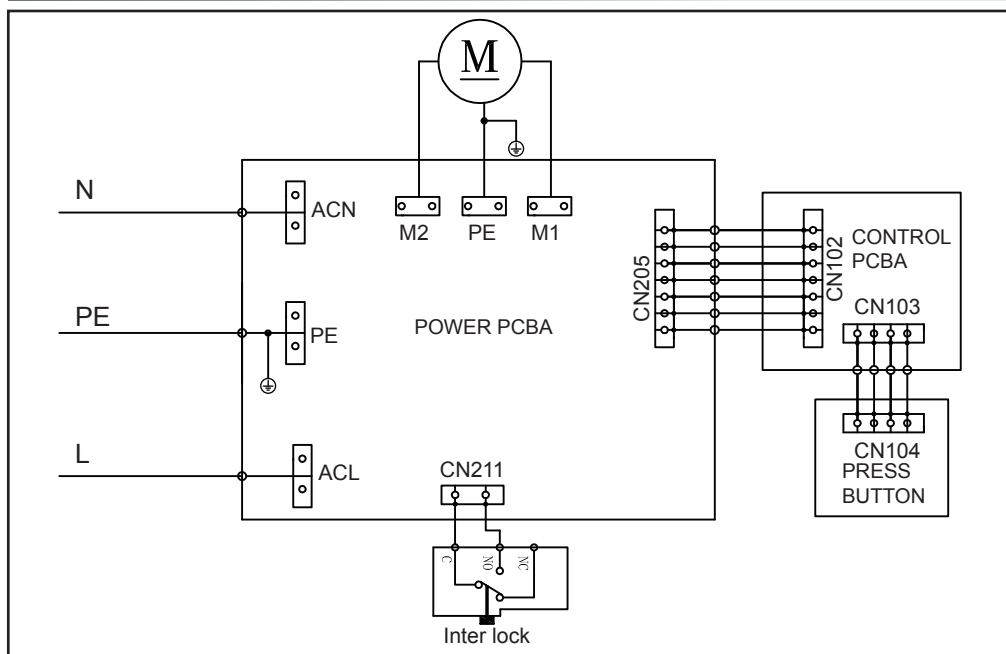

## Environmental protection



The appliance must not be disposed of with regular household waste. At the end of its service life, the appliance must be properly delivered to a collection point for the recycling of electrical and electronic equipment. By Collection By Collection and recycling of old appliances, you are making an important contribution to the conservation of our natural resources and provide for environmentally sound and healthy disposal.

重点  
校对项

1. 结构尺寸
2. 材质标注
3. 物料编码
4. 颜色标注
5. 客户型号
6. 电压功率
7. 认证信息
8. 条码数字
9. 产品名称

|     |  |
|-----|--|
| 项目  |  |
| 库   |  |
| 文件名 |  |

尺寸：148X210mm

页码：12P

材质：80G 书纸

印刷颜色：2色印刷（黑色+蓝色PANTONE 299 U）

印刷版面：双面印刷

装订：骑马钉

警告语：首字母字体高度3.03（12pt）

|     |       |                      |            |     |          |         |  |  |       |                   |  |  |  |
|-----|-------|----------------------|------------|-----|----------|---------|--|--|-------|-------------------|--|--|--|
|     |       |                      |            |     |          | BL2515  |  |  |       | Midea-BL2515-0502 |  |  |  |
|     |       |                      |            |     |          | 说明书     |  |  |       |                   |  |  |  |
|     |       | 图 (16161000A0546) 图号 |            | 田龙飞 | 20201210 |         |  |  |       |                   |  |  |  |
| 标记  | 处数    | 更改文件号                |            | 签 字 | 日 期      |         |  |  |       | 材质:80G 书纸         |  |  |  |
| 制 图 | 苏德松   | 认 证                  | 符官文        |     |          | 图 样 标 记 |  |  | 重 量   | 比 例               |  |  |  |
| 设 计 | ----- | 标 准 化                | 古广君        |     |          | / K /   |  |  | /     | 1:1               |  |  |  |
| 校 对 | ----- | 审 定                  | 罗海燕        |     |          |         |  |  |       |                   |  |  |  |
| 会 签 | ----- | 日 期                  | 2018-11-27 |     |          | 共 1 页   |  |  | 第 1 页 |                   |  |  |  |
|     |       |                      |            |     |          |         |  |  |       | 主力智业（深圳）电器实业有限公司  |  |  |  |