Cumbia

POWER ESPRESSO 20

Cafetera espresso/Espresso coffe machine



cecutec

Manual de instrucciones Instruction manual Manuel d'instructions Bedienungsanleitung Manuale di istruzioni Manual de instruções Handleiding Instrukcja obsługi Návod k použití



| Instrucciones de seguridad | 3 | INDICE | |
|--|----------|---|----------|
| Safety instructions | 6 | 1. Parti e componenti | 61 |
| Instructions de sécurité | 9 | 2. Prima dell'uso | 61 |
| Sicherheitshinweise | 12 | 3. Funzionamento | 62 |
| Istruzioni di sicurezza | 15 | 4. Pulizia e manutenzione | 64 |
| Instruções de segurança | 18 | 5. Risoluzione dei problemi | 65 |
| Veiligheidsvoorschriften | 21 | 6. Specifiche tecniche | 67 |
| Instrukcje bezpieczeństwa | 24 | 7. Riciclaggio di elettrodomestici | 67 |
| Bezpečnostní pokyny | 27 | 8. Garanzia e SAT | 67 |
| ÍNDICE | | ÍNDICE | |
| 1. Piezas y componentes | 30 | 1. Peças e componentes | 69 |
| 2. Antes de usar | 30 | 2. Antes de usar | 69 |
| 3. Funcionamiento | 31 | 3. Funcionamento | 70 |
| 4. Limpieza y mantenimiento | 33 | 4. Limpeza e manutenção | 72 |
| 5. Resolución de problemas | 34 | 5. Resolução de problemas | 73 |
| 6. Especificaciones técnicas | 35 | 6. Especificações técnicas | 75 |
| 7. Reciclaje de electrodomésticos | 36 | 7. Reciclagem de eletrodomésticos | 75 |
| 8. Garantía y SAT | 36 | 8. Garantia e SAT | 75 |
| INDEX | | INHOUDSTAFEL | |
| 1.Parts and components | 38 | 1. Onderdelen en componenten | 77 |
| 2. Before use | 38 | 2. Voor u het toestel gebruikt | 77 |
| 3. Operation | 39 | 3. Werking | 78 |
| 4. Cleaning and maintenance | 41 | 4. Schoonmaak en onderhoud | 80 |
| 5. Troubleshooting | 42 | 5. Probleemoplossing | 81 |
| 6. Technical specifications | 43 | Frobleemoplossing | 83 |
| 7. Disposal of old electrical appliances | 43 | | 83 |
| 8. Technical support and warranty | 44 | 7. Recyclage van elektrische apparaten 8. Garantie en technische ondersteuning | 83 |
| SOMMAIRE | | SPIS TREŚCI | |
| 1. Pièces et composants | 45 | | 84 |
| 2. Avant utilisation | 45 | 1. Części i komponenty | 84 |
| 3. Fonctionnement | 46 | 2. Przed uruchomieniem | 85 |
| 4. Nettoyage et entretien | 48 | 3. Obsługa urządzenia | |
| 5. Résolution de problèmes | 49 | 4. Czyszczenie i konserwacja | 87 |
| 6. Spécifications techniques | 51 | 5. Rozwiązywanie problemów | 88 |
| 7. Recyclage des électroménagers | 51 | 6. Dane techniczne | 90 |
| 8. Garantie et SAV | 52 | 7. Recykling sprzętu 8. Gwarancja i Pomoc Techniczna | 90 90 |
| INHALT | | OBSAH | |
| 1. Teile und Komponenten | 53 | | 0.7 |
| 2. Vor dem Gebrauch | 53 | 1. Části a složení | 92 |
| 3. Bedienung | 54 | 2. Před použitím | 92 |
| 4. Reinigung und Wartung | 56 | 3. Fungování | 93 |
| 5. Problembehebung | 57 | 4. Čištění a údržba | 95 |
| Froblembenebung Technische Spezifikationen | 59 | 5. Řešení problémů | 96 |
| 7. Entsorgung von alten Elektrogeräten | 59 59 | 6. Technické specifikace | 97 |
| Garantie und Kundendienst | 60 | 7. Recyklace elektrospotřebičů | 97 |
| o. darantic una Nandellalellat | 00 | 8. Záruka a technický servis | 98 |





SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.

Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.

Warning: If the appliance falls accidentally in water, unplug it immediately. Do not reach into the water!

Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.

Warning: Do not use the appliance if its cord, plug, or housing is damaged, nor after it malfunctions or has been dropped or damaged in any way.

Do not twist, bend, strain, or damage the power cord in any way. Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the cord hang over the edge of the working surface or countertop.

This appliance is not intended to be operated by means of an





Turn off and unplug the appliance from the mains supply when not in use and before cleaning it. Pull from the plug, not the cord, to disconnect it from the outlet.

This product is designed only for household use. It is not suitable for commercial or industrial use. Do not use outdoors. Do not use any accessory that has not been recommended by Cecotec, as they might cause injuries or damage.

The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.

This product can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Supervise children, they shall not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

Keep this appliance and its power cord out of reach of children under the age of 8.

Place the appliance on a dry, stable, flat, heat-resistant surface. Do not use the appliance under the following circumstances:

On or near a gas or electric hob, in heated ovens, or near open flames.


On soft surfaces (such as carpets) or where it may tip over during use.

Outdoors or in areas with high humidity levels.

The temperature of accessible surfaces may be high while in use and could cause burns. Do not touch hot surfaces while in use or immediately after.



Do not cover the appliance during operation.

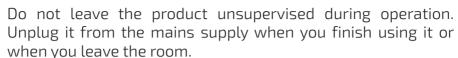

Do not try to repair the device by yourself. Contact the official Technical Support Service of Cecotec for advice.

Cleaning and maintenance must be carried out according to this instruction manual to make sure the appliance functions properly. Turn off and unplug the appliance before moving and cleaning it.

Cleaning and maintenance tasks must not be carried out by children.

Do not wash the appliance in dishwashers.


Store the appliance and its instruction manual in a safe and dry place when not in use.

No liability is accepted for any eventual damage or personal injuries derived from misuse or non-compliance with this instruction manual.







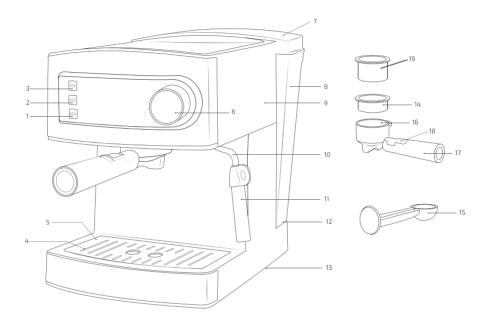



1.PARTS AND COMPONENTS

Fig. 1.

- 1. Preheating function button
- 2. Coffee button
- 3. Steam button
- 4. Drip tray
- 5. Removable grid
- 6. Steam selector
- 7. Water tank cover
- 8. Water tank
- 9. Housing
- 10. Steam exit
- 11. Steam tube
- 12. Main body
- 13. Base
- 14. Single stainless steel coffee filter
- 15. Measuring spoon and tamper
- 16. Filter holder
- 17. Portafilter
- 18. Filter fastener (press the filter with it when pouring out coffee residue to prevent the filter from slipping out)
- 19. Filter for two coffees

2. BEFORE USE

Remove all packaging material

Inspect all parts of the appliance for visual damage.

Unwind the power cord completely and inspect it for damage. Do not use the appliance if it or its cord have been damaged or are not working properly. In case of damage, contact the official Technical Support Service of Cecotec for advise, repairs, or returns.

Make sure you have read and understood all instructions and warnings in this instruction manual.

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

Pour water into the water tank, the water level should not exceed the "MAX" mark in the tank. Close the cover of the water tank.

Note: The appliance is equipped with a detachable tank for easy cleaning. Fill the tank with water first and put it back on the appliance.

38 | Cumbia





Insert the stainless-steel filter into the portafilter without ground coffee. Then, insert the portafilter into the appliance, matching the shape of the filter holder and the shape of the water outlet. Turn it counter clockwise until the handle is aligned with the "lock" mark on the appliance.

Place a jug on the removable grid. Make sure the steam extraction knob is off.

Plug the device into a power supply. The plug must be accessible so that, in case of an emergency, it can be easily unplugged.

Press the coffee button ready and the indicator light will start blinking. Wait until the indicator light stops blinking.

Press the coffee button. The machine will pump water into the jug; press the button again when the jug is full to stop. The light indicator will blink again until the product stops preheating. Repeat this process twice.

Note: you may hear a noise when the appliance pumps water for the first time. It is completely normal, the appliance is releasing air in its interior. After about 20 seconds, the noise will disappear.

3. OPERATION

Preheating

To prepare a cup of good hot espresso coffee, it is recommended to preheat the appliance before brewing coffee, including the filter holder, filter, and cup, so that the flavour of the coffee is not altered by any cold part.

Remove the detachable tank, open the tank cover, and fill it with water. The water level should not exceed the "MAX" mark in the tank. Install the tank back in the appliance.

Insert the stainless-steel filter into the portafilter. Then, insert the portafilter into the appliance, matching the shape of the filter holder and the shape of the water outlet. Turn it counter clockwise until the handle is aligned with the "lock" mark on the appliance.

Place an espresso cup on the removable grid.

Connect the coffee machine to a power supply. Make sure the steam extraction knob is off. Press the coffee button ready and the indicator light will start blinking. Wait until the indicator light stops blinking.

Press the coffee button. The machine will pump water into the cup, heating all parts that are going to be in contact with coffee. Press the button again when the cup is full to stop brewing. The light indicator will blink again until the product stops preheating.

How to prepare an espresso

After preheating, remove the portafilter from the main body by turning it clockwise. Use a dry cloth to dry it. Fill the filter with ground coffee using the measuring spoon and press it tightly with the other end of the spoon.

Then, insert the portafilter into the appliance, matching the shape of the filter holder and the

POWER ESPRESSO 20

39







shape of the water outlet. Turn it counter clockwise until the handle is aligned with the "lock" mark on the appliance. Make sure the steam extraction knob is off.

Pour out hot water in the cup and place the hot cup on the removable grid.

Once the indicator light stops blinking, press the coffee button and coffee will start flowing into the cup. Press the button again to stop brewing coffee once you have the desired amount of drink.

Warning: Do not leave the coffee maker unattended while in use, as you need to stop it manually.

When coffee is ready, remove the portafilter by turning it clockwise. Throw away the coffee rests by pressing the filter with the filter fastener and turning it upside down over an appropriate container.

Let all parts cool down and rinse them with water.

How to froth milk

Prepare an espresso as indicated in the previous section; make sure that the steam extraction knob is off.

Press the steam button and wait until the light indicator stops blinking.

Fill a jug with about 100 ml of milk for each cappuccino you want to prepare. It is recommended to use cold whole milk for optimal results.

Note: Use a jug with a diameter greater than 70±5 mm, and bear in mind milk doubles its volume during this process, make sure the jug is high enough.

Turn the steam extraction knob slowly counterclockwise. Steam will come out from the steam exit.

Note: Do not turn the steam knob quickly, as a great amount of steam could accumulate in a short period of time and could be dangerous.

Insert about two centimetres of the steam tube into the milk. Froth milk by moving the jug up and down.

When finished, turn the steam knob to the off position and press the steam button again to deactivate the function.

Warning: Clean the steam exit with a wet sponge immediately after use. Then, remove the steam tube and clean the duct's inside part. It is also recommended to emit steam again in order to clean possible milk remaining inside the tube.

Pour frothed milk into the espresso to prepare cappuccino.

Note: It is recommended to allow the appliance to cool down for at least 5 minutes before brewing coffee again. Otherwise, your espresso might have a light burnt odour.

How to prepare hot water

Press the coffee button and make sure the steam knob is off. The indicator light will stop blinking once the appliance reaches the desired temperature.

Turn the steam extraction knob counterclockwise (at least 135°). Then, press the coffee button. Hot water will flow out from the steam exit.

40 | **Cumbia**







How to heat drinks with steam

The steam exit (without the steam tube) can be used to heat beverages like hot chocolate, water, or tea.

Remove the detachable tank, open the tank cover, and fill it with water. The water level should not exceed the "MAX" mark in the tank. Install the tank back in the appliance.

Connect the coffee machine to a power supply. Make sure the steam extraction knob is off.

Press the steam button and the light indicator will start blinking. Wait until the light stops blinking.

Remove the steam tube from the steam exit.

Introduce the steam exit in the drink you wish to heat. Slowly turn the steam knob counterclockwise to release steam.

When the required temperature is reached, turn the steam knob to the off position.

Press the steam button again to turn the appliance off.

4. CLEANING AND MAINTENANCE

Turn off, unplug the appliance, and let it cool down before cleaning it.

Clean the housing of the appliance with a wet cloth. Empty the water tank and drip tray, and clean them together with the removable grid. Dry them thoroughly.

Note: Do not clean the appliance with alcohol or solvents. Do not immerse the main body of the appliance in water.

Clean the portafilter and the stainless-steel filter under running water.

Mineral deposits cleaning

Clean the mineral deposits every 2-3 months in order to ensure that the coffee maker operates properly, that the internal piping is clean, and that the flavour of the coffee is good.

Fill the tank with water and descaling liquid up to the "MAX" level (the proportion of water and descaling liquid is 4:1). Citric acid can also be used (available in chemist's or drug stores) instead of descaling liquid (100 parts of water and 3 parts of citric acid).

Insert the stainless-steel filter into the filter holder without ground coffee in it and attach it to the main body as indicated in previous sections. Place a jug under the filter holder. Make sure the steam extraction knob is off.

Press the coffee button and wait until the indicator light stops blinking. Then, press the coffee button and dispense about 500 ml (20 fl. oz.) of liquid. Press the coffee button again to stop and wait for 5 seconds.

Press the steam button and wait until the light indicator stops blinking. Turn the steam knob counterclockwise to release steam for 2 minutes. Then, turn the steam knob to the off position and press the steam button again to stop. Allow the appliance to cool down for 15 minutes. Restart the unit and repeat steps of 4 and 5 at least 3 times.

Press the coffee button and wait until the indicator light stops blinking. Then, press the coffee

POWER ESPRESSO 20

41







button and dispense liquid until the tank is empty. Fill the tank with water up to the "MAX" mark and repeat steps 4 and 5 at least 3 times. Then, continue with step 7.

5. TROUBLESHOOTING

| Error | Cause | Solution |
|--|---|--|
| Water leaks from the bottom or the water tank's lid. | The water tank is not properly assembled. | Insert the water tank correctly into the water intake on the appliance's base. |
| | The water level in the tank exceeds the "MAX" mark. | The water level in the tank should lay between the MIN and MAX marks. |
| Water leaks from the bottom of the coffee maker. | There is too much water in the drip tray. | Clean the drip tray. |
| | The coffee maker does not work properly. | Contact the official Technical Support Service of Cecotec. |
| Water leaks from the edge of the filter. | There is ground coffee on the edge of the filter. | Clean the filter edge. |
| Acid (vinegar) taste in coffee. | The machine has not been cleaned properly after cleaning the mineral deposits. | Clean the coffee maker as explained in the Before use section. |
| | Ground coffee has been stored in a hot, wet place for a long time. Coffee has turned bad. | Use fresh ground coffee, or store the it in a cool, dry place. After opening a package of ground coffee, reseal it tightly and store it in a refrigerator to maintain its freshness. |

42 | Cumbia





| The coffee maker does not work properly. | The power cord is not properly plugged. | outlet correctly; if the appliance still does not work, contact the Technical Support Service. |
|--|---|--|
| The steaming function does not froth milk. | The steam light indicator is still blinking. | Steam can be used to froth only after the steam light indicator has stopped blinking. |
| | The container is too big or the shape is not correct. | Use a higher and narrower container. |
| | You have used skimmed milk. | Use whole milk. |
| The steam tube does no emit steam. | The inside tube is clogged. | Remove the steam tube and use a sharp object to clean the inside part of the tube. Remove all possible obstructions. Then, carry out a steam cycle. If the problem remains, contact the official Technical Support Service of Cecotec. |

6. TECHNICAL SPECIFICATIONS

Product reference: 01503

Power: 850 W

Voltage and frequency: $230 \text{ V} \sim 50 \text{ Hz}$ Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

POWER ESPRESSO 20

43





The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

8. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.









Grupo Cecotec Innovaciones S.L. . C/ de la Pinadeta s/n, 46930 Quart de Poblet, Valencia (Spain) YV02200218

(