




MODEL: USI-2022
STEAM IRON

I N S T R U C T I O N M A N U A L

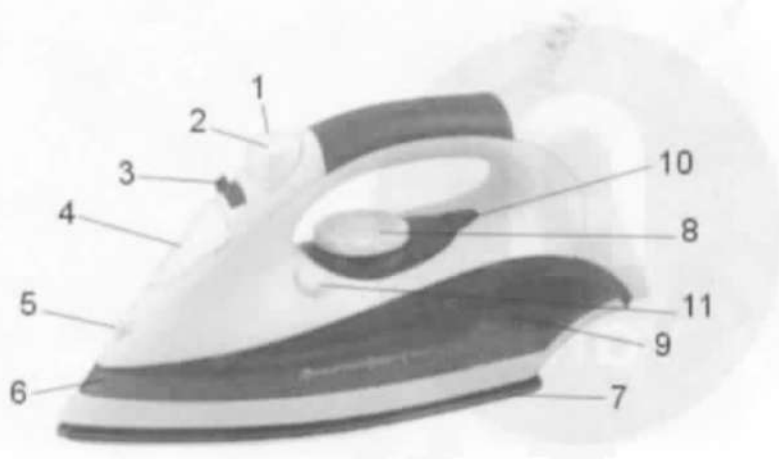

1. Burst steam button
2. Spray button
3. Variable steam control
4. Water filling inlet
5. Spray nozzle
6. Max water level
7. Soleplate
8. Temperature knob
9. Water tank
10. Pilot light
11. Self cleaning button

PLEASE READ CAREFULLY- ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

- ~ Check that the mains voltage corresponds with the rating of the appliance before operating.
- ~ Do not touch hot surfaces - Use handles or knobs.
- ~ To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- ~ Do not leave any appliance unattended while it is operating.
- ~ Close supervision is necessary when any appliance is used by or near children or infirm persons.
- ~ Unplug from outlet when not in use or before cleaning. Allow to cool before putting on or taking off any parts.
- ~ Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ~ Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces
- ~ Do not use this product for anything other than its intended use. This appliance is for household use only.
- ~ No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.
- ~ The iron should always be turned to "min" before plugging or unplugging from the mains outlet. Never pull the cord to disconnect from the mains: instead, grasp plug and pull to disconnect.
- ~ Burns can occur from touching hot metal parts, hot water or steam, use caution when you turn a steam iron upside down-there may be hot water in the reservoir.
- ~ If the iron is not operating normally, disconnect from the power supply and contact the nearest authorized service agent.
- ~ Your iron is designed to rest on the heel. Do not leave the iron unattended when switched on. Do not place the iron on an unprotected surface even if it is on its heel rest.
- ~ This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been

given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

~ Keep the iron and its cord out of reach of children less than 8 year of age when it is energized or cooling down.

FILLING WITH WATER

~ Ensure the iron is disconnected from the power supply.

~ Turn the steam control knob to position "0"

Fill with water through water filling inlet. (Do not exceed main level mark on the water tank.)

SETTING THE TEMPERATURE

* Synthetics-Silk

**Wool

***Cotton- Linen

- Stand the iron upright

- Set temperature control to ironing temperature.

Inset the mains plug into the main supply.

After the indicator light has gone out and come on again, you may start ironing. The indicator light will go out from time to time during ironing.

STEAM-IRONING

~ Set the temperature control to position** for moderate steam and to *** for maximum steam. With conventional steam irons, water may leak from the sole plate if a too low temperature has been selected.

~ Ensure that there is enough water in the water reservoir.

- Stand the iron on its heel

- Insert the mains plug into the wall socket.

- Wait a little while for the indicator light to go out and come on again.

- See the variable steam knob to adjust the steam.

BURST OF STEAM

~ By pressing button an intense "Burst "of steam is emitted from the sole plate.

~ To prevent water leaking from the sole plate, do not keep the steam control button depressed for more than 5 seconds,

SPRAY SETTING

~ At any temperature by pressing the spray button a couple of time the laundry can be damped down.

~ Ensure that there is enough water in the water reservoir.

DRY IRONING

~ Turn the variable steam knob to the position "O"(=no steam).

STORAGE

~ Remove the mains plug from the wall socket.

~ Pour and remaining water out of the water reservoir.

- ~ Set the steam knob to no steam position.
- ~ Stand the iron upright and let it cool down sufficiently.

CLEANING

- ~ Before cleaning the iron ensure it is disconnected from the power supply and has completely cooled down.
- ~ Deposits on the sole plate may be removed with a rough cloth soaked in a vinegar/water solution.
- ~ The casting may be wiped with a damp cloth and then polished with a dry one.
- ~ Do not use abrasives on the sole plate.
- ~ Keep the sole plate smooth. Avoid hard contact with metal objects.

SELF CLEANING

It is important to apply "self-cleaning" at least every two weeks to remove impurities etc.

The harder the water the more the iron should be self-cleaned.

- ~ Open the filling funnel and fill the water reservoir up to the MAX position , then close the filling funnel.
- ~ Set the temperature control to MAX.
- Insert the mains plug into the wall socket.
- ~ Allow the iron to heat up until the temperature pilot light goes out.
then set temperature control dial to position MIN.
- ~ hold the iron horizontally over the sink, then remove the variable steam control knob from the body enabling the iron to self clean.
- ~ Boiling water and steam will now be ejected from the holes in soleplate. Impurities are washed away with it. Move the iron forwards and backwards while this happened.
- ~ Set the steam control to "O" position when the water reservoir has become empty.
- ~ Repeat self-cleaning if you notice that much impurity or other has been washed out.
- ~ Move the iron over a (preferably) old piece of cloth. This is to ensure that the soleplate will be dry during storage..
- ~ Unplug and allow the iron to cool down before storing it.

220-240V 50/60Hz 2000-2200W