


MODEL: USI-128B
STEAM IRON

I N S T R U C T I O N M A N U A L

INSTRUCTION MANUAL

Part Identification

1. Water tank
2. Water filling inlet
3. Steam button
4. Temperature control dial
5. Cord protector
6. Pilot light
7. MAX. water level
8. Soleplate

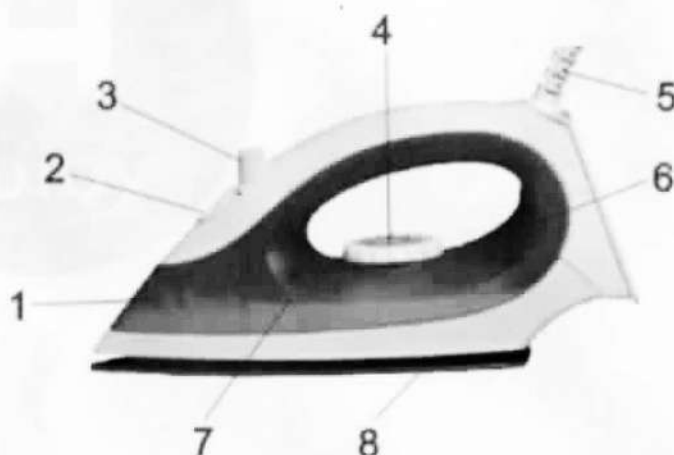

Important

- Ensure that the voltage in the electrical network is the same as that on the type plate.
- The iron should always be turned off before plugging or unplugging the power cord.
- Never yank the cord while unplugging it from the outlet! Instead, grasp the plug and pull it to unplug.
- Never use the appliance if it is damaged in anyway.
- When leaving the iron, even when only a short while, always unplug the power cord.
- Close supervision is necessary for any appliance being used by or near children.
- Do not leave the iron unattended while connected or it is on the ironing board.
- Burns can occur from touching hot metal parts, hot water or steam.
- Be careful when you turn the steam iron upside down - there may be hot water in the reservoir.
- Never immerse the iron in water.
- Always place the iron with its back on a firm flat surface when interrupting ironing or after use.
- Keep the soleplate smooth. Avoid hard contact with metal objects.
- The cord should not be allowed to touch the soleplate when it is hot.
- When using the iron for the first time, test on an old piece of fabric to ensure that the soleplate and water tank are completely clean.
- Your iron is designed to rest on its heel. Do not leave the iron unattended when switched on. Do not place the iron on an unprotected surface even if it is on its heel rest.

Filling With Water

- Ensure that the power cord is unplugged from the outlet.
- Turn the steam control knob to position "0"
- Fill with water through water filling inlet. (Do not exceed main level mark on the water tank.)

Setting the Temperature

**Synthetics-silk

**Wool

**Cotton-linen

- Stand the iron upright
- Set temperature control to ironing temperature.
- Plug in the power cord to the outlet.
- After the indicator light has gone out and come on again, you may start ironing. The indicator light will go out from time to time during ironing.

Steam-ironing

- Set the temperature control to position “**” for moderate and to position “****” for maximum steam. With conventional steam irons, water may leak from the soleplate if a too low temperature has been selected.
- Ensure that there is enough water in the water tank.
 - Stand the iron on its heel.
 - Insert the main plug in to the outlet.
 - Wait a little while for the indicator light to go off and come on again.
 - Turn the variable steam knob to adjust the steam.

Dry Ironing

- Turn the variable steam knob to position “0” (no steam).

Storage

- Turn off the iron and unplug the power cord from the outlet.
- Pour out any remaining water from the water tank.
- Set the steam knob to no steam position.
- Stand the iron upright and let it cool down sufficiently.

Cleaning

- Before cleaning the iron ensure that it is disconnected from the power supply and has completely cooled down.
- Deposits on the sole plate may be removed with a rough cloth soaked in a vinegar/water solution.
- The casting may be wiped with a damp cloth and then polished with a dry one.
- Do not use abrasives on the sole plate.
- Keep the sole plate smooth. Avoid hard contact with metal objects.

220-240V 50/60Hz 1000-1200W