



cecotec

Power Espresso 20 Professionale

Cafetera espresso/Espresso coffee machine



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções



ÍNDICE

1. Piezas y componentes	/ 04	6. Problemlösung	/ 34
2. Instrucciones de seguridad	/ 07	7. Technische Spezifikationen	/ 35
3. Antes de usar	/ 08	8. Entsorgung von alten Elektrogeräten	/ 35
4. Funcionamiento	/ 08	9. Technischer Kundendienst und Garantie	/ 36
5. Limpieza y mantenimiento	/ 10		
6. Resolución de problemas	/ 11		
7. Especificaciones técnicas	/ 12		
8. Reciclaje de electrodomésticos	/ 13		
9. Garantía y SAT	/ 13		

INDEX

1. Parts and components	/ 04
2. Safety instructions	/ 14
3. Before use	/ 15
4. Operation	/ 15
5. Cleaning and maintenance	/ 17
6. Troubleshooting	/ 18
7. Technical specifications	/ 19
8. Disposal of old electrical appliances	/ 20
9. Technical support service and warranty	/ 20

SOMMAIRE

1. Pièces et composants	/ 04
2. Instructions de sécurité	/ 21
3. Avant utilisation	/ 22
4. Fonctionnement	/ 22
5. Nettoyage et entretien	/ 25
6. Résolution des problèmes	/ 26
7. Spécifications techniques	/ 27
8. Recyclage des électroménagers	/ 27
9. Garantie et SAV	/ 28

INHALT

1. Teile und Komponenten	/ 04
2. Sicherheitshinweise	/ 29
3. Bevor dem ersten Gebrauch	/ 30
4. Betrieb	/ 30
5. Reinigung und Wartung	/ 33

INDICE

1. Parti e componenti	/ 04
2. Istruzioni di sicurezza	/ 37
3. Prima dell'uso	/ 38
4. Funzionamento	/ 38
5. Pulizia e manutenzione	/ 40
6. Soluzioni dei problemi	/ 41
7. Specifiche tecniche	/ 43
8. Riciclaggio degli elettrodomestici	/ 43
9. Garanzia e SAT	/ 43

ÍNDICE

1. Peças e componentes	/ 04
2. Instruções de segurança	/ 44
3. Antes de usar	/ 45
4. Funcionamento	/ 45
5. Limpeza e manutenção	/ 47
6. Resolução de problemas	/ 48
7. Especificações técnicas	/ 49
8. Reciclagem de eletrodomésticos	/ 50
9. Garantia e SAT	/ 50

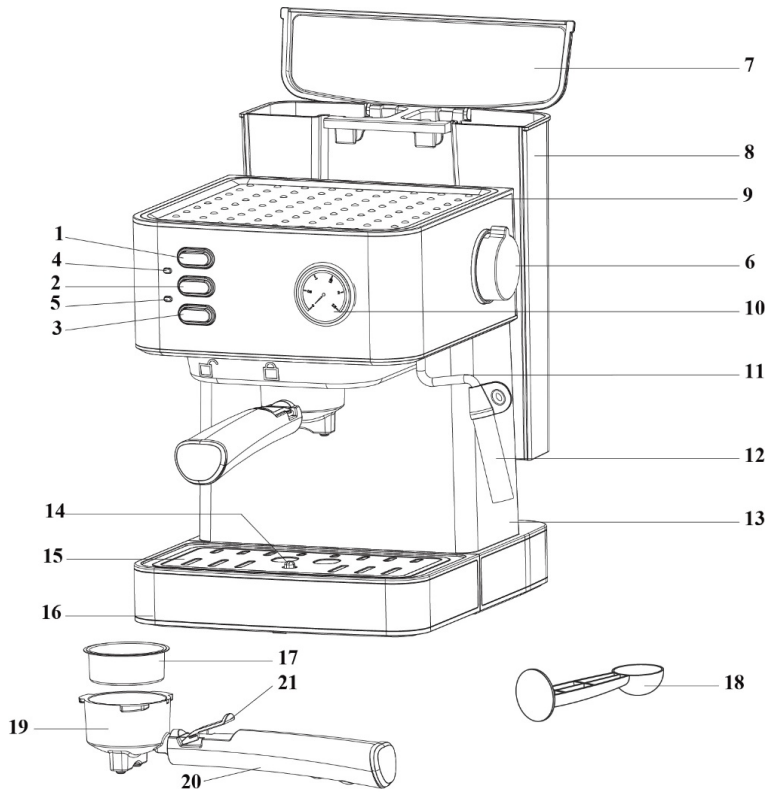 
INDEX

1. Onderdelen en componenten	/ 04
2. Veiligheidsinstructies	/ 51
3. Voor het gebruik	/ 52
4. Werking	/ 52
5. Schoonmaak en onderhoud	/ 54
6. Probleemoplossing	/ 55
7. Technische specificaties	/ 56
8. Recycling van huishoudelijke apparaten	/ 57
9. Garantie en SAT	/ 57



1. PIEZAS Y COMPONENTES

Parts and components/Pièces et composants/Ersatzteile und Komponenten/
Parti e componenti/Peças e componentes/ Onderdelen en componenten





ES

1. Botón de encendido
2. Botón de preparación de café
3. Botón de vapor
4. Indicador luminoso rojo
5. Indicador luminoso verde
6. Selector de vapor
7. Tapa del depósito de agua
8. Depósito de agua
9. Tapa superior
10. Manómetro
11. Vaporizador
12. Tubo espumador
13. Cuerpo principal
14. Soporte para vasos
15. Bandeja de goteo desmontable
16. Cubierta inferior
17. Filtro de malla de acero inoxidable
18. Cuchara medidora y prensa
19. Embudo metálico
20. Brazo de la cafetera
21. Lengüeta de sujeción

EN

1. On/off button
2. Coffee button
3. Steam button
4. Red indicator light
5. Green indicator light
6. Steam knob
7. Water tank cover
8. Water tank
9. Top cover
10. Manometer
11. Steam wand
12. Frothing tube
13. Main body
14. Cup support
15. Removable drip tray
16. Bottom cover
17. Stainless-steel mesh filter
18. Measuring spoon and press
19. Metal funnel
20. Portafilter
21. Fixing tab

FR

1. Bouton de connexion
2. Bouton de préparation du café
3. Bouton de la vapeur
4. Témoin lumineux rouge

5. Témoin lumineux vert
6. Sélecteur de vapeur
7. Couverture du réservoir d'eau
8. Réservoir d'eau
9. Couverture supérieur
10. Manomètre
11. Buse vapeur
12. Distributeur de mousse
13. Unité principale
14. Support pour verres
15. Plateau gouttes démontable
16. Cache inférieur
17. Filtre maille en acier inoxydable
18. Cuillère mesureuse et presse
19. Entonnoir métallique
20. Bras de la machine à café
21. Languette de fixation

DE

1. Ein/Ausschalter
2. Kaffeetaste
3. Dampfschalter
4. Rote Betriebs-Beleuchtung
5. Grüne Betriebs-Beleuchtung
6. Dampfgregler
7. Deckel des Wassertanks
8. Wassertank
9. Oberer Deckel
10. Manometer
11. Dampfgarer
12. Milchschäumer
13. Hauptgerät
14. Becherhalter
15. Abnehmbare Abtropfschale
16. Untere Abdeckung
17. Filter aus Edelstahl
18. Messlöffel und Presse
19. Metall-Trichter
20. Siebträger
21. Halterung Zubehör

IT

1. Tasto d'accensione
2. Tasto di preparazione del caffè
3. Tasto del vapore
4. Indicatore luminoso rosso
5. Indicatore luminoso verde
6. Manopola del vapore
7. Coperchio del serbatoio d'acqua
8. Deposito d'acqua
9. Coperchio superiore



2. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.





1. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
2. Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
3. Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec, in order to avoid any type of danger.
4. Do not twist, bend, strain, or damage the power cord in any way. Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the cord hang over the edge of the working surface or countertop.
5. Turn off and unplug the appliance from the mains supply when not in use and before cleaning it. Pull from the plug, not the cord, to disconnect it from the outlet.
6. This appliance is intended for domestic use only. It is not suitable for commercial or industrial use. Do not use it outdoors.
7. Place the appliance on a dry, stable, at, heat-resistant surface.
8. Do not use the appliance under the following circumstances:
 - On or near a gas or electric hob, in heated ovens, or near open flames.
 - On soft surfaces (such as carpets) or where it may tip over during use.
 - Outdoors or in areas with high humidity levels.
9. The temperature of accessible surfaces may be high while in use and could cause burns. Do not touch hot surfaces while in use or immediately after.
10. Do not wash the appliance in dishwashers.
11. The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
12. This appliance is not intended to be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety, and understand the hazards involved.
13. Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

3. BEFORE USE

ADVERTENCIA: clean the product before the first use in order to remove production residues.

- Pour water into the water tank, do not exceed the "MAX" mark, and place the water tank in its correct position.

Note: the appliance is provided with a detachable tank for easy cleaning. Fill the water tank first and then place it in the appliance.

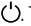

- Place the stainless-steel mesh in the funnel (without coffee).
- Place a cup on the cup support. Make sure the steam knob is turned completely anticlockwise.
- Connect the appliance to a power supply and press . The red indicator will light up indicating the machine is preheating.
- Press  for the pump to start pumping water. To stop it, press  again. The preheating process will be completed when the red and green indicator light turn steady.
- Press  for the machine to dispense water.
- Once the machine has finished dispensing water, pour all remaining water away and clean all the containers thoroughly. Now, the machine is ready to be used.

Warning: when activating the pump for the first time, the appliance may produce some noise which will disappear after 20 seconds. This is because the machine is releasing air and is completely normal, it does not affect to the product's operating.




4. OPERATION

Preheating

It is suggested to preheat the appliance, including the funnel, filter and cup, so the coffee flavour is not affected by the fact of some of the pieces being cold.



1. Remove the detachable tank and open the tank cover to fill it with the desired amount of water, do not exceed the "MAX" mark in the tank. Place the tank into the appliance properly.
2. Introduce the stainless-steel mesh filter into the funnel, pull the press bar backward, make sure the funnel's tube is aligned with the groove in the appliance, then insert the funnel into the appliance and release the press bar.
3. Fix it firmly in the coffee machine by turning it anticlockwise to the "lock" position.
4. Place an espresso cup on the cup support.
5. Connect the machine to the power supply and make sure the steam knob is turned completely clockwise.
6. Press . The red light indicator will light up, indicating the machine is preheating. Press  again for the pump to start pumping water, and stop it by pressing the same button again. This process will pump water from the tank to the boiler.

Espresso

1. Remove the funnel by turning it in anticlockwise. Add ground coffee to the stainless-steel filter with the measuring spoon (one spoon of ground coffee powder can make about a cup of coffee), then use the measuring spoon to press down the coffee.
2. Pull the press bar backward, make sure the funnel's tube is aligned with the groove in the appliance, then insert the funnel into the appliance and release the press bar. Fix it firmly in the coffee machine by turning it anticlockwise to the "lock" position.
3. Pour out the hot water from the cup and place the hot cup on the cup support.
4. Press , the red indicator light will turn on. Once the red and green indicators light up steady, press . The device will start dispensing coffee.
5. Press  to stop when you have obtained the desired amount of coffee. The indicator lights will turn off and the machine will stop operating.

Warning: do not leave the coffee machine unattended during operation as some of the steps require manual operation.

Milk froth/Cappuccino

1. Prepare a regular espresso in a slightly larger cup. Make sure the steam knob is turned completely anticlockwise.
2. Press  and wait until the red and green indicators light up steady.
 - Fill a jug with about 100 grams of milk for each cappuccino to be prepared.
 - Turn the steam knob slowly clockwise, the frothing tube will start producing steam.
 - Insert the frothing tube into the milk about 2 cm, froth milk while you move the vessel around un and down.
 - Turn the steam knob completely anticlockwise when the milk is frothed to your taste.
 - Pour the frothed milk into the espresso prepared. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder.
 - Press  to turn the device off.



Note:

- It is suggested to use whole milk for best-quality results.
- Use a jug not smaller than 70±5 mm diameter and enough tall, the milk volume will increase times 2 when it is frothed.
- Do not use hot milk, always operate the machine with warm milk.
- Do not turn the steam knob quickly, milk could spill and cause burns.
- Always clean the steam outlet with a wet sponge immediately after using it.
- Before brewing another coffee, allow the machine to rest for 5 minutes.

Hot water

This function allows keeping coffee warm by adding hot water or cleaning the cup.


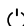


1. Press  and wait until the red and green indicator lights turn on.
2. Turn the steam knob completely anticlockwise and place a jug under the steam wand.
3. Press  for the machine to dispense hot water.

Warning: keep the steam wand inside the jug or cup in order avoid water from scattering and causing burns.

Heating drinks

The steam wand (without the frothing tube) can be used to heat beverages like chocolate, water or tea.

1. Turn the steam knob completely anticlockwise and press , wait until the red and green indicator lights turn on steady.
2. Remove the frothing tube from the steam wand.
3. Introduce the steam wand into the liquid to be heated. Turn the steam knob gently anticlockwise to start producing steam.
4. When the required temperature is reached, turn the steam knob completely clockwise.
5. Press the  steam on/off" to turn the device off.




Note: the machine will automatically turn off after 25 minutes of no operation, unless de on/off button is pressed.

5. CLEANING AND MAINTENANCE

- Turn the appliance off, unplug it from the power supply and allow it to cool down before cleaning it.
- Use a soft, damp cloth to clean the product's housing.
- Do not use any toxic, corrosive or abrasive cleaning agents or scouring sponges to clean the device, these can damage the surface.
- Do not immerse the appliance or any of its non-removable parts in water.
- Clean the water tank, drip tray, cup support and other removable parts periodically and dry them before placing them in their position again.



Note: to clean the filter and funnel, turn the funnel anticlockwise, throw away all coffee rests and rinse with water.

Mineral-deposits cleaning

1. Fill the tank with water (4/5) and descaling product (1/5) to the MAX mark.
2. Place the funnel and the jug in their place without coffee and carry out the preheating cycle.
3. Press  and wait until the red and green light indicators turn on.
4. Press  and allow the machine to dispense 2 cups of water. Then, press  again to close the pump and wait for 5 seconds.



ENGLISH

5. Place the jug under the steam wand and turn the steam knob completely anticlockwise (at least 135°).
6. Press  for the machine to dispense 2 cups of water. Then, press  again to close the pump and wait for 5 seconds.
7. Restart the device and repeat these steps until there is no more water left in the tank (at least 3 times).
8. Brew a coffee with tap water up to the MAX mark, without coffee powder, and repeat the before steps until there is no more water in the tank (at least 3 times).

6. TROUBLESHOOTING

ERROR	CAUSE	SOLUTION
Water comes out from the jug or from its lid	The jug is not fitted properly	Make sure the centre of the jug is aligned with the brewing outlet.
	The level of water in the tank exceeds the MAX mark	The water level in the tank should be within the MIN and MAX mark
Water leaks from the bottom of the device	There is too much water in the drip tray	Clean the drip tray
	The coffee maker is defective	Contact the Technical Support Service of Cecotec for advice or reparation
Water leaks from the filter	There is coffee powder on the filter's edge	Clean the filter edge



The coffee tastes like vinegar or other acid flavour	The machine has not been properly cleaned after the descaling process	Follow the steps on the "Cleaning and maintenance" section
	The coffee powder has been stored in bad conditions for too long	Use fresh coffee powder or store it in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain it fresh
The coffee machine does not operate properly	The machine is not properly connected to the power supply	Plug the power cord into a wall outlet correctly, if the appliance still does not work, please contact the Technical Support Service of Cecotec
The steam does not froth milk	The steam indicator is not lit up	The steam can be used to froth only when the light indicator is on
	The container is too big or the shape is not adequate	Use a tall and narrow cup
	You have used skimmed milk	Use whole milk

7. TECHNICAL SPECIFICATIONS

Model: Power Espresso 20 Professionale

Product reference: 01556

Power: 850 W

Voltage and frequency: 220-240 V, 50 Hz

Made in China | Designed in Spain



8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at **+34 963 210 728**.



www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

