 
 
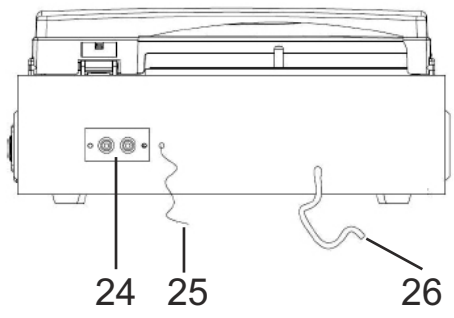 


Camry

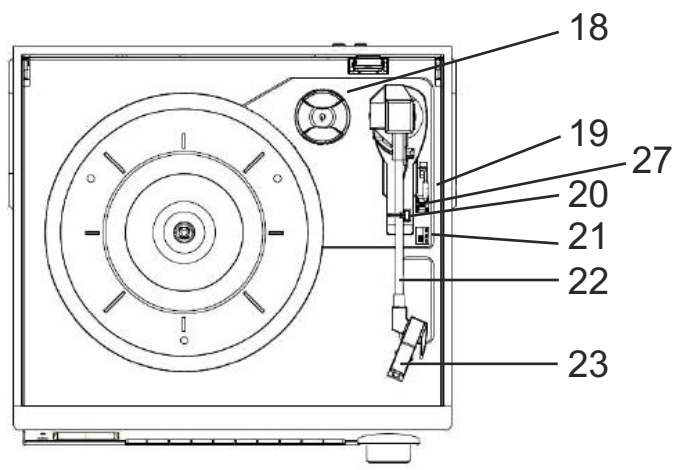

CR 1113

- | | |
|--------------------------------------|-------------------------------------|
| (GB) user manual - 3 | (DE) bedienungsanweisung - 5 |
| (FR) mode d'emploi - 9 | (ES) manual de uso - 12 |
| (PT) manual de serviço - 15 | (LT) naudojimo instrukcija - 18 |
| (LV) lietošanas instrukcija - 20 | (EST) kasutusjuhend - 23 |
| (HU) felhasználói kézikönyv - 34 | (BS) upute za rad - 28 |
| (RO) Instrucțiunea de deservire - 31 | (CZ) návod k obsluze - 42 |
| (RU) инструкция обслуживания - 26 | (GR) οδηγίες χρήσεως - 36 |
| (MK) упатство за корисникот - 39 | (NL) handleiding - 44 |
| (SL) navodila za uporabo - 47 | (FI) manual ng pagtuturo - 52 |
| (PL) instrukcja obsługi - 72 | (IT) istruzioni operative - 59 |
| (HR) upute za uporabu - 49 | (SV) instruktionsbok - 54 |
| (DK) brugsanvisning - 65 | (UA) інструкція з експлуатації - 68 |
| (SR) Корисничко упатство - 62 | (SK) Používateľská príručka - 57 |

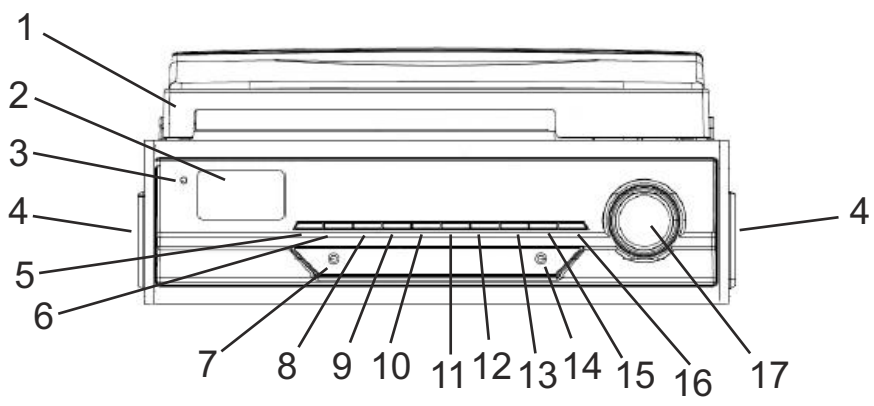

GENERAL SAFETY CONDITIONS
IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP
FOR FUTURE REFERENCE

The warranty conditions are different, if the device is used for commercial purpose.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. The applicable voltage is 230V, ~50Hz. For safety reasons it is not appropriate to connect multiple devices to one power outlet.
4. Please be cautious when using around children. Do not let the children to play with the product. Do not let children or people who do not know the device to use it without supervision.
5. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children, unless they are over 8 years of age and these activities are carried out under supervision.
6. After you are finished using the product always remember to gently remove the plug from the power outlet holding the outlet with your hand. Never pull the power cable!!!
7. Never leave the product connected to the power source without supervision.
8. Never put the power cable, the plug or the whole device into the water. Never expose the product to the atmospheric conditions such as direct sun light or rain, etc.. Never use the product in humid conditions.
9. Periodically check the power cable condition. If the power cable is damaged the product should be turned to a professional service location to be replaced in order to avoid hazardous situations.
10. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defected product yourself because it can lead to electric shock. Damaged device always turn to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
11. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
12. Never use the product close to combustibles.
13. Do not let cord hang over edge of counter.
14. Always unplug the device after using and before cleaning.
15. Never use this device close to water, e.g.: Under shower, in bathtub or above sink filled with water.



16. If using the device in bathroom after use remove the power plug from the socket, because water proximity presents risk, even if the device is turned off.
17. Do not allow the device or power adaptor to wet. If the device falls into water, immediately remove the power plug or power adaptor from the socket. If the device is powered, do not put hands in the water. Have the device checked by the qualified electrician before using it again.
18. Do not touch the device or power adaptor with wet hands.
19. The device has to be turned off after every use.
20. In order to provide additional protection, it is recommended to install residue current device (RCD) in the power circuit, with residual current rating not more than 30 mA. Contact professional electrician in this matter.
21. If the device utilises a power adaptor, do not cover it, because this can cause a dangerous temperature rise and can damage the device. Always connect the power adaptor cable to the device, and then connect the power adaptor to the power socket.
22. To save energy, if there is no audio signal from Turntable /AUX IN for a period of over 5 minutes, then the unit will automatically switch to Standby Mode.

DESCRIPTION OF THE DEVICE

- | | |
|------------------------|----------------------------------|
| 1. Turntable cover | 15. PRESET DOWN button |
| 2. LCD display | 16. PRESET UP button |
| 3. Power diode | 17. ON/OFF switch/volume control |
| 4. In-built speaker | 18. 45RPM disc adaptor |
| 5. FUNCTION button | 19. Turntable lever |
| 6. SLEEP/TIMER button | 20. Turntable arm lock |
| 7. Headphone port | 21. Plate spin speed adjustment |
| 8. SNOOZE button | 22. Turntable arm |
| 9. MODE/CLOCK button | 23. Turntable needle guard |
| 10. TUNER SCAN button | 24. LINE OUT jack |
| 11. BAND button | 25. FM antenna cable |
| 12. TUNING DOWN button | 26. Power cord |
| 13. TUNING UP button | 27. AUTO-STOP switch |
| 14. AUX port | |

SETTING THE CLOCK

Before first use, unpack everything and remove all protective materials. Unwind the FM antenna cable and power cable. Do not cover the ventilation holes, make sure that there is a gap of a few centimeters around the radio, which is required for proper ventilation.

1. In standby mode, press and hold the MODE/CLOCK button (9) to set the 12H or 24H clock mode. '12H/24H' will start flashing on the display (2). Using the TUNING DOWN button (12) or TUNING UP button (13) select either the 12-hour or 24-hour mode and confirm by pressing the MODE/CLOCK button again (9). The device will enter the hour editing mode.
2. Using the TUNING DOWN button (12) or TUNING UP button (13) set the current hour and confirm by pressing the MODE/CLOCK button again (9). The device will enter the minute editing/ mode.
3. Using the TUNING DOWN button (12) or TUNING UP button (13) set the current minute and confirm by pressing the MODE/CLOCK button again (9).

SETTING THE ALARM (RADIO ALARM FUNCTION)

1. In standby mode, press and hold the SLEEP/TIMER button (6). The display will show a clock icon and '0:00' will be flashing.
2. Using the TUNING DOWN button (12) or TUNING UP button (13) set the desired alarm hour and confirm by pressing the SLEEP/TIMER button (6).
3. Using the TUNING DOWN button (12) or TUNING UP button (13) set the desired alarm minute and confirm by pressing the SLEEP/TIMER button (6). The alarm time will be set.
4. The clock icon informs that the alarm is set. To turn the alarm off press the SLEEP/TIMER button (6) when the device is in standby mode. The clock icon will disappear.
5. When the alarm is activated, the device can be put into 'snooze' mode by pressing the 'SNOOZE' button (8). The device will then switch off for 10 minutes, after which the alarm will reactivate.

AUTOMATIC SHUT-OFF FUNCTION

1. When the device is switched on press the SLEEP/TIMER button (6) the appropriate number of times to select the time after which the device is to switch off (90, 80, 70...10 minutes)

2. The word 'SLEEP' on the display informs you that the automatic shut-off function is activated.
3. After the selected time has elapsed the device will turn off and enter standby mode.

FUNCTION BUTTON (5)

Used to change the operating mode of the device

- PHON (turntable operation mode)
- AUX (external device operation mode)
- TUNE (AM/FM radio mode)

LISTENING TO THE RADIO

1. Turn the device on using the ON/OFF button (17) and set the radio mode using the FUNCTION button (5).
2. Using the BAND button (11) set the wavelength to AM or FM.
3. Using the TUNING DOWN button (12) or TUNING UP button (13) tune to the desired radio frequency. Pressing and holding the button for approximately 2 seconds will automatically search for the closest frequency. After it is found the search will stop.
4. To save the radio station frequency to memory press the MODE/CLOCK button (9). The program number will begin flashing.
5. Using the PRESET DOWN button (15) or PRESET UP button (16) select the program number in which you want to save the radio station.
6. Confirm the selected program number by pressing the MODE/CLOCK button (9) again. The program number will stop flashing.
7. Repeat steps 4-7 to program selected stations (maximum of 30 programs).
8. You can switch between saved programs by using the PRESET DOWN button (15) and PRESET UP button (16).
9. You can set the volume by turning the volume control knob (17).
10. The FM antenna (24) is located on the back panel. If the reception is poor, try to move the antenna and find a spot in which the signal is strongest.
The AM antenna is located inside the radio receiver. If the reception is poor, try moving the receiver to a different place or turning it in another direction to catch the strongest signal.
11. The TUNER SCAN button (10) is used to automatically find and save available radio stations.

PLAYBACK OF VINYL DISCS

Prior to first use of the turntable, remove the turntable needle guard (23) and untie the knot protecting the turntable arm found next to the turntable arm lock (20).

1. Release the turntable arm lock (20) and set the device to the PHON mode.
2. Place the disc on the turntable plate. If necessary, use the adapter (18).
3. Select the plate's rotational speed (the rotational speed depending on the type of disc) by using the switch (21).
4. Lift the turntable arm by using the lever (19). Gently slide the arm onto the track you want to listen to. Lower the needle arm using the lever (19).
5. To stop playback of the disc, lift the turntable arm using the lever (19).
6. After completion of playback of the disc lift the turntable arm using the turntable lever (19). Move the arm over the lock (20) and lower it using the lever (19).
7. To turn the AUTO-STOP function on or off use the AUTO-STOP switch (27).

CLEANING AND MAINTENANCE

1. Disconnect the radio from the network.
2. The device may only be wiped with a dry cloth.
3. The device should be kept in a dry room.

CAUTION: Do not use water for cleaning - this may damage the device.

TECHNICAL DATA

Power source: 230V ~50Hz
RMS output power: 2x 1.5W
Power: 15W

Hereby, Adler Sp. z o.o., Ordona 2a, 01-237 Warsaw, Poland declares that the radio equipment type Turntable CR1113 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.camryhome.eu/red/cr_1113.pdf



To protect your environment: please separate carton boxes and plastic bags and dispose them in corresponding waste bins. Used appliance should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. **Do not dispose this appliance in the common waste bin.**

DEUTSCH

ALLGEMEINE SICHERHEITSVORSCHRIFTEN

LESEN SIE AUFMERKSAM WICHTIGE ANWEISUNGEN BEZÜGLICH DER SICHERHEIT DER BENUTZUNG.
BEWAHREN SIE DIESE FÜR DIE ZUKUNFT AUF

Bei Verwendung des Gerätes zu gewerblichen Zwecken werden die Garantiebedingungen geändert.