

cecotec

COOK CONTROL 10400 EASYHANG

Báscula de cocina/Kitchen scale



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instrukcja obsługi
Bezpečnostní pokyny

INDEX

1. Parts and components	20
2. Before use	20
3. Operation	20
4. Cleaning and maintenance	21
5. Technical specifications	21
6. Disposal of old electrical appliances	22
7. Technical support service and warranty	22

SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users. All safety instructions should be closely followed when using the appliance.

Do not expose the electrical connections to water. Make sure your hands are dry before switching on the appliance.

Do not unplug the device when it is being used.

Do not use the appliance if its housing is damaged, nor after it malfunctions or has been dropped or damaged in any way.

Protect it from sharp edges and heat sources.

This appliance is intended for home use only. Any other use will void the warranty. It is not suitable for commercial or industrial

use. Do not use it outdoors.

Place the appliance on a dry, stable and flat

Do not use any accessory that has not been recommended by Cecotec, as they might cause injuries or damage.

Do not try to repair the product by yourself. Contact the official Technical Support Service of Cecotec.

Cleaning and maintenance must be carried out according to this instruction manual to make sure the appliance functions properly.

The cleaning and maintenance of the appliance should not be carried out by children without supervision.

Do not wash the appliance in a dishwasher.

Store the appliance and its instruction manual in a safe and dry place when not in use.

No liability is accepted for any eventual damage or personal injuries derived from misuse or non-compliance with this instruction manual.

The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.

This appliance is not intended to be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety, and understand the hazards involved.

Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

Keep the appliance out of reach of children under the age of 8.

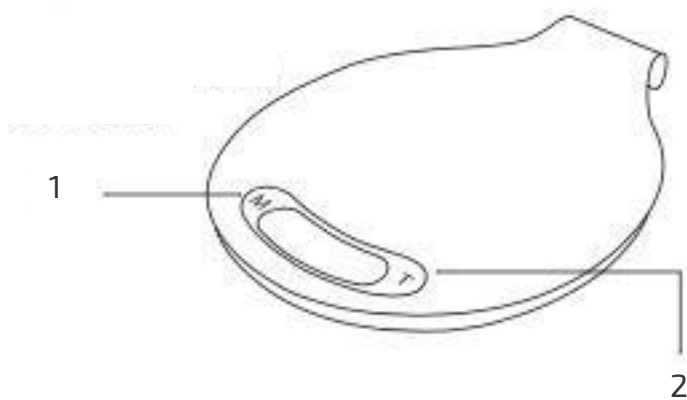 


Fig./Img./Abb./Afb./ Rys./Obr. 1



Fig./Img./Abb./Afb./ Rys./Obr. 2



Fig./Img./Abb./Afb./ Rys./Obr. 3

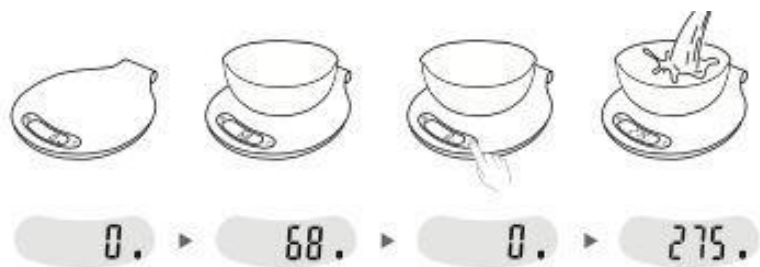 


Fig./Img./Abb./Afb./ Rys./Obr. 4



Fig./Img./Abb./Afb./ Rys./Obr. 5



Fig./Img./Abb./Afb./ Rys./Obr. 6

 
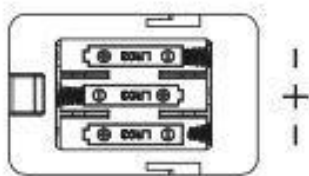 


Fig./Img./Abb./Afb./ Rys./Obr. 7



Lo

Fig./Img./Abb./Afb./ Rys./Obr. 8

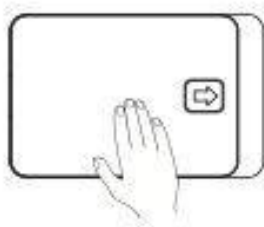

unSt

Fig./Img./Abb./Afb./ Rys./Obr. 9



EEEE

Fig./Img./Abb./Afb./ Rys./Obr. 10

1. PARTS AND COMPONENTS

Fig. 1

1. M button: Unit-change button (g/oz/ml/cup)
2. T button: Power button/Tare function

2. BEFORE USE

Take the product out of the box.

Remove all packaging materials. Keep the original box.

Make sure all the components are included and in good conditions, otherwise, contact immediately the official Technical Support Service of Cecotec.

3. OPERATION

Turning on the device. Press the T button.

Switching the device off

Press the T button for two seconds to switch the device off.

The device will be turned off automatically after 60 seconds of no operation.

Changing the unit

Press the M button once to change the unit from g to oz, from water ml to water cups and milk ml to milk cups.

Fig. 2

Place a container on the platform and press the T button to clear the container's weight.

Then, pour water or milk into it and press the M button to choose if the measuring unit should be ml or cups.

Weighing

Place the scale on a hard and flat surface.

Press the T button once and the LCD display will show "0".

Place the foodstuff on the weighing platform. Its weight will be displayed.

Fig. 3

Tare function

Place a container on the weighing platform. The LCD screen will show the container's weight.

Press the T button to clear the container's weight (reset to zero). Then, place food in the

container and the display will show the foodstuff's weight. Press the T button to weight more food.

The LCD display will show the container's weight in negative if you remove the container and the food from the platform together. Press T again and, after two seconds, the display will show zero.

Fig. 4

Note: If the weight is lower than 100 g, the display will show Fig. 5.

If the weight is heavier than 100 g, it will display Fig. 6.

Insert the batteries

Fig. 7

Open the battery cover.

Install 3 x 1.5V AAA batteries.

After installing the batteries, put the battery cover back.

Make sure that the polarity of the batteries is the correct one, as an incorrect polarity could cause a permanent impact on the electronic parts.

Error indication

When the power is low, the display will show Fig. 8.

When the scale is not placed on a stable surface before operating, it will show Fig. 9.

When the scale is overloaded (more than 8 kg), it will show Fig. 10.

4. CLEANING AND MAINTENANCE

Use a soft, damp cloth to clean the product's surface.

Do not immerse the appliance in water or other liquid.

Do not use abrasive scouring pads, powders or cleaners.

Do not leave the device on a wet or hot environment.

Remove the device's battery if it is not going to be used in a long time.

5. TECHNICAL SPECIFICATIONS

Product reference: 04179

Product: Cook Control 10400 Smart Healthy EasyHang

Capacity: 8 kg

Battery: 4.5 V (3x AAA)

6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

7. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

EA_YV_03200917