cecutec

GRANDHEAT 2000 BUILT-IN BLACK / WHITE / STEEL BLACK

Microondas encastrables / Built-in microwave



SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the outlet is grounded.

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current.

Do not operate outdoors.

This appliance is intended for domestic use only. It is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

Use this appliance only for intended purposes as described in this manual. Do not use corrosive chemicals or vapours in this appliance, it is not designed for industrial or laboratory use.

If the door or door seals are damaged, the product must not be operated until it has been repaired.

Do not operate the device when empty.

Do not attempt to operate the device with the door open since open door operation can result in harmful exposure to microwave energy.

Do not operate this appliance if it has a damaged cord or plug or if it is not operating properly. In case the device does not operate correctly, please contact our Technical Support Service. Only use utensils that are suitable for microwaves. Make sure utensils do not touch the interior walls during operation.

Do not use the microwave cavity for storage purposes.

Do not attempt to deep-fry in this oven.

In order to reduce fire risk:

Manuale di istruzioni Manual de instruções

Instrukcja obsługi Návod k použití Do not overcook food.

Remove wire twist-ties from paper or plastic bags before placing them inside the microwave.

Do not place the device where heat, moisture, or high humidity are generated, or near combustible materials.

Do not heat liquids or other foods in sealed containers.

Do not operate the device without the glass tray, roller support and shaft in their proper positions.

Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use. In case of smoke or fire inside the device, keep the door closed, turn the product off and disconnect it from the power supply. In order to prevent the glass tray from breaking, do not place hot foods, hot utensils, frozen foods or frozen utensils on it. After operating, the container is likely to be very hot. Use gloves in order to avoid burns and injuries.

All parts of the device will be very hot during and after operation, including door and top part of the microwave. Remember to use gloves or any other type of protection.

Technical service and reparations that involve cover removals or exposure to cables must always be carried out by a competent, professional and qualified person.

Supervise young children to make sure that they do not play with the appliance. It can be used by children over 8 if they are continually supervised.

This appliance is not intended to be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety, and understand the hazards involved.

Supervise young children to make sure that they do not play

with the appliance. Close supervision is necessary when the appliance is being used by or near children.

This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. Class B equipment is suitable for domestic use and in establishments directly connected to a low voltage power supply network, which supplies buildings used for domestic purpose.

It is important to use materials and containers which are suitable and safe for cooking in the microwave. The table below shows which materials are suitable and which are not:

Suitable materials for microwave use

Material of the container	Microwave	Grill	Combi
Heat-resistant glass	Yes	Yes	Yes
No heat-resistant glass	No	No	No
Heat-resistant ceramics	Yes	Yes	Yes
Microwave-safe plastic	Yes	No	No
Kitchen paper	Yes	No	No
Metal tray	No	Yes	No
Metal rack	No	Yes	No

Aluminium foil and foil	No	Yes	No
containers			

The ideal material for a microwave utensil is transparent to microwave. This allows heating food as energy passes through it.

Microwaves cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.

Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.

Round or oval dishes rather than square or oblong ones are recommended, as food in corners tends to overcook.

Narrow strips of aluminium foil may be used to prevent overcooking of exposed areas. In this case, be careful not to use too much and keep a distance of 2.54 cm between foil and cavity.

1. PARTS AND COMPONENTS

Fig. 1

- Door safety lock system
- Oven window
- 3. Rotating axis
- 4. Door release button
- 5. Control panel
- 6. Magnetron (do no remove the waveguide protecting the magnetron)
- 7. Glass tray
- 8. Grill
- 9. Metal rack

Control panel

Fig. 2.

- 1. Display
- 2. Power level
- 3. Clock
- 4. Weight
- 5. Grill
- 6. Combi
- 7. Weight defrost
- 8. Preset
- 9. Pause/Cancel
- 10. Menu/Timer
- 11. Start/QuickStart

2. BEFORE USE

Take the product out of the box. If the microwave has a protective film, tear it off before starting operation. Check carefully if there is any damage, and if there is, immediately notify the Technical Support Service.

The product must be placed on a flat, stable and dry place and kept away from corrosive materials, heat and humidity, such as gas burners or water.

To ensure enough ventilation, minimum distances have to be kept:

The product must be placed, at least, at 5 m from the TV, Radio or antenna.

The product must be placed in such way that the plug is accessible and must ensure an effective grounding in case of leakage in order to avoid electric shocks.

The microwave door must be closed in order to operate.

In case there is any manufacturing rests in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.

Warning: Do not try to remove the wave guide

3. OPERATION

Display

The display will show the cooking time, power, mode and time.

Power level

Press the power level button in order to set the desired microwave power level.

Clock

Press the time button to set the microwave clock.

Weight

Press this button and select the food's weight or the number of servings.

Grill

Press this button to set a grill cooking program up to 95 minutes.

Combi

Select this function to cook combining microwave and grill.

Weight defrost

Set this program to defrost foods according to their weight.

Timer

Program the microwave for it to start operating automatically at the set time.

Pause/Cancel

Press the Pause/Cancel button to cancel settings or to reset the microwave before setting a cooking program. Press once to stop operation, press twice to cancel.

It can also be used to set the child lock.

Menu/Timer

Turn the knob to enter the time.

Turn the knob to select a preset cooking program.

Using the microwave

The microwave will beep every time a button is pressed.

After a cooking program has been finished, the device will beep, and the display will show "End" on screen to remind the user. Press any button or open the door to clear it before setting another function.

Setting clock time

The microwave has a 24-hour clock. To check the time while the device is operating, press the time button, time will be displayed for a while on the display screen.

Example: Setting microwave time to 8:30.

Press the Clock button.

Turn the Menu/Timer knob to set 8 hours.

Press the Clock button once to confirm the hour setting.

Turn the Menu/Timer knob to set 30 minutes.

Press the Clock button once to confirm the setting.

QuickStart

When this program is selected, the device will quickly cook food at top power (100 % power output).

Press the button once to start a cooking program.

Press it a number of times to set the cooking time and it will start cooking immediately at full power level.

The maximum cooking time for this program is 10 minutes.

Microwave cooking

For microwave cooking, just press the power level button repeatedly to select the desired cooking power level, and then use the Menu/Timer knob to set a desired cooking time. The maximum cooking time is 95 minutes.

Select the desired power level by pressing the power level button.

Press the power level button	Cooking power	
Once	100 %	
Twice	80 %	
3 times	60 %	
4 times	40 %	
5 times	20 %	Az-an Rusa
6 times	0 %	

Example: Cooking 10 minutes at 60 % microwave power.

Press the power level button repeatedly to set 60 %.

Turn the Menu/Timer knob to 10:00.

Press the Start/QuickStart button.

Combi 1

The maximum cooking time is 95 minutes.

Example: Set combination 1 for 25 minutes.

Press the Combi button. CO-1 will be displayed.

Turn the Menu/Timer knob to 25:00.

Press the Start/QuickStart button.

Grill cooking

The maximum cooking time is 95 minutes.

This function is especially useful for cooking thin slices of meat, steaks, chops, sausages or pieces of chicken. It can also be used to heat sandwiches or cook dishes au gratin.

Example: Grilling for 12 minutes.

Press the Grill button.

Turn the Menu/Timer knob to 12:00.

Press the Start/QuickStart button.

Preset cooking programs

These programs have cooking power levels and times set by default. When these programs are used, only the food type and weight have to be set. Press the Start/QuickStart button to start the device.

Example:

In standby mode, turn the Menu/Timer knob anticlockwise to select food code to specify the food to be cooked.

Press the weight button repeatedly to set the desired weight.

Press the Start/QuickStart button.

Preset cooking menus:

Code	Food	Dish
01	Milk/coffee (200 ml/cup)	For milk/coffee and potato, the screen will show the number of serving instead of food weight when pressing the weight button.

02	Rice (g)	For codes 07, 08, 09 in the	
03	Spaghetti (g)	list, the device stops during	
04	Potato (each 230 g)	cooking and beeps to remind	
05	Reheat (g)	you to open the door and turn the food over to cook food	
06	Fish (g)	evenly.	
07	Chicken (g)	The results of the preset programs depend on the shape and size of food, personal preference as to the doneness of certain foods or how food is placed on the tray. If you find the result not satisfactory, adjust the cooking time. For spaghetti, add boiling water before cooking.	
08	Beef/Mutton (g)		
09	Skewered meat (g)		

Weight defrost

The device allows to defrost food based on the weight entered. The defrosting time and power level are automatically set once the food category and the weight are programmed. Frozen food weight ranges from 100 g to 1800 g.

Example: Defrosting 600 g of shrimp.

Press the weight defrost button.

Press the weight button to select the weight of food to be defrosted.

Press the Start/QuickStart button.

Note: The device stops during defrosting to let the user turn food over for even defrosting. Turn food over and press the Start/QuickStart button.

Timer function

This function allows scheduling a cooking program to start at an appointed time.

Example: Suppose the present time is 9:00, and you want the microwave to start a cooking program at 11:30.

Enter a desired cooking program.

Press Timer button once.

Turn the Menu/Timer knob to set 11:00 (hours).

Press the Timer button once.

Turn the Menu/Timer knob to set 11:30 (30 minutes).

Press Start/OuickStart once.

Note: After a preset function has been set, other buttons cannot be used, except to check the preset time by pressing the Timer button and cancel it by pressing Pause/Cancel button. At

11:30, the desired cooking program will start automatically.

Child lock

This function is designed to prevent little children from operating the device. The child lock indicator will light up on the display screen, and the oven will be locked.

To activate this function, press and hold the Pause/Cancel button for 3 seconds, a beep will sound, and the lock indicator will light up.

To cancel this function, press and hold the Pause/Cancel button for 3 seconds until the lock indicator on the display turns off.

4. TIPS

Food arrangement: Place the thickest food parts towards the edge of the glass tray. If possible, do not overlap food.

Watch cooking time: Cook for the shortest amount of time at first and add more minutes in case it is necessary. Over-cooking may result in smoke and burns.

Cover food while cooking: Covering the food you are going to cook avoids spattering and allows a more even cooking.

Flip or stir food once during the cooking process.

Respect pre-heating time: Pre-heating time specified on the food's label must not be exceeded. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.

Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.

5. CLEANING AND MAINTENANCE

The device, as well as food rests, must be cleaned and removed regularly.

Unplug the cable from the power supply before starting the cleaning. Do not immerse the product in water or any other fluid during cleaning.

The lack of maintenance and cleaning of the product may cause a deterioration on its surface and affect its lifespan. Keep the inside of the oven clean.

When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth.

Do not use strong detergents, powder abrasives or metal brushes to clean the device.

Do not allow the control panel to become wet.

Do not remove the waveguide.

If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition.

The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent.

Use a dampened soft cloth to clean enclosures, door, interior walls and the glass tray.

When the microwave has been used for a long time, some strong odours may arise from inside.

In order to get rid of them, follow one of the steps below:

Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.

Place a cup of red tea inside the microwaves and heat it at high power for 2 or 3 minutes.

Place orange peels inside the microwaves and heat it at high power for 1 minute.

6. TECHNICAL SPECIFICATIONS

01375_GrandHeat 2000 Built-In Black 01378_GrandHeat 2000 Built-In White 01380_GrandHeat 2000 Built-In Steel Black

Microwave power: 700 W Frequency: 2450 MHz 230-240 V AC, 50 Hz, 1200 V

Capacity: 20 L

Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

8. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

cecutec

GRANDHEAT 2000 BUILT-IN BLACK / WHITE / STEEL BLACK

Microondas encastrables / Built-in microwave



Manual de instrucciones Instruction manual Manuel d'instructions Bedienungsanleitung Manuale di istruzioni Manual de instruções Instrukcja obsługi Návod k použití

BUILT-IN MICROWAVE

Fig. 1.

- Cabinet
- 2. Rear fan filter
- Microwave
- 4. Upper exhaust guide
- 5. Frame

Fig. 2.

- Screw 4x8 mm(x4)
- 1. Screw 4x10 mm(x4)
- Screw 3x25 mm(x4)

Fig. 3.

Space for ventilation

Make sure the cabinet has the right dimensions.

Fig. 4.

Fig. 5.

Screw the 4 decorative rings onto the support feet at the bottom of the device.

Fig. 6.

Fasten the frame with 4 screws.

Fig. 7.

Fasten the upper exhaust guide with 4 screws.

Note the opening at the back.

Align.

Fig. 8.

Rear fan filter.

Align.

Fig. 9.

Introduce the microwave in the cabinet.

Fig. 10.

Make sure the microwave is placed in the middle of the cabinet.

Fig. 11.

Fix the microwave in the cabinet with 4 screws.

Fig. 12.

The microwave is completely installed.

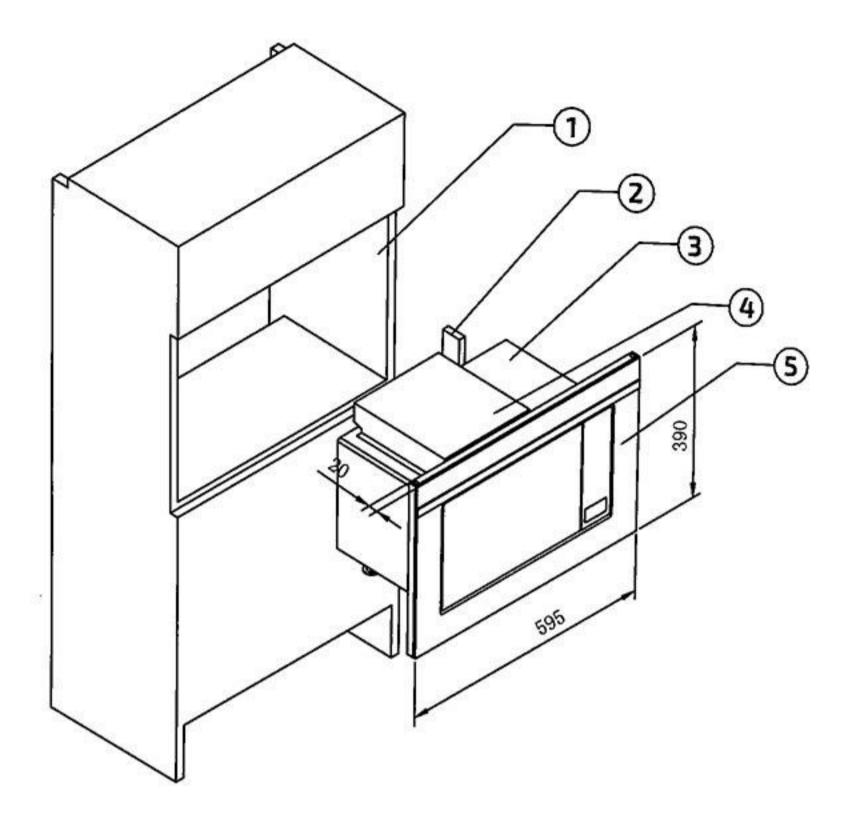
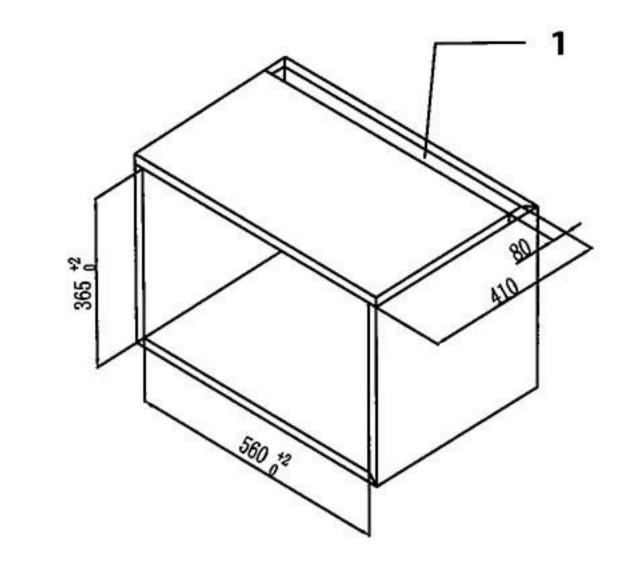


Fig.1





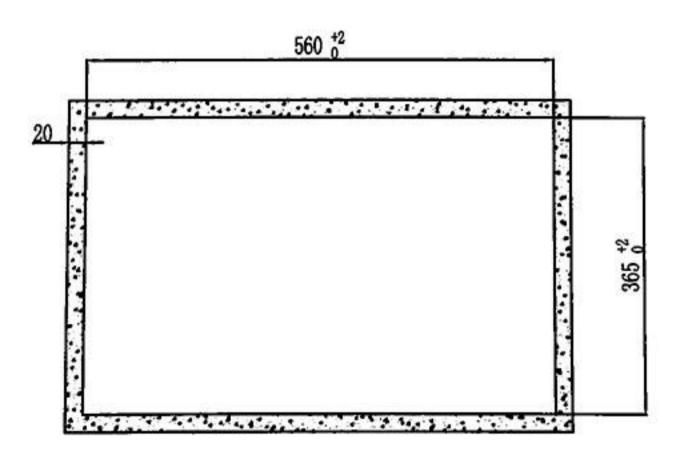
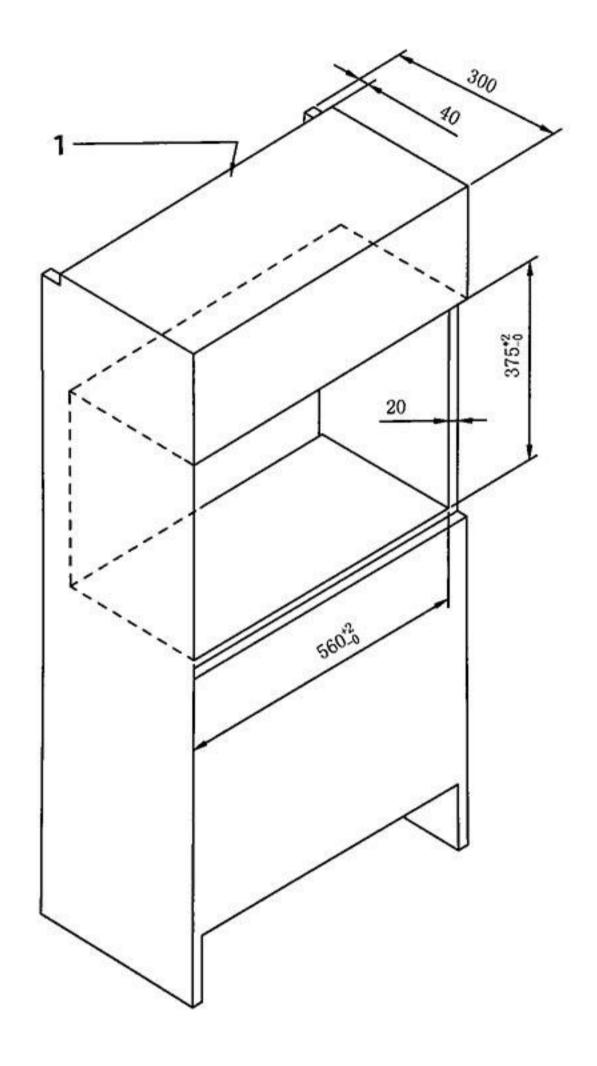


Fig.2

Fig. 3



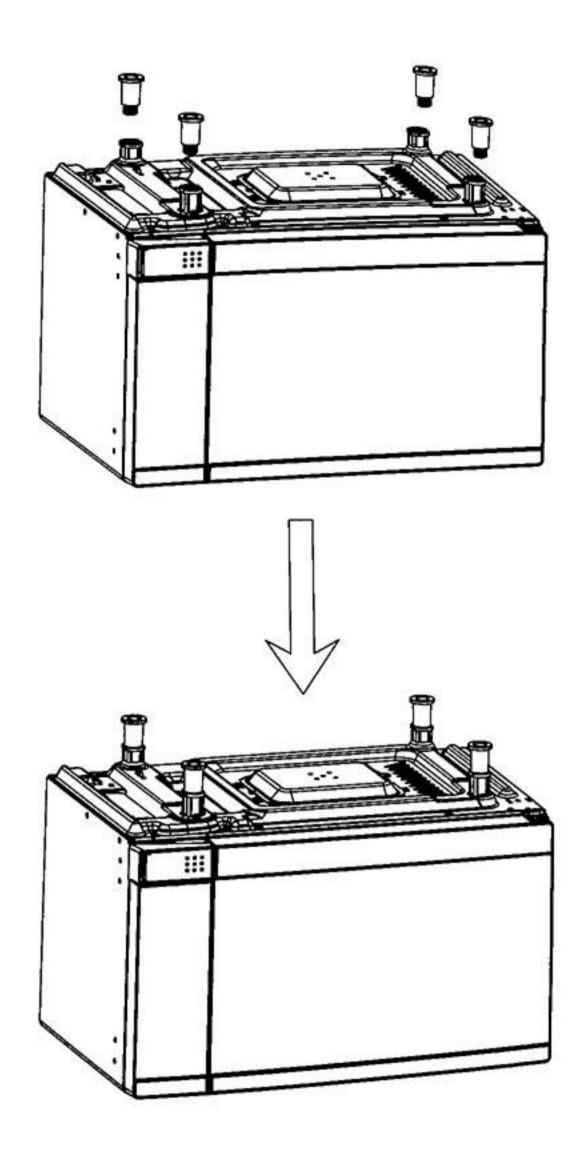


Fig. 3

Fig. 4.5

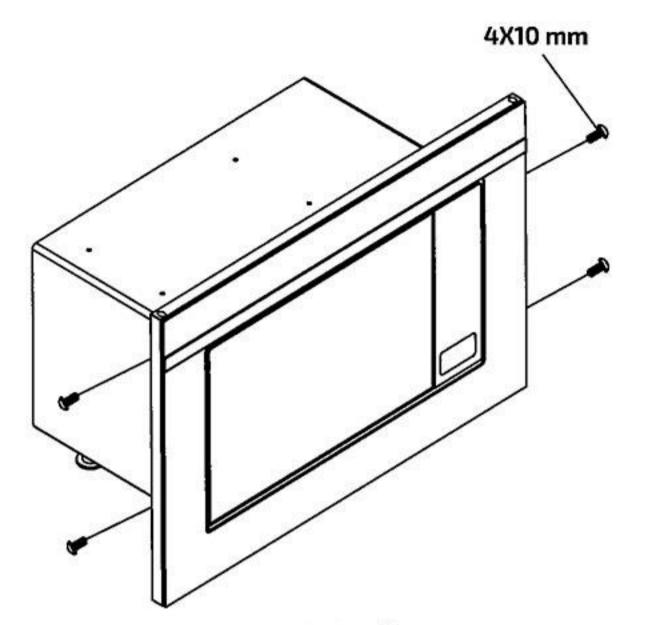


Fig./Img.6

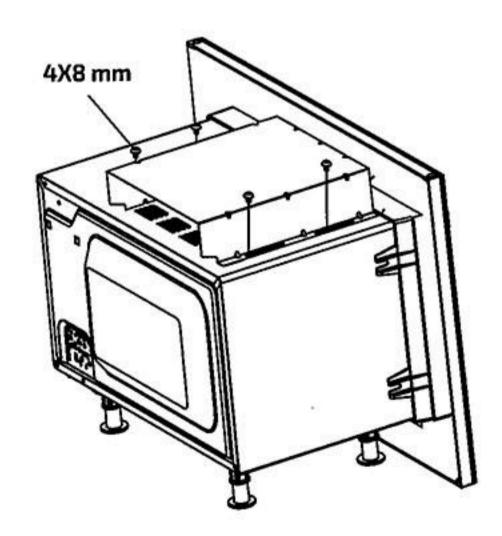


Fig./Img.7

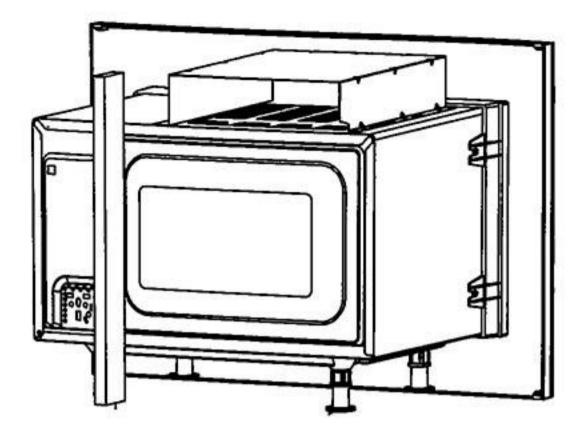


Fig./Img.8

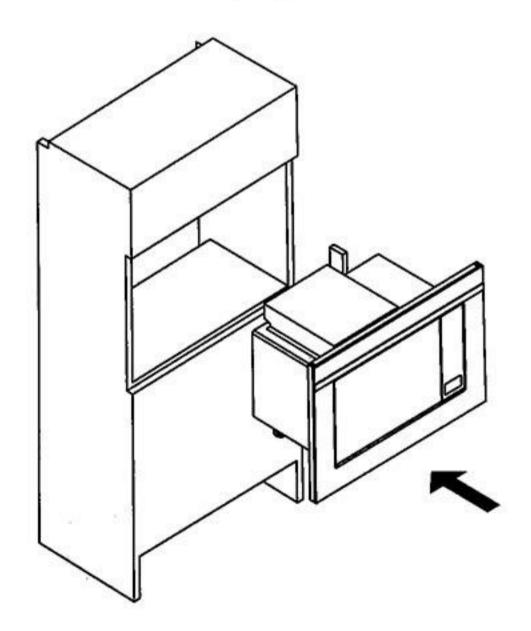


Fig.9

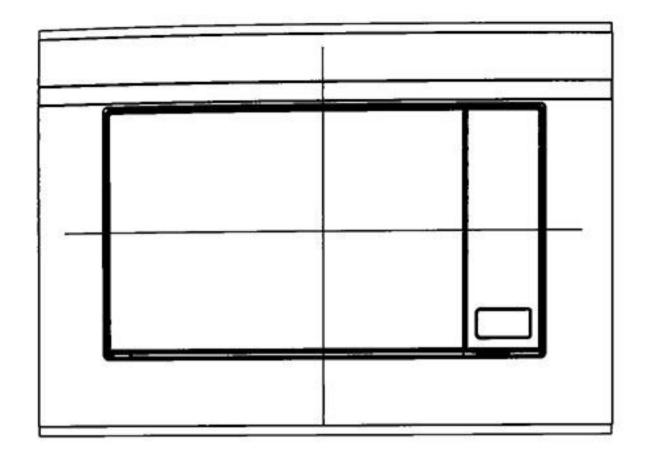


Fig.10

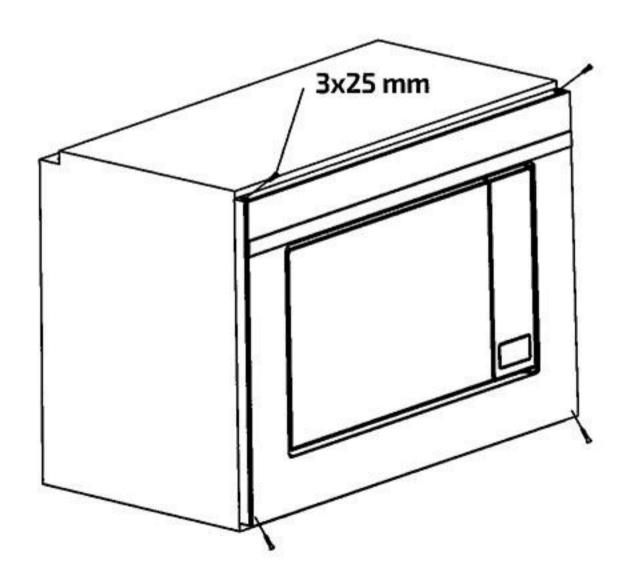
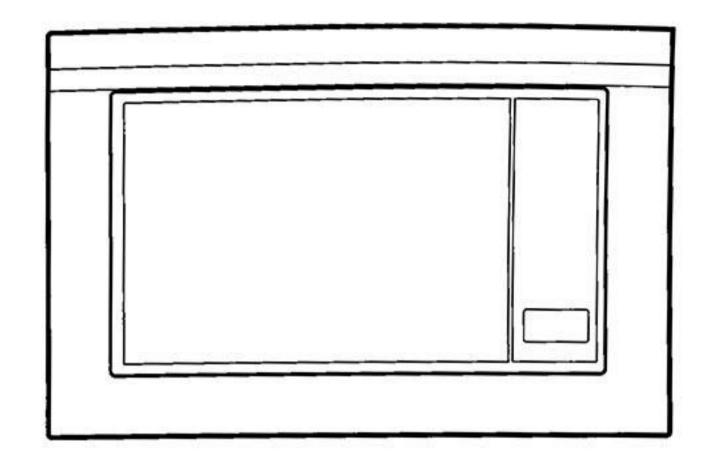


Fig./Img.11



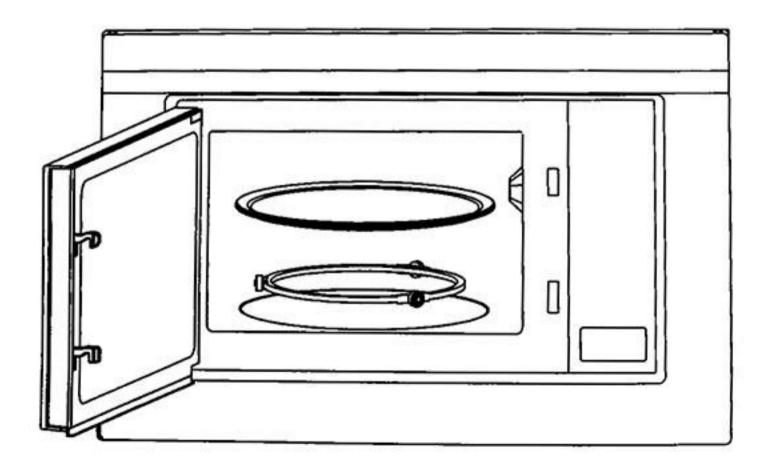


Fig./Img.12