

cecotec

INSTANT MILL PRESS

Molinillo eléctrico para sal y pimienta



Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções

#### PIEZAS Y COMPONENTES

Parts and components/Pièces et composants/Teile und Komponenten/  
Parti e componenti/Peças e componentes

EN

#### 1. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

This appliance is intended for household use and can be also used for restaurants and hotels. Do not use outdoors.

Keep the device away from water and other liquids.

The device can be used with coarse salt and all kinds of peppers.

The device operates on 6xAAA batteries. It is recommended to use alkaline batteries.

Keep the device always clean.

#### Battery instructions

Keep batteries away from children and animals, they could be deadly if swallowed. In case of ingestion, seek medical assistance immediately.

Should a battery have leaked, do not allow your skin, eyes or mucous membranes to come into contact with the battery acid.

In case of contact with acid, rinse the affected areas with abundant fresh water immediately and contact a doctor as soon as possible.

Make sure the battery contacts in the device are clean before inserting batteries; if they are not, clean them.

Use only the battery type specified in the technical specifications.

Always replace all the batteries at the same time. Do not use different types of batteries or of different capacities.

When replacing batteries, note the correct polarity (+/-).

Take the batteries out of the device when they are discharged or when the device is not going to be used in a long time.

Batteries must not be recharged or reactivated, dismantled, thrown into fire, immersed in fluids or short-circuited.

#### 2. BEFORE USE

- Take the product out of the box and remove all packaging materials.
- Make sure the product shows no visible signs of damage. If there are, contact immediately the Technical Support Service of Cecotec.

#### 3. OPERATION

Open the device by rotating the top part clockwise, open the battery compartment by opening the lid anticlockwise and pulling from it. Insert 6xAAA batteries according to the polarity marks. Reinstall the battery compartment in its position and fix it by rotating it clockwise. Fill the salt/pepper compartment.

Assemble the top part of the device back and turn it anticlockwise until it is securely closed.

It is suggested to fill the salt/pepper compartment at least 80 % of its capacity to ensure proper operation.

The device features a grinding level adjuster under the base. Turn it fully tight for finer grinding level and on the opposite direction for coarser

grinding level.

Press the grinding button to activate the device and grind pepper or salt. Release the button to stop operation.

The LED light will remain on while the grinding button is being pressed.

Note: If the device gets stuck or stops operating during use, gently shake it to ensure peppercorns unblock it.

#### 4. CLEANING AND MAINTENANCE

##### Cleaning

Do not immerse the device in water or any other liquid.

Clean the device's surface and base using a damp cloth.

It is important to keep the product clean in order to ensure proper operation.

#### 5. TECHNICAL SPECIFICATIONS

Product reference: 04280, 04281

Product: InstantMill Press, InstantMill Press Duo,

Battery type: 6x3AAA 1.5 V

#### 6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

#### 7. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.


The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

2

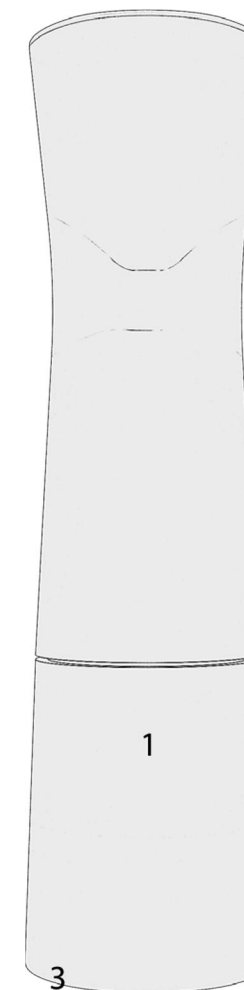

EN

1. Salt/pepper compartment
2. Grinding button
3. Grinding level adjustment