

Item \_\_\_\_\_

Number \_\_\_\_\_

## DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County  
Ningbo 315600 China Made in China  
info@nbdeli.com www.deliworld.com



 
Version: 1.0  
Date: 12-2019

Dear customers, thank you for your purchase of our products.  
We are committed to providing our customers with high  
quality products. To ensure best performance, please read this  
manual carefully before use!

Keep For Future Use

deli

# U DIGITAL CODE SERIES SER'S MANUAL

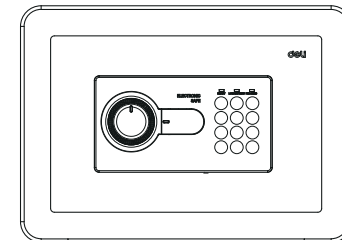

- Easy Operation
- Simple Use
- Reliable Safe


## 1. Unpacking the product

 Please check if the product is intact after unpacking and verify that all the accessories have been received. If any items are missing, please contact your dealer.


User manual \*1




Emergency key \*2




Expansion bolts\* 2

 

AA Battery \*4

 


Battery compartment \*1

 

1. Unpacking the product .....	01
2. Product Overview.....	02
3. Opening your safe for the first time.....	03
4. Installing the batteries.....	03
5. Setting the passcode.....	04
6. Opening and closing the door .....	05
7. Alarm function .....	05
8. Replacing the batteries.....	06
9. Opening your safe with the emergency key.....	06
10. Precautions for use .....	07
11. Troubleshooting .....	08

## 2. Product Overview

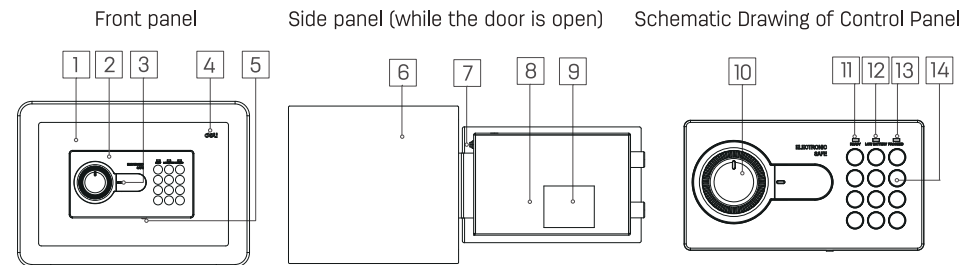 

#	1	2	3	4	5	6	7
Part Name	door sheet	electronic keypad	Emergency keyhole	Trade marker	External power jack	Body	reset passcode button
#	8	9	10	11	12	13	14
Part Name	back cover	battery compartment	handle	green light	red light	yellow light	button

### 3. Opening your safe for the first time

Remove the emergency lock cover to expose the lock, insert your emergency key and turn it clockwise, then turn the knob clockwise to open the door.

Special caution: Please do not put the emergency keys inside the safe, and always store it elsewhere safe, so that you can use them to open your safe if battery used up or the product malfunctions.

### 4. Installing the batteries (You are required to use alkaline battery)

1. Open the battery compartment and insert 4 AA batteries, ensuring that the batteries match the + and - in the compartment. Once powered on, your safe will emit a single beep and the yellow light will flash indicating it's connected to power;
2. Input the factory default password "12345678" and press the "#" button to confirm. The green light will turn on after the yellow light blinks twice, then rotate the handle clockwise to open the door within 6 seconds;
3. The yellow light blinks every time you hit a button;
4. On the keypad panel, "#" is the Confirmation button and "\*" is the Delete button. If you entered a wrong passcode, please press "\*" to delete your input and re-enter your passcode;

8. The safe will go into Sleep mode if you press a key for more than 20 seconds without any subsequent input;

9. All operation will be terminated when the safe is in Sleep mode, you may press any key to wake the safe up and operate directly.

### 5. Setting the passcode

The default password "12345678". For security of your property, you will need to change the preset code before use.

1. Input the factory default passcode "12345678" and press the "#" button to confirm. Then the green light shall turn on and the door will be opened, please set your new passcode within 25 seconds after the green light goes out;
2. Press the Reset button at the inner hinge side of the door, and the yellow light shall flash twice and then stay on. Input a passcode of 1 to 8 digits and press the "#" button to confirm.

Tips: When you are done setting your passcode, please try the new code to make sure it works.

### 6. Opening and closing the door

Closing the safe: Close the door, then turn the knob counterclockwise to lock it.

Opening the safe: Input your passcode and press the "#" button to confirm, yellow light will flash twice with 2 beeps.

### 7. Alarm function

1. If the passcode is wrongly input, yellow light will flash with buzzer beeps after you press the "#" button to confirm. If an incorrect passcode is entered three times, an alarm will be triggered and last for 1 minute;
2. How to set the alarm: Press the "#" button, and yellow light will flash twice with buzzer beeps, indicating that the system is armed. In case the safe is shaken by external forces, an alarm will be triggered and last for 1 minute.

Note: The alarm will be stopped and the vibration alarm mode will be turned off when you input the correct passcode or fingerprint.

### 8. Replacing the batteries

When you input your passcode, both the green and red lights are on at the same time indicating the battery is low. Please replace the batteries in time to ensure your regular use.

 
### 9. Opening your safe with the emergency key

1. If you cannot operate the safe when the batteries are dead, please use an external battery compartment. Put the plug of an external battery compartment into the power socket on the bottom panel, then input your correct passcode to open the door.
2. Unlock your safe with your master key in case passcode forgot or failure of electronic system. Unlock your safe the way you open it for the first time.

## 10. Precautions for use

1. Do not put the user manual, master keys and emergency keys and battery compartment inside the safe, and please keep them in another secure place.
2. To prevent battery leakage from damaging the electrical system, do remove batteries from the safe if it will be unused for extended periods of time.
3. For safety reasons, be sure to mount your safe to a solid concrete wall;
4. Do not store excess cash and valuables if the safe is unattended or placed without any remote alarm.

**Installation Diagram**

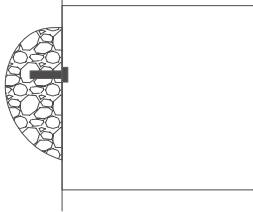

## 11. Troubleshooting

Problem	Possible Cause	Solution
The scanner is not responding when I input my passcode	The battery is dead	Unlock the electronic lock with the battery compartment or with the emergency key, then replace the batteries
	Positive and negative polarity on the battery is reversed	Please Install the batteries properly
	Circuit board failure	Please contact our repair department
I couldn't insert or pull out the master key	There are obstructions in the lock	Please remove the obstructions in the lock
	The key was not turned to the defined position	Please insert the key properly
The safe won't open when I have unlocked the electronic code lock	The knob was not turned to the defined position Turn the knob and hold it for more than 7 seconds, and the electronic lock will be reset	Please re-enter your passcode and turn the knob to the defined position
The alarm doesn't go off	The battery is dead	Please replace the batteries
	Positive and negative polarity on the battery is reversed	Please install the batteries properly

## Warranty Card

Dear customers,

Thank you for your purchase of our products. To protect the interests of customers who purchase our products, please contact authorized local dealers or service centers with this receipt and the warranty card for any malfunction due to product quality problems.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
2. Customers are required to present this warranty card and the original purchase invoice to the Company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
3. No free of charge repair service shall be provided in the event of any of the following circumstances:
  - (1) Expiration of the warranty period;

## Warranty Card

(2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;

(3) Failure or damage caused by force majeure;

(4) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: \_\_MM\_\_DD\_\_YYYY

**Warranty Card**

Product Information	Product Name		Date of Manufacture		
	Product Model Number		Date of Production		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Sales Name		Contact		
	Address		Phone		
	Sales Date		Invoice No.		
Repair Form	Problem	Repair Results	Maintenance Technician Signature	Customer Signature	Date

**Warranty Card**

Product Information	Product Name		Date of Manufacture		
	Product Model Number		Date of Production		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Sales Name		Contact		
	Address		Phone		
	Sales Date		Invoice No.		
Repair Form	Problem	Repair Results	Maintenance Technician Signature	Customer Signature	Date

Cut along the line and keeping by the dealer