

# Instruction Manual

## **Open Safe for First Time**

Pull down the tightener at the right side of digital panel, turn the digital panel to left to find the emergency lock hole, insert emergency key and turn to left to open safe. (Note: After open the door, turn the key to right and take it out, then to turn the digital panel to right to cover the emergency key hole, pull up the tightener of digital panel.)

## **Install Battery**

Remove the battery holder cover and install 4xAA battery correctly. It sounds a beep and the red/green/yellow indicate lights flashes when powered. The factory default code is 159.

## **Set Personal Code**

When opening, press the red reset button at the rear of door, it sounds two beeps and the yellow indicate light turns on, now the user can input 3-8 digits code to press \* to confirm the code. It sounds two beeps again, means the code was registered successfully. (Likewise, same steps to change person code)

## **Lock Safe**

Close the door and turn the handle to left to lock the safe.

## **Unlock Safe by Personal Code**

Input 3-8 digits code that registered before to press # to confirm, with a long beep sounds and the green light turns on, turn the handle to right to open the safe.

## **Low-bat Warning**

The system will check battery status when press personal code to open safe, if the red indicate light turns on, it means battery becoming low and to replace fresh battery timely.

## **Incorrect Code Protection**

The safe can't be unlocked if the incorrect code input. Continuously input incorrect code for 3 times, the warning sounds for 20 seconds and can't accept any instruction. If input incorrect code for another 3 times, the system will be locked for 5 minutes.

## **Set Time-lapse**

Input correct personal code and press # to confirm, the green light turns on, press 3#, the green light flashes, to input the minutes of time-lapse that you want. If the time lapse is 6 minutes, then input 6# and repeat 6#, green light turns on with two beeps sounds, time-lapse set successfully. After this, the safe wait to be unlocked 6 minutes including 30 seconds count-down beeps after input correct code.

## **Sound off/on**

Press 633 with two beeps heard means sound off. Press 66 with two beeps heard means sound on.

## **IMPORTANT WARNING**

**NEVER KEEP THE EMERGENCY KEY INSIDE THE SAFE.**