


Reserved for future use

deli 得力

U

Electronic password series products
USER'S MANUAL

SER'S MANUAL

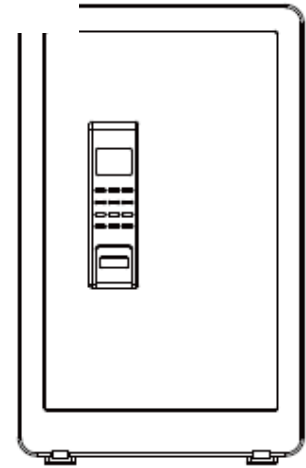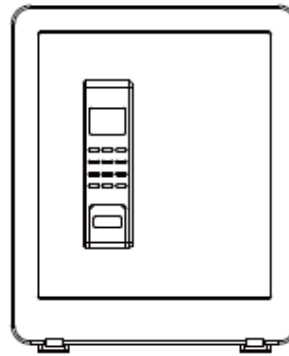

-
- Simple to Operate
 - Easy to Use
 - Safe and Reliable
-

Welcome to use our series products of safes (cabinets) and safe deposit boxes. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

Contents

1. Product Unpacking.....	01
2. Product Schematic.....	02
3. First Use.....	03
4. Battery Installation.....	03
5. Password Setting	03
6. Door Closing Operation.....	04
7. Hidden Code Function.....	04
8. Deleting Incorrect Password.....	04
9. Alarm Function.....	05
10. Battery Replacement.....	05
11. Emergency Opening.....	06
12. Querying Door Opening Record.....	06
13. System Date Modification.....	07
14. Precautions for Use	08
15. Common Faults and Troubleshooting.....	09

DELI GROUP


1. Product Unpacking

Check that product appearance is intact after unpacking the box and checking all accessories. Please contact the dealer if anything is broken or missing.


Instruction manual*1




Door lock keys*2

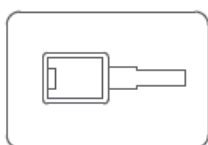


Emergency keys*2

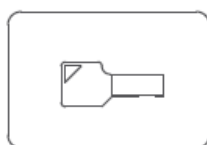

Expansion bolt*2

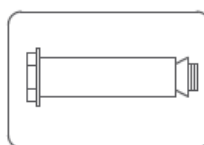


External battery compartment*1

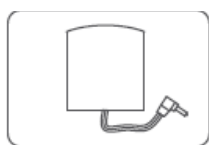

5# battery*4




Internal door keys*2

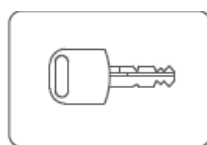

Remark: For products without internal door products inside the box, There is no internal door keys attached.

2. Product Schematic

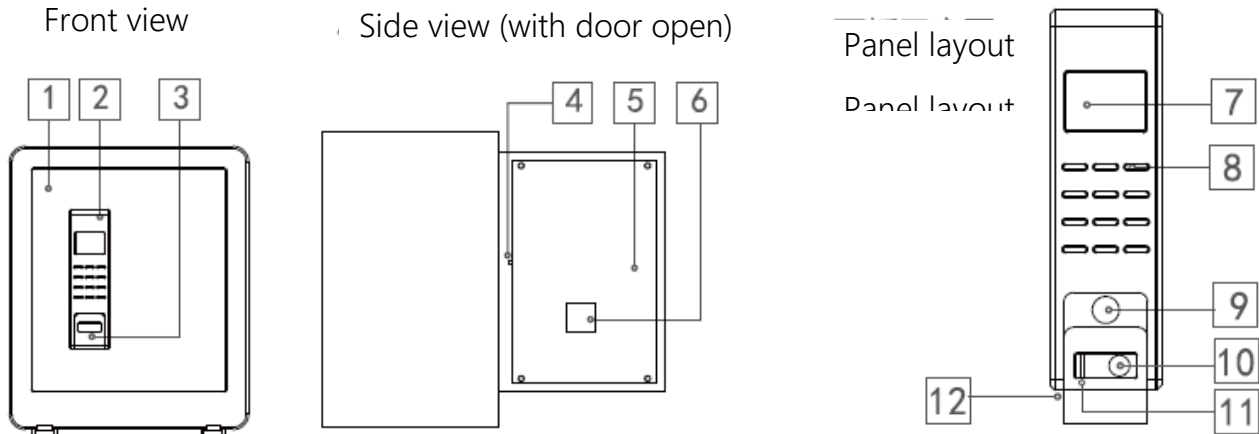

Serial number	1	2	3	4	5	6
Name	Box	Electronic Panel	Door lock slide cover	Reset key	Backside cover	Internal battery compartment
Serial number	7	8	9	10	11	12
Name	Display screen	Keys	Door lock	Emergency lock	Emergency lock flip cover	External power supply socket

3. First Use

- 1) Push the door lock slide cover down to the limited position and press the emergency lock flip cover;
- 2) Insert one of the door lock keys and one of the emergency keys into the corresponding key hole, respectively, turn the emergency key clockwise, then turn the door lock key clockwise to open the door.

4. Battery Installation

- 1) Put the four 5# batteries into the internal battery compartment located on the backside cover of the door according to the correct polarity. The display shows it scans "□" back and forth from left to right after the power is supplied, then it shows "good" after the scan is completed, and it will enter the standby state;
- 2) Insert the door lock key, press the key "#" to wake up, and enter the factory password "12345678" when the display shows "-----";
- 3) Press the key "#" to confirm, the display shows "OPEN", please turn the door lock key clockwise within 6 seconds to open the door.

5. Password Setting

The factory password of this product is "12345678". Please reset your personal password before use to ensure safety.

- 1) Press the key "#" to wake up, enter the factory password "12345678", and the display shows "OPEN". The door can be opened;
- 2) Within 25 seconds after the display is turned off, press the Reset key on the backside cover of the door and the display shows "set";

- 3) Enter a new password of 1-8 digits, press the key "#" to confirm, the display shows "into", and the new password is set;
- 4) The display shows the new password again for 1 second and then returns to the standby state.
Tip: Verify the new password after the password is set, and then lock the door after confirmation.

6. Door Closing Operation

- 1) Close the door;
- 2) Turn the door lock key counterclockwise and pull it out.

7. Hidden Code Function

- 1) After pressing the key "#" and before entering the password, the hidden code function can be switched by pressing the key "*". When the hidden code function is valid, the digits which are entered afterwards will not be displayed, but they will be replaced by "□";
- 2) The digit display is automatically restored after this function is turned on.

8. Deleting Incorrect Password

- If an incorrect password is entered during the operation, it can be deleted by using the key "*" before pressing the key "#" to confirm. The last digit entered can be cleared each time the key "*" is pressed.

9. Alarm Function

1) Wrong password alarm

The display shows "Error" each time an incorrect password is entered, then "-----" will be displayed again, and the password can be entered again at this time. The display shows the alarm horn symbol and will alarm for one minute if a wrong password is entered consecutively for three times. Entering the correct password during the alarm can stop the alarm.

2) Vibration alarm

The vibration alarm function is turned on when the display shows "ALERT ON" if the key "0" is pressed in the standby state; The display shows the alarm horn symbol and "-----" and will alarm for one minute when the product is vibrated by external force. Entering the correct password during the alarm can stop the alarm.

10. Battery Replacement

When the voltage of the batteries drops to a certain level, the display will show "Lo bat" after the password is entered each time, indicating that the battery voltage is insufficient, please replace with new batteries as soon as possible. (It is recommended that you use 5# alkaline batteries)

05

11. Emergency Opening

- 1) Please provide power by using the external battery compartment when the batteries are depleted and the operation cannot be made. Insert the plug of the external battery compartment into the external power supply socket located below the electronic panel, and enter the correct password to open the door ;
- 2) Please use the emergency key to open the door when the electronic system fails or the password is forgotten. The way to open the door is the same as the first use.

12. Querying Door Opening Record

1. First open the door by entering the password. You can query the previous door open records by pressing key "0" or "8" when the display shows "OPEN". Each record is displayed on two screens;
2. The first screen is displayed at first: password type (for example: "PASS-1" / "PASS-2") and record number (for example: "N0 01" - "N0 58");
3. Then the second screen is displayed: the door opening date and time of this record;
4. Record page turning: in the state of record query, if the key "0" has been pressed, record number +1 to turn the page; if the key "8" has been pressed, record number -1;
5. If the key is not pressed within 3 seconds, it will exit the query state and return to the standby state;
6. The system can save the latest 58 records at most. When there are more than 58 records, each time a new record is added, the oldest record will be overwritten. Each record contains the following information: year, month, day, hour, minute, record number (1=last record, 2=last second record, ... 58=last 58th record), password type (1=personal password, 2=administrative password).


13. System Date Modification

1. In the standby state, press the key "*" to enter the state of modifying the system date and time;
2. Enter "year", "month", "day", "hour", "minute" (10 digits in total) by pressing the digit keys directly. It will be automatically confirmed after the corresponding space digit flashes. Then it will save the new time and exit the setting state, and return to the standby state;
3. Press the key "*" to go back one space during the setting and re-enter one;
4. The system will identify the validity of the entered digits, and it will not confirm the invalid values that exceed the range. The valid ranges of each parameter are as follows:
Year: 00~99, Month: 01~12, Day: 01~31, Hour: 00~23, Minute: 00~59;
5. Note: The system cannot automatically distinguish a month of 31 or 30 days and a leap month's maximum days when modifying the date. The user must ensure that the date they enter is meaningful and avoid artificial errors such as "February 30th";
6. If the modification is not finished and no key is pressed within 8 seconds, it will exit the modification state (the modified value is invalid) and return to the standby state;
7. The system is embedded with a perpetual calendar from 2000 to 2099, which will automatically switch to a month of 31 or 30 days and convert to a leap year when timing.

14. Precautions for Use

- 1) Do not put the user's manual, door lock keys, emergency keys and external battery compartment in the box, they should be stored in other safe place;
- 2) The battery should be taken out to prevent the leakage of liquid from damaging the electronic system if the product is left unused for a long time;
- 3) Always fix the cabinet to a solid concrete wall for safe keeping;
- 4) Do not store too much cash and valuables when unattended or without a remote alarm device.

Installation layout

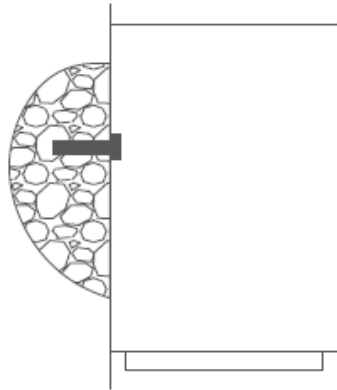

15. Common Faults and Troubleshooting

Symptoms	Causes	Troubleshooting
No any response when pressing the digit keys to enter the password	The batteries are depleted	Use the external battery compartment or the emergency key to open the electronic code lock and replace the batteries
	Battery polarity reversed	Insert the batteries properly
	Circuit board failure	Please contact the maintenance department
The door lock key cannot be inserted in or removed	The key is inserted in the wrong direction	Please contact the maintenance department
	There are foreign objects in the key hole	Remove foreign objects in the key hole
	The key is not turned to the limit	Please reinsert in the correct direction
The door cannot be opened when the electronic code lock has been opened	Turn the handle for more than 7 seconds, and the electronic lock has been reset	Enter the password again and turn the handle to the limit within 7 seconds
The alarm does not sound	The batteries are depleted	Please replace the batteries
	Battery polarity reversed	Insert the batteries in the correct way

Product Warranty Card

This page is cut off along the dotted line and kept by the dealer

Commodity Information	Commodity Name		Factory Date		
	Commodity Model		Production Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Seller Name			Contact	
	Address			Phone	
	Sales Date			Invoice No.	
Maintenance Record	Fault Description	Maintenance Result	Customer Signature	Maintenance Person Signature	Date

Product Code _____

No. _____

DELI GROUP CO., LTD.
 Add: Deli Industrial Park, Ninghai,
 Zhejiang
 Service Hotline: 400-185-0555
 Http://www.nbdeli.com
 MADE IN CHINA



Version: 1.0
 Date: March of 2016

Product Warranty Card

Dear users:

Thank you for purchasing our products. In order to ensure the interests of users, all users who purchase our products can contact the local dealer or special maintenance station by the proof of invoice and warranty card if the product fails due to quality problems.

Warranty notice:

1. If the product fails under normal use within one year from the date of purchase by the user, our company will provide free repair, parts replacement and other services according to the failure situation;

2. This warranty card and purchase invoice are the proofs that our company provide after-sales service to customers. Please fill out the following form on this card, and it will be valid only after the dealer affixes the official seal;

3. In one of the following cases, free repair service is not provided, and it will be charged for maintenance:

(1) The the validity period of the warranty has expired;

(2) Damage caused by improper use, maintenance or storage not in accordance with the requirements of the product instruction manual;

(3) Product failure or damage caused by force majeure;

(4) Wear parts or accessories.

This card comes together with the product, and one card for one machine. In order to ensure that you have full right to the free repair service provided by our company, please keep this card properly, and you can not get another copy if you lose it.

Purchase Date: ____ (mm/dd/yyyy)