


deli 得力

Instruction Manual

Electronic Password Safe
Deposit Box

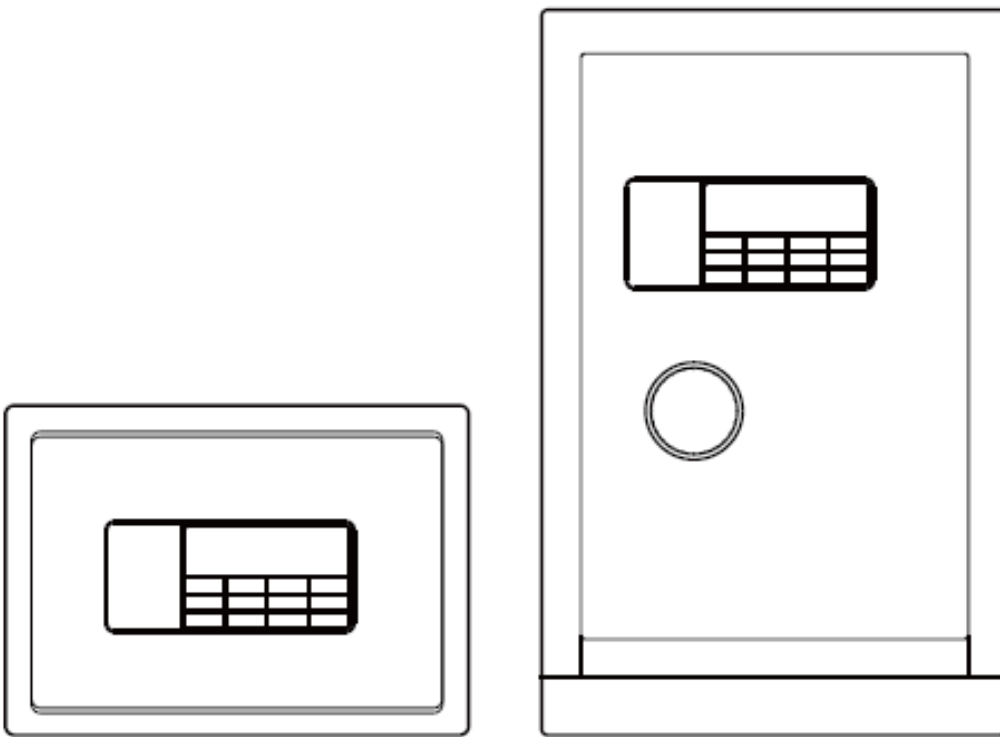

Contents

1. Product Unpacking.....	1
2. Product Schematic.....	1
3. First Use.....	2
4. Battery Installation.....	2
5. Password Setting	2
6. Door Closing Operation.....	3
7. Keyless Opening.....	3
8. Hidden Code Function.....	3
9. Deleting Incorrect Password.....	3
10. Alarm Function.....	4
11. Battery Replacement.....	4
12. Emergency Opening.....	4
13. Precautions for Use	5
14. Common Faults and Troubleshooting.....	5
15. After-sales Service.....	5

Welcome to use our series products of safes (cabinets) and safe deposit boxes. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

1. Product Unpacking

Check that product appearance is intact after unpacking the box and checking all accessories. Please contact the dealer if anything is broken.



Instruction manual*1




Main lock keys*2



Expansion bolt*2




5# battery*4

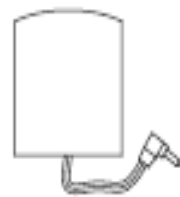

External battery compartment*1



 Emergency keys*2




Internal door keys*2


Remark: for products without internal door products inside the box, there is no internal door keys attached.

2. Product Schematic


Front view

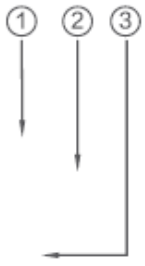

Side view (with door open)

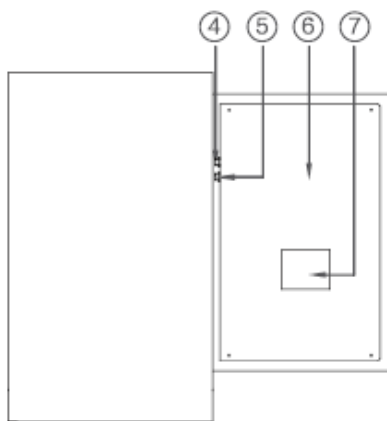

Panel layout

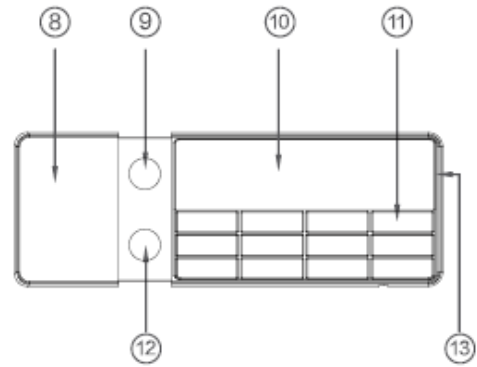

- 1 Box
- 2 Panel
- 3 Handle

- 4 Reset key
- 5 LED lamp
- 6 Backside cover
- 7 Internal battery compartment

- 8 Slide cover
- 9 Main lock key hole
- 10 Display screen
- 11 Keys
- 12 Emergency key hole
- 13 External power supply socket

3. First Use

1. Push the slide cover to the left to the limited position;
2. Insert one of the main lock keys and one of the emergency keys into the corresponding key holes on the panel, respectively, first turn the emergency key clockwise, then turn the main lock key and handle clockwise to open the door.

(Turn the main lock key clockwise to open the door for the products without a handle)

4. Battery Installation (alkaline battery is required)

1. Put the four 5# batteries into the internal battery compartment located on the backside of the door according to the correct polarity. A "beep" will sound after the power is supplied;
2. Enter the factory password "12345678";
3. Press the key "#" to confirm, and the display shows "OPEN". Please turn the main lock key and handle clockwise within 6 seconds to open the door.

5. Password Setting

The factory password of this product is "12345678".Please reset your personal password before use to ensure safety.


- 1) Enter the factory password "12345678"and confirm it by pressing the key "#", and the display shows "OPEN" ;
 - 2) After "OPEN" goes out on the display (please set a new password within 25 seconds), press the Reset key on the backside cover of the door and the display shows "set" ;
 3. Enter a 1-8 digit password;
 4. Press the key "#" to confirm. The display shows "into 1", and the new password is set.
- Tip: Verify the new password after the password is set, and then lock the door after confirmation.

6. Door Closing Operation


1. Closing the door;
2. (a) For the products with a handle: turn the handle counterclockwise, then turn the main lock key counterclockwise and pull it out.
(b) For the products without a handle: turn the main lock key counterclockwise and pull it out.

7. Keyless Opening

1. Push the slide cover to the left to the limited position, and insert one of the main lock keys into the main lock key hole;
2. Turn the main lock key 90° clockwise and pull it out to turn on the keyless door opening mode;
3. After this mode is turned on, only enter the correct password to pass the verification or use the emergency key, and turn the handle to open the door;
Remark: In order to turn off this mode, only when the door is open, insert the main lock key into the main lock hole, turn it 90° counterclockwise and pull it out.

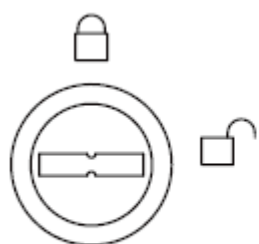

Keyless opening mode

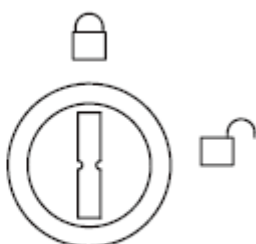

Keyless closing mode

8. Hidden Code Function

1. In the standby state, the display only shows "--" instead of digits when pressing the key "#" and entering the password.
2. The digit display is automatically restored after the door is opened.

9. Deleting Incorrect Password

If an incorrect password is entered during the operation, it can be deleted by using the key "*" before pressing the key "#" to confirm. The password of entire line will be deleted by pressing the key "*" once. Please enter the correct password again at this time to open the door.

10. Alarm Function

■ Wrong password alarm

1. The display shows "Error" each time an incorrect password is entered;
2. It will alarm for 50 seconds if the wrong password is entered consecutively for three times;
3. Entering the correct password during the alarm can stop the alarm.

■ Vibration alarm

1. Press the key "*" in the standby state, the display shows "ALERT ON", and the vibration alarm mode is turned on at this time. The vibration alarm is automatically turned off after the door is opened normally;
2. Entering the correct password during the alarm can stop the alarm, and automatically turn off the vibration alarm function at the same time.

11. Battery Replacement

When the voltage of the batteries drops to a certain level, the display will show "Lo bat" after the password is entered each time, indicating that the battery voltage is insufficient, please replace with new batteries as soon as possible. (It is recommended that you use 5# alkaline batteries).


12. Emergency Opening

1. Please provide power by using the external battery compartment when the batteries are depleted and the operation cannot be made. Insert the plug of the external battery compartment into the external power supply socket located on the side of the panel, and enter the correct password to open the door.
2. Please use the emergency key to open the door when the electronic system fails or the password is forgotten. The way to open the door is the same as the first use.

13. Precautions for Use

1. Do not put the user's manual, main lock keys, emergency keys and external battery compartment in the box, they should be stored in other safe place;
2. The batteries should be taken out to prevent the leakage of liquid from damaging the electronic system if the product is left unused for a long time ;
3. Always fix the cabinet to a solid concrete wall for safety ;
4. Do not store too much cash and valuables when unattended or without a remote alarm device.

Installation layout

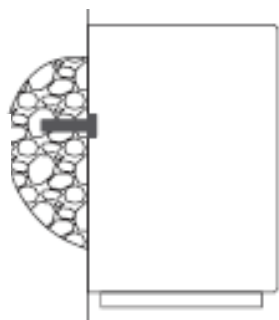

14. Common Faults and Troubleshooting

Symptoms	Causes	Troubleshooting
No any response when pressing the digit keys to enter the password	The batteries are depleted	Use the external battery compartment or the emergency key to open the electronic code lock and replace the batteries
	Battery polarity reversed	Insert the batteries properly
	Circuit board failure	Please contact the maintenance department
The main lock key cannot be inserted in or removed	There are foreign objects in the key hole	Remove foreign objects in the key hole
	The key is not turned to the limit	Please reinsert in the correct way
The door cannot be opened when the electronic code lock has been opened	The handle is not turned to the limit	Please turn the handle to the limit
	Turn the handle for more than 7 seconds, the electronic lock has been reset	Enter the password again and turn the handle to the limit within 6 seconds
The alarm does not sound	The batteries are depleted	Please replace the batteries
	Battery polarity reversed	Insert the batteries in the correct way

18. After-sales Service

Dear users:

Thank you for purchasing our products. In order to ensure the interests of users, all users who purchase our products can contact the local dealer or special maintenance station by the proof of warranty card if the product fails due to quality problems.

Warranty notice:

1. If the product fails under normal use within one year from the date of purchase by the user, our company will provide free repair, parts replacement and other services according to the failure situation;
2. This warranty card and purchase invoice are the proofs that our company provide after-sales service to customers. Please fill in the following form on this card, and it will be valid only after the dealer affixes the official seal;
3. In one of the following cases, free repair service is not provided, and user will be charged for maintenance:
 - [1] The the validity period of the warranty has expired;
 - [2] Damage caused by improper use, maintenance or storage not in accordance with the requirements of the product instruction manual;
 - [3] Product failure or damage caused by force majeure;
 - [4] Wear parts or accessories.
 - [5] Damage caused by excessive screwing of the product during use.

This card comes together with the product, and one card for one machine. In order to ensure that you have full right to the free repair service provided by our company, please keep this card properly, and you can not get another copy if you lose it.

Purchase Date: ____ (mm/dd/yyyy)

Product Warranty Card

Commodity Information	Commodity Name		Factory Date		
	Commodity Model		Production Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Seller Name			Contact	
	Address			Phone	
	Sales Date			Invoice No.	
Maintenance Record	Fault Description	Maintenance Result	Customer Signature	Maintenance Person Signature	Date

Service Hotline for Nationwide Connected Guaranteed Repair: 400-185-0555



This page is cut off along the dotted line and kept by the dealer

Commodity Information	Commodity Name		Factory Date		
	Commodity Model		Production Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Seller Name			Contact	
	Address			Phone	
	Sales Date			Invoice No.	

Maintenance Record	Fault Description	Maintenance Result	Customer Signature	Maintenance Person Signature	Date

Product Code _____

No. _____

DELI GROUP CO., LTD.
Add: Deli Industrial Park, Ninghai,
Zhejiang
Service Hotline: 400-185-0555
[Http://www.nbdeli.com](http://www.nbdeli.com)
MADE IN CHINA



Reserved for
future use

Version: 3.0
Date: September of 2020