

# cecotec

**CUT-EAT 1800 BLACK**

Electric knife



Instruction manual

## INDEX

1. Parts and components
2. Before use
3. Operation
4. Cleaning and maintenance
5. Technical specifications
6. Disposal of old electrical appliances
7. Technical support and warranty

## SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

- Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
- The appliance is designed exclusively for private use and for the purpose that was intended.
- This appliance is not fit for commercial use. Do not use it outdoors.
- Keep it away from sources of heat, direct sunlight, humidity (never dip it into liquid) and sharp edges.
- Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable). If the appliance is not being used, remove the attached accessories.
- Do not operate the machine without supervision. If you should leave the workplace, always switch the machine off or remove the plug from the socket.
- Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
- This appliance is not intended to be operated by means of an external timer or a separate remote control.

- Do not twist, bend, strain, or damage the power cord in any way. Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the cord hang over the edge of the working surface or countertop.
- Do not try to repair the appliance on your own, contact the Technical Support Service of Cecotec.
- Be extremely careful when cutting frozen food or bones with the electric knife.
- Do not operate the knife for more than 5 minutes without a break.
- The appliance is not intended to be used by children under the age of 8.
- This appliance cannot be used by children aged 8 or less, persons with reduced physical, sensory or mental capabilities and lack of experience and knowledge.
- Children shall not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

## 1. PARTS AND COMPONENTS

Fig. 1

1. Cutting blade
2. Blade release button
3. Operation button 1
4. Operation button 2
5. Main body
6. Cord

Fig. 2

1. Special blade for bread
2. Special blade for bones
3. Special blade for boneless meat and frozen food

## 2. BEFORE USE

- Take the product out of the box and remove all packaging materials.
- Wipe all the parts with a moist cloth to remove all the dust that may have deposited on and in the device during transport.
- To clean the blades, only hold them as near to the ends as possible or by the plastic handling surfaces.

### **Warning:**

The cutting blades are extremely sharp. Handle with extreme care when using the appliance and when cleaning the blades. Before inserting or removing the blades, always remove the main plug.

## 3. OPERATION

1. Assemble the blades.
2. Insert the ends of the knife into the retainer on the main body.
3. Press the blades in the direction of the main body until the ends are locked in place. Check that they are firmly attached.
4. Plug the device to a power supply.
5. Press the operation button 1 and operation button 2 to turn the device on.

**Note:**

Do not exert too much pressure when cutting; allow the knife to do the cutting.

1. After use, remove the plug from the socket and take out the blades by pressing the blade release button.

**Warning:**

- Be extremely careful when cutting frozen food or bones with the electric knife.
- Do not operate the knife for more than 5 minutes without a break.

## 4. CLEANING AND MAINTENANCE

- Unplug the device from the power supply.
- Clean all the device's parts with water and soap. Be careful when handling the blades.
- Use a soft, dampened cloth to clean the product's surface.
- Do not immerse the main body in water.
- The blades are dishwasher safe. Make sure to completely dry them after washing them.

## 5. TECHNICAL SPECIFICATIONS

Product: Cut-Eat 1800 Black

Product reference: 03183

Power: 150 W

Voltage and frequency: 220 V, 50 Hz

Made in China | Designed in Spain

## 6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

## **7. TECHNICAL SUPPORT AND WARRANTY**

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

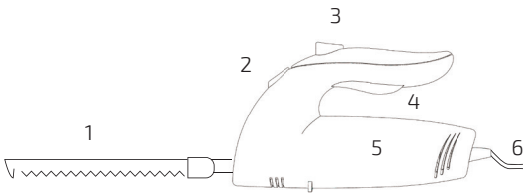


Fig./lmg./Abb./Afb./ Rys./Obr. 1

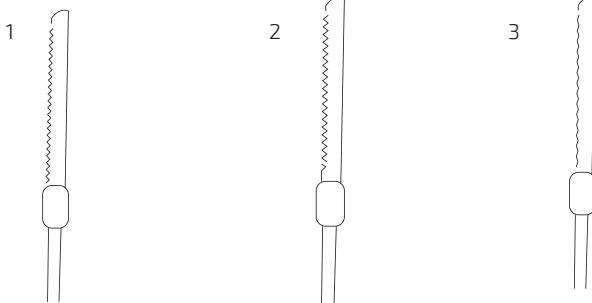


Fig./lmg./Abb./Afb./ Rys./Obr. 2



[www.cecotec.es](http://www.cecotec.es)

Grupo Cecotec Innovaciones S.L.  
C/ de la Pinadeta s/n, 46930  
Quart de Poblet, Valencia (Spain)

EA01210305