

cecotec

POWER TITANBLACK 1200 XL TOTALMIX

Batidora de mano/ Hand blender



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instrukcja obsługi
Návod k použití

INDEX

1. Parts and components	30
2. Before use	31
3. Operation	31
4. Cleaning and maintenance	35
5. Technical specifications	35
6. Disposal of old electrical appliances	35
7. Technical support service and warranty	36

SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

All safety instructions should be closely followed when using the appliance.

Make sure that the mains voltage matches the voltage stated on the rating label of the appliance.

Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.

Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.

Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec, in order to avoid any type of danger.

Do not use the product outdoors, close to electric plates, gas, flames or inside an oven.

Do not twist, bend, strain, or damage the power cord in any way. Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the power cord hang over the edge of table or countertop.

The blades inside the product are very sharp, handle them carefully to avoid any possible cut.

Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the outlet is grounded.

Do not plug the appliance into the power supply until it is fully assembled and make sure it is unplugged before disassembling the appliance or handling its blade.

Do not place hot ingredients inside the appliance.

This product is designed only for household use.

Do not use the blender stick for longer than 1 minute and do not blend hard food for longer than 10 seconds.

Do not introduce any utensil inside the product during operation in order to reduce risk of injuries to persons or damage to the product. Please handle it with care.

Take special care when handling the sharp cutting blades, emptying the container and also when cleaning the device.

This appliance is not intended to be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety, and understand the hazards involved.

Do not introduce any utensil inside the product during operation in order to reduce risk of injuries to persons or damage to the product.

The device may cause injury if misused.

The appliance must be at room temperature after each process.

Make sure to keep the measuring lid in its position when blending hot liquids or ingredients.

Be careful when pouring hot liquids into the device as it can be ejected out of the appliance due to a sudden steaming.

The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.

This appliance is not intended to be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety, and understand the hazards involved.

Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

Keep the appliance and its cord out of reach of children under the age of 8.

1. PARTS AND COMPONENTS

Fig. 0

Fix Plus System: Enables an easier assembly and disassembly of the blender and its attachments.

Main body (handle)

Fig. 1

1. Speed-control dial
2. Power button
3. Turbo button
4. Main housing

Fig. 2

5. Blade attachment

Fig. 3

6. Blending cup for blades or whisks
7. Mixing cup's lid

Fig. 4

8. Balloon whisk's attachment
9. Balloon whisk

Fig. 5

10. Potato masher
11. Blade

Fig. 6

12. Blending whisk attachment
13. Blending whisks

Food processor

Fig. 7

14. Pusher
15. Food processor lid/ hopper
16. Reversible shredding/slicing disc
17. Grinding blade
18. Hopper's lock ring
19. Spindle
20. Food processor container

Spiraliser

Fig. 8

21. Drive unit

22. Hopper

23. Exchangeable blades

2. BEFORE USE

Unpack the appliance and keep the original packaging and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly. Plastic wrapping can cause suffocation hazards for babies and young children. Make sure all packaging materials are out of reach of children.

Inspect all parts of the appliance for visual damage.

Unwind the power cord completely and inspect it for damage. Do not use the appliance if the juicer or its cord have been damaged or are not working properly. In case of damage, contact the official Technical Support Service of Cecotec for advice, repairs, or returns.

3. OPERATION

Hand blender

Fig. 0

Fig. 1

Fig. 2

Suitable for preparing baby food, soups, sauces, milkshakes and mayonnaise.

Beaker blending

Fig. 3

Do not fill the jar above 800 ml.

Blending in pots, pans and casseroles

Take the pot away from the heat source and allow it cool down in order to prevent the hand blender from overheating.

Place the handle inside the stick's shaft and then lock it by turning it until you hear a click sound.

Plug the device in. To avoid any splashing, place the blade inside the food before switching it on.

Hold the handle steadily, then press the power button.

Do not allow any liquid to cover the joint between the handle and the stick's shaft.

Move the blade slowly through the food, moving it upwards, downwards and in circles.

If the device gets jammed, unplug it before cleaning it.

After using the device, unplug it and disassemble it.

ENGLISH

Balloon whisk/double whisk

Fig. 4

Fig. 6

Approximate usage time: 15 sec

Suitable for whipping soft ingredients such as egg whites, cream, instant desserts, eggs and sugar.

Do not try to whisk harder mixtures as margarine as you may damage the balloon whisk.

Assemble the whisk wire with the whisk's attachment.

Fit the blender's handle inside the whisk attachment, then lock it by turning it.

Place the food in the container. Do not whisk more than 6 egg whites or 1000 ml of cream at the same time. Do not let any liquid get above the whisks.

Plug the device in and press the power button.

After use, unplug and disassemble it.

Food processor

Fig. 7

Suitable for chopping meat, cheese, vegetables, herbs, bread, biscuits and nuts.

Do not try to chop hard food such as coffee beans, ice cubes, chocolate ounces, etc. The blades might be damaged.

To install the motor, attach it to the gearbox.

How to attach the food processor's container, attachments and lid:

Place the food processor container on a countertop or a table, so that the surface is clean and stable.

Choose one of the following food processor attachments:

Grinding blade

Reversible shredding disc

Reversible slicing disc

You will find a shaft that can be used on all of the three food processor attachments.

How to use the reversible shredding disc:

Place the shaft in the centre of the food processor container. Take precautions when handling the shredding disc. Be careful not to cut yourself!

One of the shredding disc sides is for coarse shredding and the other for fine shredding. Use the side that suits your food the most. Align the hole in the centre of the disc with the shaft and make sure it is tightly attached by pushing downwards gently.

Place the food processor container's lid in place and make sure it is correctly aligned and locked into place.

How to use the reversible slicer disc:

Place the shaft in the centre of the food processor container. Handle the slicing disc with caution.

One of the reversible slicing disc side is for coarse slicing and the other for fine shredding. Use the side that suits your food the most. Attach the shaft with the centre of the disc and make sure it is tightly attached.

Place the food processor container's lid in place and make sure it is correctly aligned and locked into place.

How to use the grinding blade:

Hold carefully the grinding blade in one hand and, with the other hand, place the shaft through the centre of the grinding blade. Be careful not to cut yourself! The blade should be placed at the base of the spindle. The blade will be loose on the shaft but will be locked into place while operating.

Handle the grinding blades with caution as they are very sharp.

Place the grinding blade and the shaft in the centre of the food processor container.

Place the food processor container's lid in place and make sure it is correctly aligned and locked into place.

Once a side of the disc has been selected and all the afore mentioned parts have been assembled, you can start using the device.

Place the ingredients inside the food processor container or in the hopper, depending on how it is going to be used. Do not exceed the Max mark.

How to use the food processor:

Plug the device to power supply.

Choose the speed using the speed-control dial.

Press the power button to turn the appliance on and starting operating.

Introduce the food through the hopper using the pusher. Do not place your fingers nor any other objects inside the hopper. Use only the provided pusher.

When the food processor has finished, turn the motor off by releasing the power button and unplug the device.

Disassemble the handle from the gearbox and remove the container's lid.

Recommendations on how to use the blender on the food processor container:

Do not operate the blender when the food processor container is empty.

Cut the food into uniform-sized pieces to ensure quicker, even and more consistent results.

The blender cuts and blends foods and liquids rapidly, so they are easier to process. Do not forget to check on the food during operation.

ENGLISH

Spiraliser

Fig. 8

Fig. 8.1.

Insert the handle in the drive unit.

Take out the hopper and assemble the blade. Place the vegetables (e.g.: Carrots, cucumbers, potatoes...) inside the hopper. You can choose from different blades (thick, thin and ribbon-shaped). Then, place the hopper inside the container.

Press the power button to chop the vegetables spiral-shaped.

How to assemble the blade:

Take the hopper out.

Remove the fixing clamp.

Place the blade on the slot, then use the fixing clamp to fix the blade.

Potato masher

Fig. 5

Place the food inside a blending jar or a sufficiently large mixing container.

Plug the device to a power supply.

Select the settings on the adjustable mashing stick.

Select high speed on the motor's speed-control dial.

Place the mashing stick inside the ingredients and press the power button to connect the mashing stick.

Move the mashing stick gently through the ingredients until the desired texture is achieved. Turn the motor off by releasing the power button before taking the mashing stick out of the container and unplug the device.

Turbo button

Press this button while using the device to run the device at maximum power and speed.

Note: The device may overheat if this function is used for a long time.

Speed selector

Turn the speed selector to change the blades' speed and choose whichever suits you best.

Comparison chart

Food	Maximum amount (in grams)	Approximate time (in seconds)
Meat	300	10-15
Herbs	80	15
Nuts	250	15
Cheese	250	15

Bread	1 slice	15
Hardboiled eggs	6	5
Onions	300	10

These data are approximate and depend on many different factors.

4. CLEANING AND MAINTENANCE

Fig. 9

Disconnect the appliance from the power supply and allow it to cool down before cleaning.

After processing very salty foodstuff, rinse the blades with water immediately.

Use a soft, damp cloth to clean the product's motor and container lid.

The following parts are dishwasher safe: Cup, stick, balloon whisks, blending whisks, food processor container, grinding blade, reversible shredding disc, reversible slicing disc and spiraliser's container.

Do not use too much cleaning agent or descaler in your dishwasher

Do not immerse the appliance in water or other liquid.

Do not use abrasive scouring pads, powders or cleaners.

Please handle the blades carefully, they are very sharp.

After processing coloured food, the plastic parts of the appliance may lose colour. It is suggested to clean these parts with vegetable oil before washing them in the dishwasher.

5. TECHNICAL SPECIFICATIONS

Product reference: 04294

Product: Power TitanBlack 1200 XL TotalMix

Rated power: 1200 W

220-240 V~, 50 Hz

6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately. Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

7. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

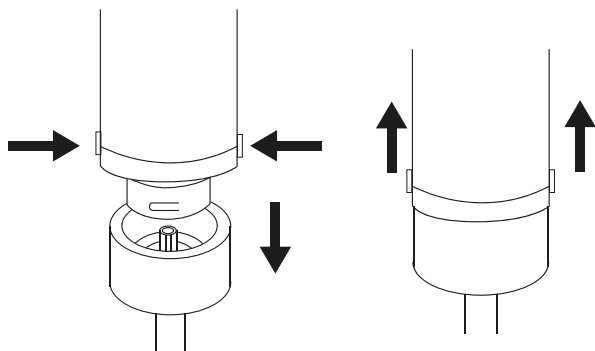 


Fig./Img./Abb./Afb./ Rys./Obr. 0

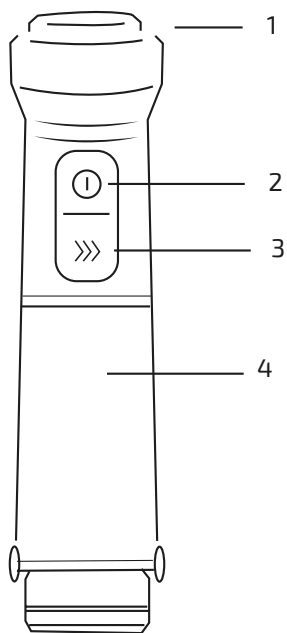 


Fig./Img./Abb./Afb./ Rys./Obr. 1

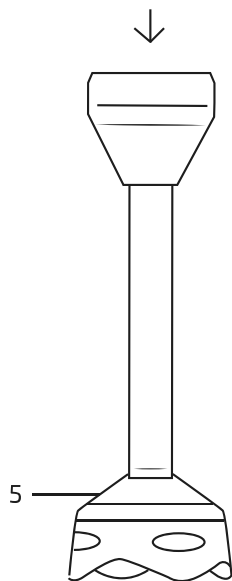 


Fig./Img./Abb./Afb./ Rys./Obr. 2

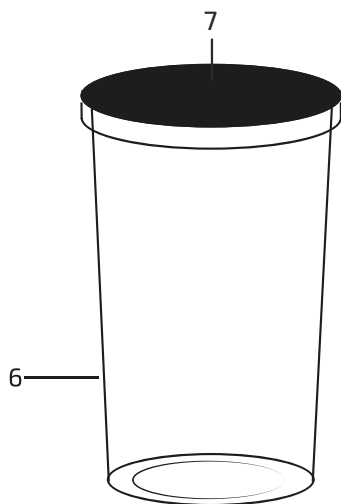 


Fig./Img./Abb./Afb./ Rys./Obr. 3

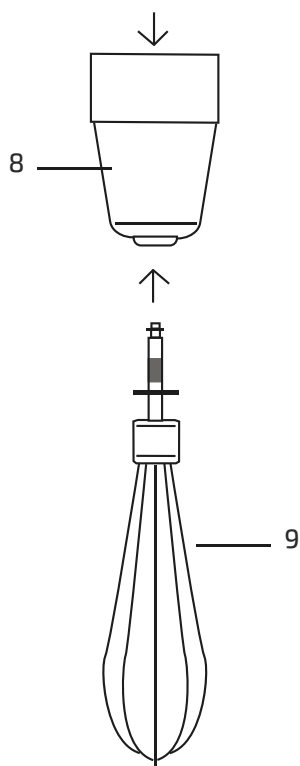 


Fig./Img./Abb./Afb./ Rys./Obr. 4

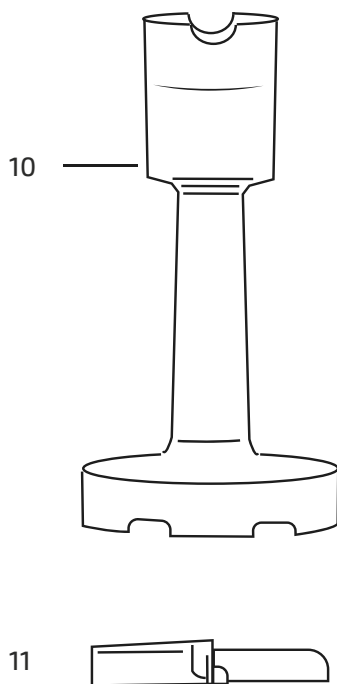 


Fig./Img./Abb./Afb./ Rys./Obr. 5

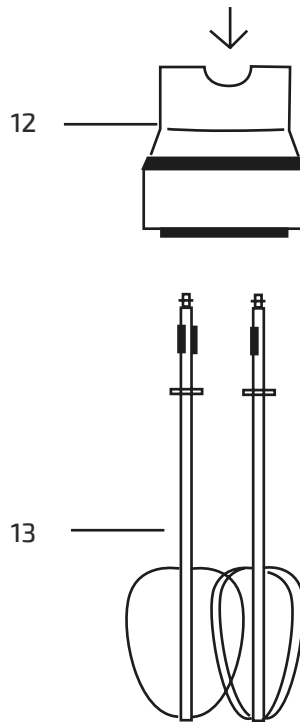 


Fig./Img./Abb./Afb./ Rys./Obr. 6

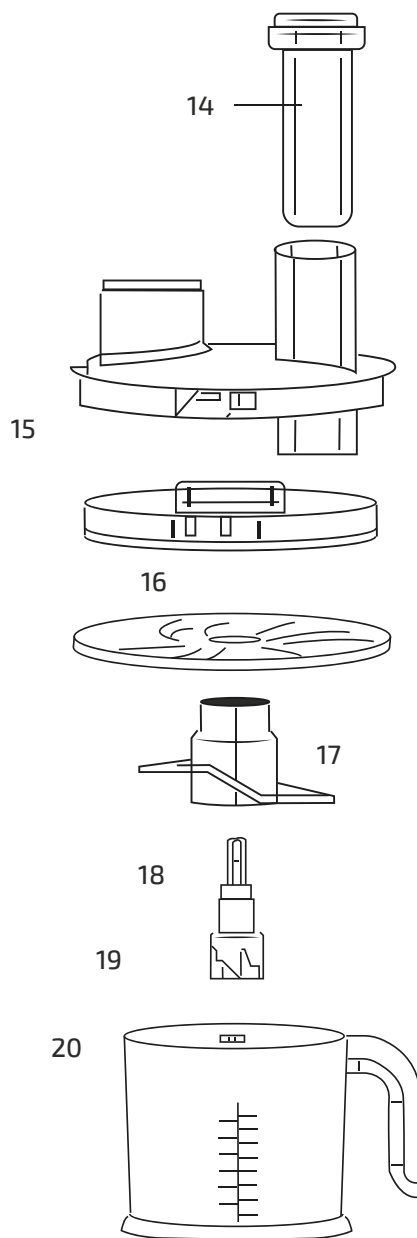 


Fig./Img./Abb./Afb./ Rys./Obr. 7

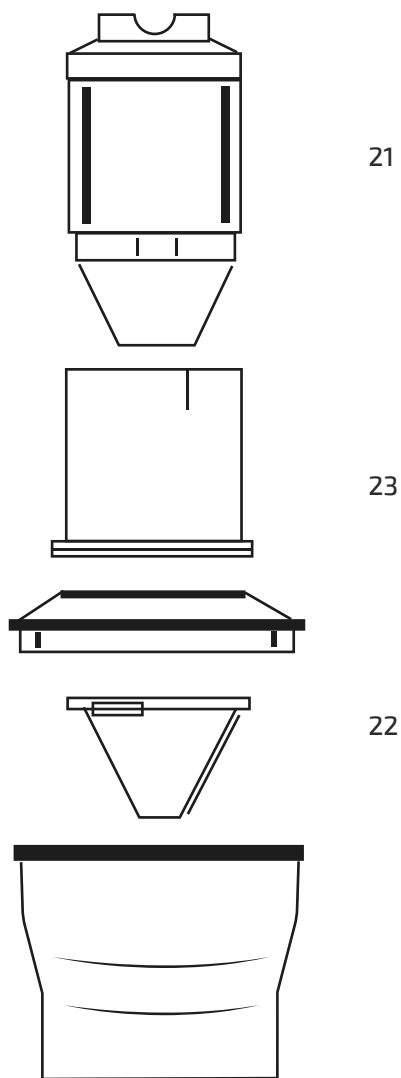 


Fig./Img./Abb./Afb./ Rys./Obr. 8

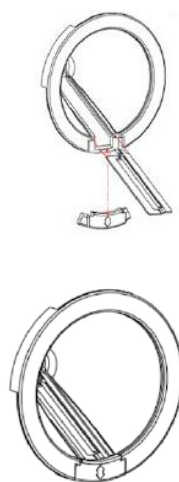 


Fig./Img./Abb./Afb./ Rys./Obr. 8.1

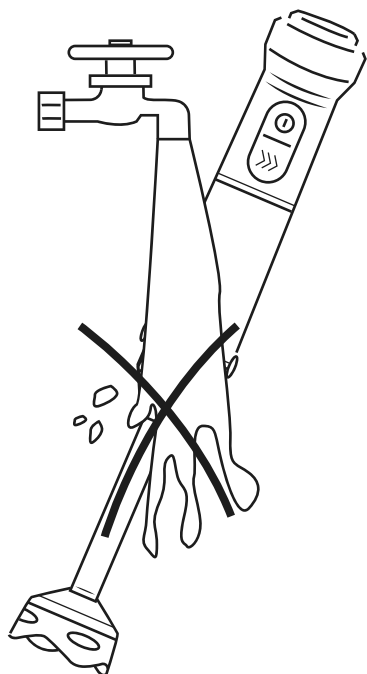 


Fig./Img./Abb./Afb./ Rys./Obr. 9

www.cecotec.es

Grupo Cecotec Innovaciones S.L.
C/ de la Pinadeta s/n, 46930
Quart de Poblet, Valencia (Spain)
PE01200710