

※NOTICE※

1. You can wear it while swimming or washing car, but don't press any buttons in water.
2. Do not wear it in broiling or freezing environment.
3. Do not wear it in puissant electric field, static or high cycle environment.
4. Do not drop it onto hard ground. The watch can bear normal shake but not hard shock. Any rough use or hard shock may cause damage.
5. Do not wear it in the places having gasoline, detergent, spraying agent, adhesion agent, oil paint, etc., their chemical action would damage sealing ring, watchcase and watch surface.
6. Rinse watch surface with soft cloth and clear water, don't use chemicals.
7. Some watches have silk-screen-printing patterns on the watchband, don't rinse them forcibly.
8. Do not stretch the watchband too tightly around your wrist. The tightness is reasonable when your finger can insert in.
9. Place the watch in dry environment when unused.
10. The coating of watch may fade and scuff under heavy pressure, long-term touch, abrasion or friction.
11. The watchband is made from resin, so
If you find any white powder on the watchband, wipe them off with cloth, the powder would not cause any hurt to your skin and clothes.
The resin-made watchband may aging, crack or break when bear sweat or damp. Wipe off the dirt or drip with soft cloth as soon as possible.
12. The watch is made of precision electronic parts, don't open the cover by yourself. If there is water smoke or drips inside the watchcase, ask approved specialist to disassembly and repair at once, or the inner parts may damage caused by corrosion.
13. Keep well the operation instruction and other attached files for necessary use in the future.

※STANDARD DISPLAY AND BUTTON FUNCTION※

Operate and adjust the watch according to the following indications on the screen.
SIGN INDICATION/BUTTON POSITION/FUNCTION



B (alarm icon) (alarm icon): ALARM ON

A AM : MORNING TIME

P PM : AFTERNOON TIME

L-LIGHT : COLD LIGHT BUTTON
(with 3-second delay function)

M-MODE : FUNCTION SELECT
BUTTON

S-START : DIGIT CARRY BUTTON
DATE DISPLAY BUTTON
STOPWATCH TIMEKEEPING
ON/OFF BUTTON

R-RESET : TIME ADJUST BUTTON
ALARM TIME DISPLAY
STOPWATCH RESET BUTTON


NOTE: Different models have different designs, but have same functions and operation ways.

※FUNCTION AND SPECIFICATION※

- Standard display: hour, minute, second, month, date, week
- Cold light function
- Stopwatch stage timekeeping function
- Alarm function
- Snooze function
- Hourly chime function
- Service temperature: 5°C-35°C
- Degree of accuracy at normal temperature: ± 60 seconds per month
- Battery: 1.5V high-capacity alkaline Zn-Mn button battery
- Life of battery: able to supply power for 18 months under the following situation
 - One illumination operation per day
 - One alarm operation per day

※ OPERATION ※

Press "M" button, the mode would change in turn as following:

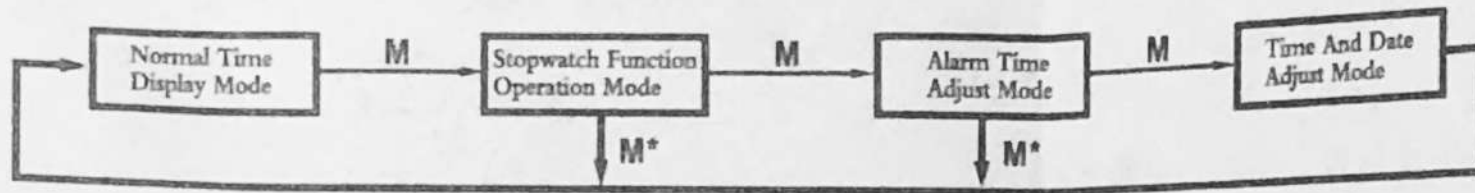

M*:When operating in "Stopwatch Function Operation Mode" or "Alarm Time Adjust Mode", if "S" or "R" button was pressed before, by pressing "M" button can back to "Normal Time Display Mode" directly.

- In "Normal Time Display Mode": press "S" button to display date; press "R" button to display alarm time.
- 12/24 Time System Display: In "Normal Time Display Mode", press "M" thrice to enter into "Time Adjust State", press "R" button twice to enter into "Hour Adjust State", then press "S" button until 12/24 Time System display on screen, and then press "M" once to back to "Normal Time Display Mode".
- Time Adjusting: In "Normal Time Display Mode", press "M" thrice to enter into "Time Adjust State" the second value blinks, press "S" to adjust second value; press "R" button, the minute value would blink, press "S" to adjust minute value; then press "R" and "S" respectively to adjust hour value, date, month, week; and then press "M" to back to normal mode.
- Alarm Time Setting: In "Normal Time Display Mode", press "M" button twice, then press "S" to set the hour value; press "R" once, then press "S" again to set the minute value; press "M" to back to normal mode.
- How to use stopwatch: In "Normal Time Display Mode", press "M" button once to enter into "Stopwatch Function Operation Mode", press "S" button to start timekeeping, press "S" again to stop timekeeping, the count value would display on the screen; Press "R" button to reset, press "M" button to back to "Normal Time Display Mode".
- How to on/off Alarm, Hourly Chime function: hold the "R" button, then press "S" to on/off Alarm Function; when "Alarm On", the signal would display on the screen, when the alarm ringing, press "S" to stop ringing, it would ring again after 4-5 minutes, press "R" to stop again-ringing. Hold the "R" button, then press "M" to on/off Hourly Chime Function, when Hourly Chime On, the week would display on screen.

- **Cold Light Lamp:** press “L” button to turn on the cold light with 3-second time delay. Note: long-term use of cold light would be power-consuming.