## Aoka

# USER MANUAL PROJECTOR



Please read this user's guide carefully before operating the projector and save this guide for future use.

## **Precautions for Use**

Follow these safety instructions and read these helpful tips before setting up and using the projector.

## **Important Safety Instructions**



Do not disassemble the projector. If needed, please contact your dealer for repair/replacement.



Do not use the different power source, it may result in fire or electric shock. Please use the indicated type of power source.



Do not look into the lens when the projector is operating. The bright light may damage your eyes.



Do not use the projector near water or sources of heat.



Place the projector on an even surface or stable stand. If the projector is mounted on a ceiling, it should be installed by qualified mounting hardware which designed for use with this projector.




Unplug the projector after powering down.




In order to maintain the performance and reliability of the projector, please leave at least 30CM between the projector and the wall.

## **Helpful Tips**


For incredible clarity and optimum results, operating the projector in a dark environment is recommended.

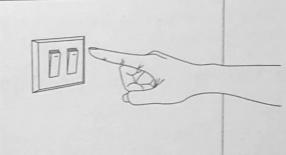

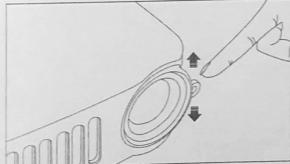

You may adjust the focus ring simultaneously until to get crystal clear images.

Please understand that the projector makes noise for heat dissipation during working. Nevertheless, it will not affect watching experiences when connected to an audio device.

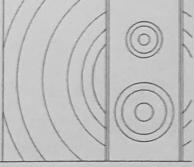






Projector is ideal for home entertainment, such as videos watching, photos viewing and games playing etc. Please be advised that the projector is not for business data presentation.



If there is no sound when playing videos, you may check whether these videos are equipped with Dolby technologies. The projector cannot support Dolby Vision for the present, but you can connect projector to a computer/laptop for videos watching instead.

## **Product Box Contents**

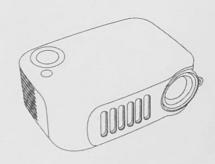





Remote control



Power cord





Instruction manual

02 03

## **Projector Part Locations**


## Front/Top

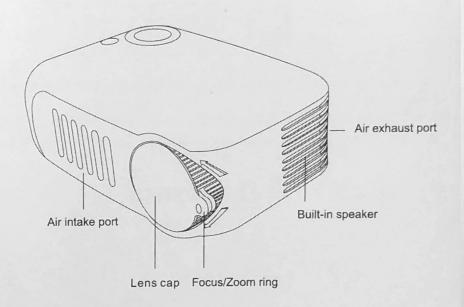


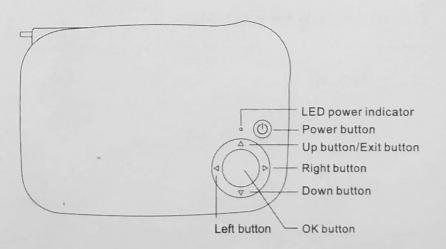

#### Rear / Bottom

- 1. Audio jack
- 2.5V-IN port
- 3.HDMI port
- 4.USB port
- 5.IR receiver
- 6.TF card slot
- 7.DC power input

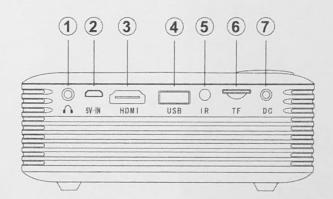


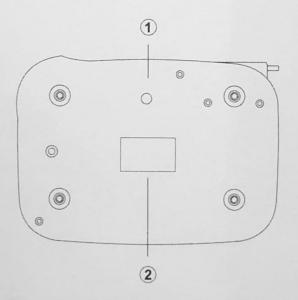

- 1. Projector mount hole Fix with M6\*6mm
- 2. Label

04

#### **Remote Control**

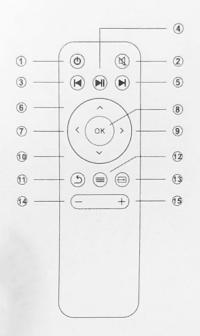

- 1.Power
- 2.Mute
- 3. Previous
- 4.Play/Pause
- 5.Next
- 6.UP
- 7.Left
- 8.OK
- 9.Right
- 10.Down
- 11.Return
- 12.Menu
- 13. Signal Source
- 14.Vol-
- 15.Vol+


O	turns the projector on or off	=	accesses projector menu system
M	turns off sound	5	cancels/exits functions
^	selects upward movement	=	selects of the input soure
<	selects leftward movement	-	adjusts speaker volume
>	selects rightward movement	+	adjusts speaker volume
~	selects downward movement	M	selects previous Program
ОК	selects and confirms options	M	selects next Program

## **Basic Projector Operations**

Basic operations provided help you to get started quickly.


#### Power on/off the Projector

· Power on the projector

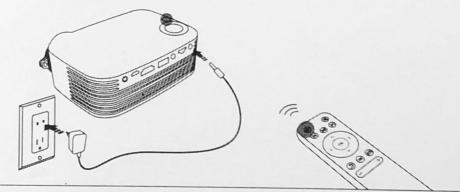

Indicator light will on after plugging in the power cord. Then press the Power button on the rear of projector or on the remote control, it enters into multimedia interfacewithin 2 to 5 seconds.

· Power off the projector

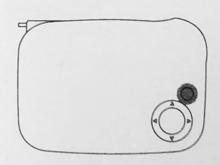




Press the Power button on the rear of Projector or on the remote control, the projector will shut off.


## **Projector Adjustment**

Except setting suitable throw distance, you can adjust keystone ring and focus/zoom ring manually before projecting your images or videos:

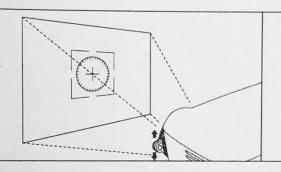


Rotate the focus ring to adjust the clarity of the projected image until it reaches to crystal clear.

#### **Introduction to Ports**

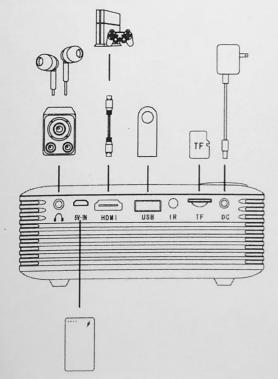


Insert the USB/micro SD card into the accrdingly slot trefer to the picture as below.

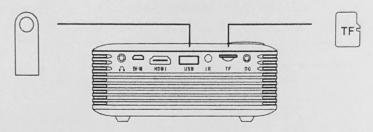



Choose the contents which you need to display: Movie, Music, Photo and Text.

Choose the file which you want to display, press **OK** display or stop.

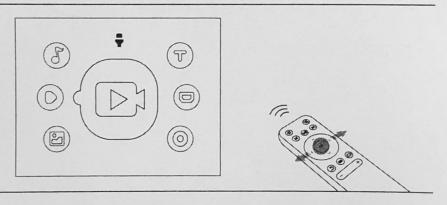


### Connecting to a device

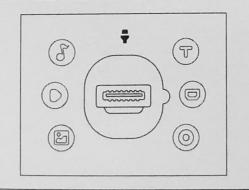


 


#### **Projector Menu Settings**

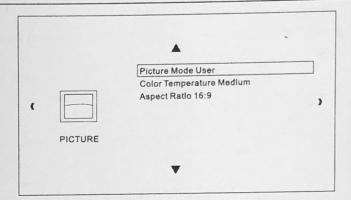


 Press the Menu button on the remote control to access to the menu interface.
The menu interface allows you to set Picture, Sound, Time and Option.
Choose the feature you want to set by pressing the Left/Right button on the remote control or on the control panel

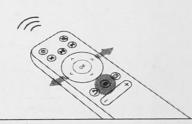

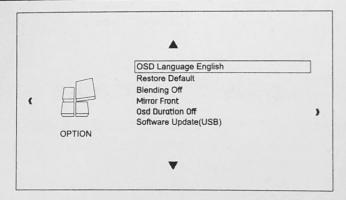

 For detailed settings, press the UP/Down button to view options listed under Picture, Sound, Time and Option. Then press the Ok button to select options.
(Some of these options have a submenu, press the Menu button to exit a submenu.)

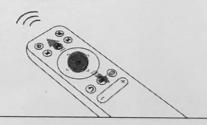


## **Technical Specifications**

To know product better and use projector properly, please read the table below:

Display Type	Single LCD Display Panel
Native Resolution	320*240 Pixels
Aspect Ratio	4:3/16:9
Projection Size	14~80 inches
Projection Distances	0.5~3 meter
Interface Type	Audio*1,5V IN*1,HDMI*1,USB*1,Mirco SD*1,DC*1
Video Support	AVI/MP4/MKV/M0V
Audio Support	MP3/WMA
Image Support	JPG/BMP/PNG
Text Support	TXT
Speaker	Built-in 1 x 4Ω3wWatt Speaker, Variable Audio-Out
Power Consumption	15 ±3W
Dimension	13.5*9.7*5cm
Annex	Power adapter, Remote Control, User Manual

## Power Supply By Portable Charger

Support power supply by portable charger with 5V/2A output Connect projector Micro USB port with portable charger 5V/2A out port via USB cable to charge the projector.

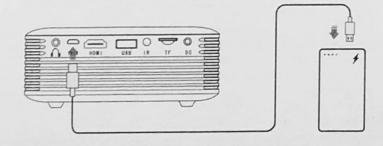

11

10

## **Troubleshooting**

As a high-tech product, the projector combined with optical, mechanical and electronic components and equipped with a protective and complicated circuit inside. To quickly solve your problems and to prevent improper using and settings, please follow operations below. If your problems or enquiries cannot be eliminated after reading the table, please do not hesitate to contact us.

Warm prompt: Please use FAT32 format USB flash disk or TF card. If the projector cannot recognize your USB flash disk or TF card, please convert the USB flash disk and TF card to FAT32 format before operation

Problem Description	Troubleshooting		
The projector won't turn on	Check if the power source is the indicated one and the power cord is connected correctly. Make sure the power cord is not defective.		
Lamp does not work after turning on the projector	Ensure power cord and power source are connected correctly. If the lamp gets damages, please contac us to replace the lamp		
No images	Check whether the format and resolution of images are supported by the projector.		
No response from remote control	Check whether batteries of the remote control run out or are installed correctly. Make sure there is no obstacle between the remote control and IR receiver. Always use the remote control within its effective distance (4m).		
Obscure/Blurred images	Please rotate the focus ring, adjust the keystone and throw distance until the projected image is clear. Ensure the lens is clean.		
Abnormal sound	Ensure the audio device is connected correctly and function well. Check if the mute or minimum volume mode is set.		

301 Xuxiake Ave. Ninghai County Ningbo 315600 China Made in China

