 


Aoka

USER MANUAL PROJECTOR

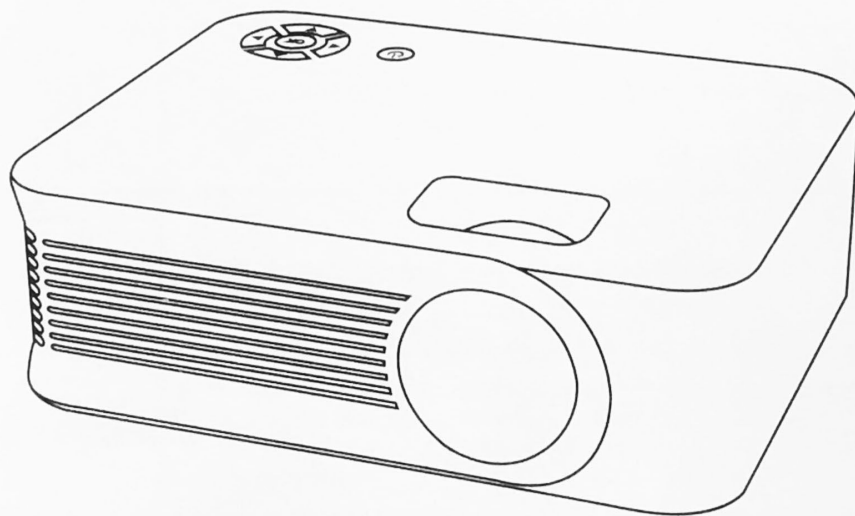

VS6002

Please read this user's guide carefully before operating the projector and save this guide for future use.

Precautions for Use


Follow these safety instructions and read these helpful tips before setting up and using the projector.

Important Safety Instructions

	Do not disassemble the projector. If needed, please contact your dealer for repair/replacement.
	Do not use the different power source, it may result in fire or electric shock. Please use the indicated type of power source.
	Do not look into the lens when the projector is operating. The bright light may damage your eyes.
	Do not use the projector near water or sources of heat.
	Place the projector on an even surface or stable stand. If the projector is mounted on a ceiling, it should be installed by qualified mounting hardware which designed for use with this projector.
	Unplug the projector after powering down.
	In order to maintain the performance and reliability of the projector, please leave at least 30CM between the projector and the wall.



Helpful Tips

 For incredible clarity and optimum results, operating the projector in a dark environment is recommended.

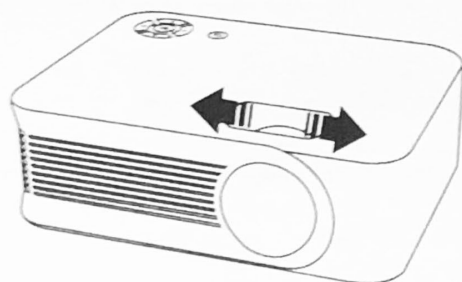

You can slide the focus wheel left and right until you get a clear image.

 
 
Please understand that the projector makes noise for heat dissipation during working. Nevertheless, it will not affect watching experiences when connected to an audio device.

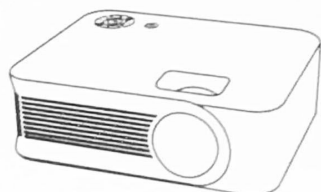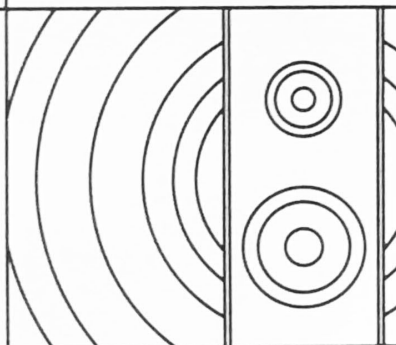


Projector is ideal for home entertainment, such as videos watching, photos viewing and games playing etc. Please be advised that the projector is not for business data presentation.

Easy to use Setup and Operation Features

  - User-friendly operating system

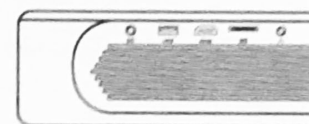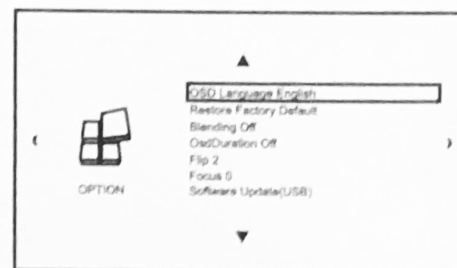

Product Box Contents

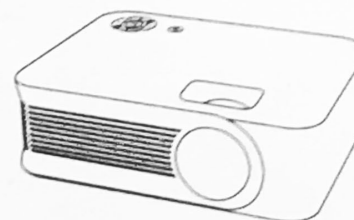 

Projector



Remote control



 
Instruction manual




Power cord

Rear / Bottom


- 1.DC power input
- 2.USB port
- 3.HDMI port
- 4. Micro SD
- 5. Audio jack

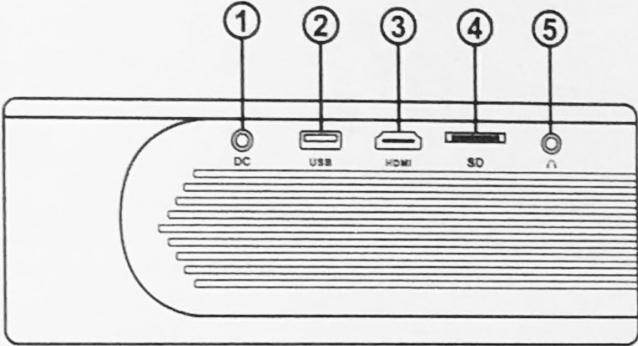

 - 1.Power
- 2.UP/Exit
- 3.Right
- 4.Down
- 5.Left
- 6.OK

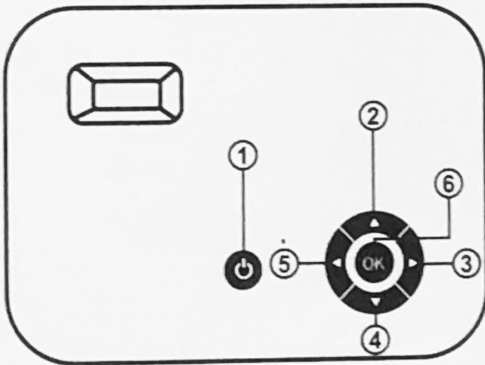

Remote Control

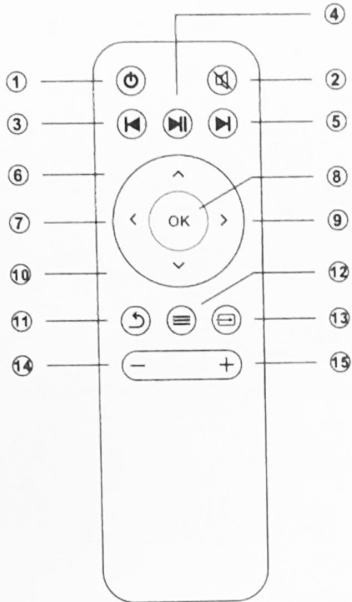 


- 1.Power
- 2.Mute
- 3.Previous
- 4.Play/Pause
- 5.Next
- 6.UP
- 7.Left
- 8.OK
- 9.Right
- 10.Down
- 11.Return
- 12.Menu
- 13.Signal Source
- 14.Vol-
- 15.Vol+

	turns the projector on or off		accesses projector menu system
	turns off sound		cancels/exits functions
	selects upward movement		selects of the input source
	selects leftward movement		adjusts speaker volume
	selects rightward movement		adjusts speaker volume
	selects downward movement		selects previous Program
	selects and confirms options		selects next Program


Projector Adjustment

 Except setting suitable throw distance, you can adjust focus /zoom ring manually before projecting your images or videos:

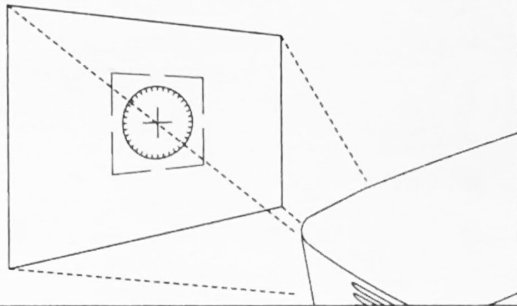

Rotate the focus ring to adjust the clarity of the projected image until it reaches to crystal clear.

 Introduction to Ports

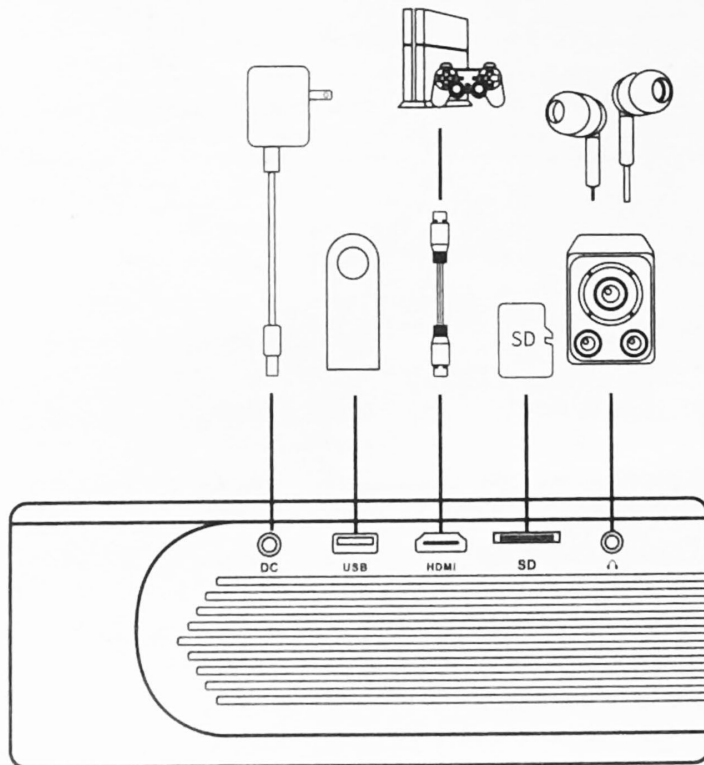


Basic Projector Operations

Basic operations provided help you to get started quickly.


Power on/off the Projector

 - Power on the projector

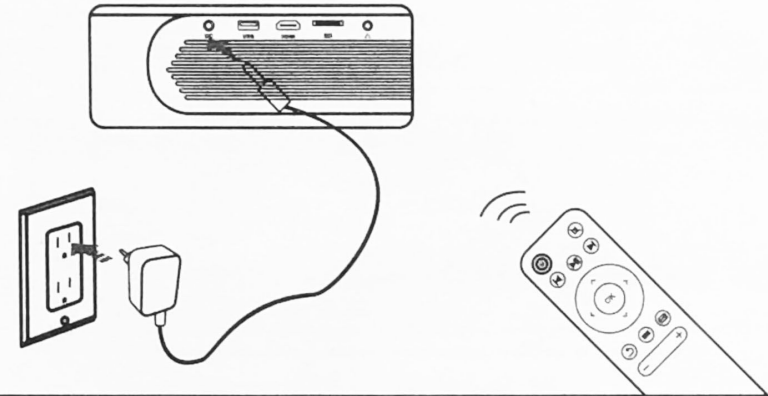


Indicator light will on after plugging in the power cord. Then press the Power button on the projector or on the remote control, it enters into multimedia interface within 2 to 5 seconds.

 - Power off the projector

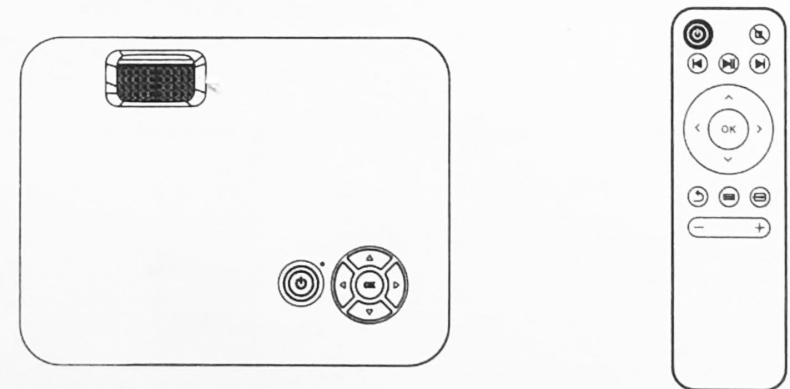


Press the Power button on the Projector or on the remote control, the projector will shut off.

 
Connecting to a device (Normal version)

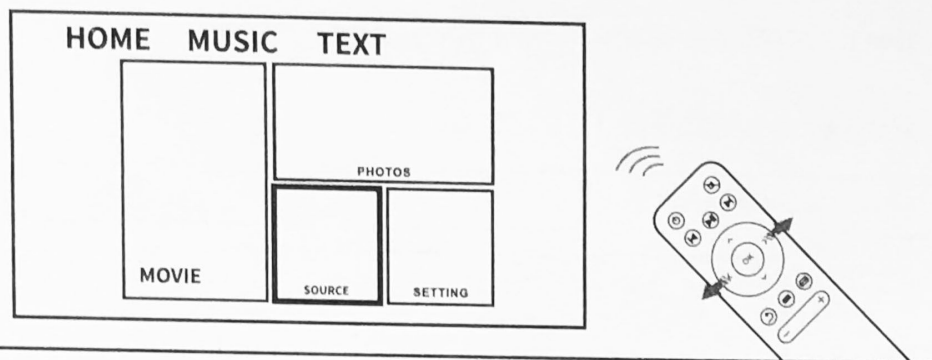

Projector Menu Settings

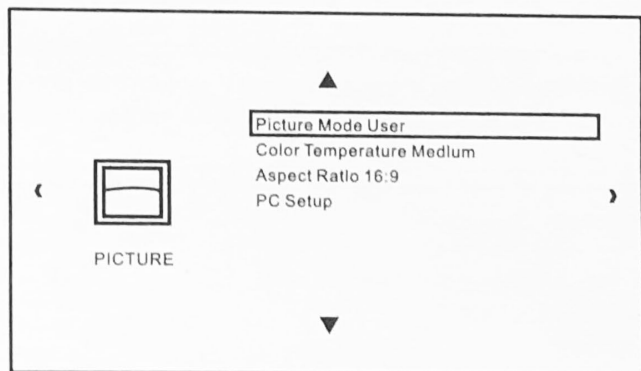 


 - Press the Menu button on the remote control to access to the menu interface. The menu interface allows you to set Picture, Sound, Time and Option. Choose the feature you want to set by pressing the Left/Right button on the remote control or on the control panel

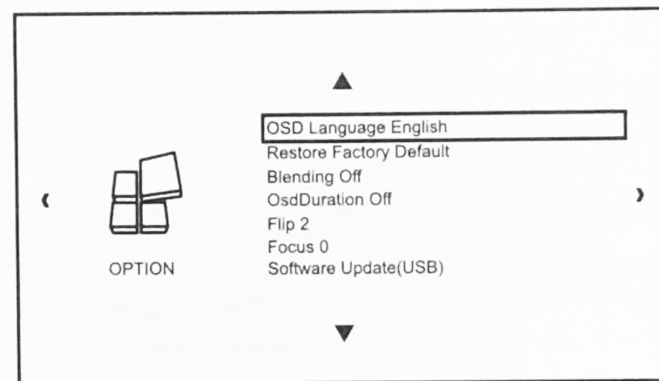


- For detailed settings, press the UP/Down button to view options listed under Picture, Sound, Time and Option. Then press the Ok button to select options. (Some of these options have a submenu, press the Menu button to exit a submenu.)

 Projector Cleaning and Maintenance

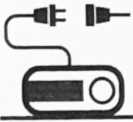	For optimum watching experiences and longer lifetime, please clean the projector periodically.
	For projector maintenance, please seek help from or under the guidance of specified persons.
	If it is necessary to replace any parts of the projector, please feel free to contact the dealer or qualified customer service team.
	Before cleaning and maintaining the projector, please turn off the projector and unplug the power cord.

 Projector Cleaning

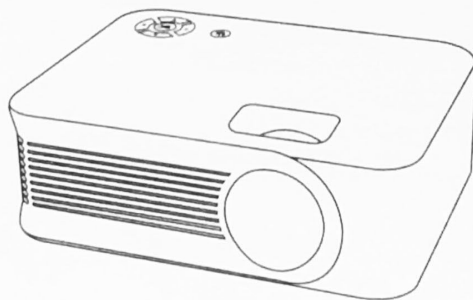


Always keep the projector clean to avoid affecting images quality and ventilation system during working caused by dust, dirt and smudge.






Cleaning the Vents

 Use a soft brush or a special designed small vacuum to remove the dust.

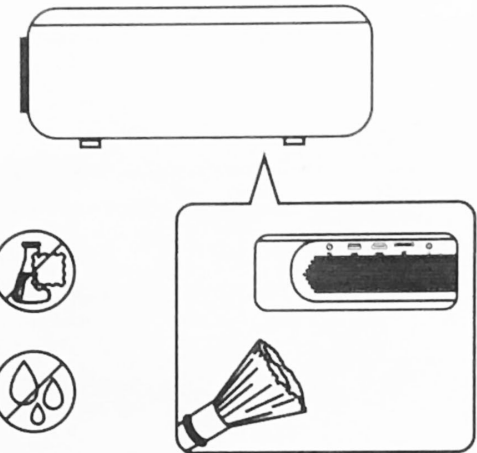

- Note: For cleaning process, do Not spray any liquid (included water) directly on any parts of the projector. Do Not use the chemical liquid to clean the projector which will damage the projector.

   Batteries Replacement of the Remote Co

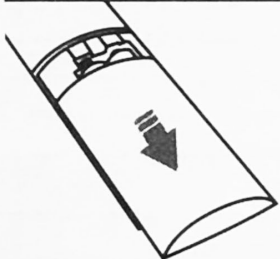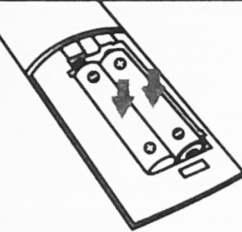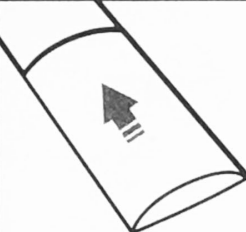		
1. Open battery cover of the remote control;	2. Insert batteries with the + and – ends as the indicators on the battery box showed;	3. Close battery cover of the remote control properly.

Projector Maintenance

For this part, we only offer the basic maintaining suggestions. If you have any further requirements (replacement or repair), please contact the dealer or qualified customer service team.

Technical Specifications

To know product better and use projector properly, please read the table below:

Imaging Technology	LCD
Native Resolution	854 x 480 pixels
Maximum Supported Resolution	1920 x 1080 pixels
Light	LED
Projection Ratio	1.67:1
Aspect Ratio	16:9/4:3
Interface	1 x USB Ports
	1 x Micro SD card slot
	1 x HDMI Port
	1 x Audio Jack
	1 x DC power input
Supported Video Formats	AVI, MP4, MKV, MOV
Supported Audio Formats	WMA, MP3
Supported Image Formats	JPG /BMP/PNG
Supported File Format	TXT
Product Size	160*120*55mm